

HEATING CHARGING CAHRT FOR HPPH 8350

R-410A

W A T E R	C	10	11.1	12.2	13.3	14.4	15.6	16.7	17.8	18.9	20	21.1	22.2	23.3	24.4	25.6	26.7	27.8	28.9	30	31.1	32.2	33.3	34.4	35.6	36.7	37.8	38.9	40
	F	50	52	54	56	58	60	62	64	66	68	70	72	74	76	78	80	82	84	86	88	90	92	94	96	98	100	102	104
		DISCHAGE PRESSURE (psig)																											
S U C T I O N P R E S S U R E (p s i g)	170	248	257	261	268	275	282	287	292	297	302	307	322	337	352	367	352	362	373	384	395	405	415	426	436	446	456	461	466
	167.5		257	264	271	277	284	289	294	300	305	310	325	340	355	370	354	365	376	386	397	408	418	428	439	449	459	464	469
	165	253	260	267	273	280	287	292	297	302	307	313	328	342	357	372	357	368	378	389	400	411	421	431	441	451	462	467	472
	162.5	256	262	269	276	283	290	295	300	305	310	315	330	345	360	375	360	370	381	392	403	413	424	434	444	454	464	469	474
	160	258	265	272	279	286	292	297	303	308	313	318	333	348	363	378	362	373	384	395	405	416	426	437	447	457	467	472	477
	157.5	261	268	275	281	288	295	300	305	310	316	321	336	351	366	381	365	376	387	397	408	419	429	439	449	460	470	475	480
	155	264	271	277	284	291	298	303	308	313	318	323	338	353	368	383	368	379	389	400	411	422	432	442	452	462	473	477	482
	152.5	266	273	280	287	294	301	306	311	316	321	326	341	356	371	386	371	381	392	403	413	424	434	445	455	465	475	480	485
	150	269	276	283	290	296	303	308	313	319	324	329	344	359	374	389	373	384	395	405	416	427	437	447	458	468	478	483	488
	147.5	272	279	286	292	299	306	311	316	321	326	332	346	361	376	391	376	387	397	408	419	430	440	450	460	470	481	486	491
	145	275	281	288	295	302	309	314	319	324	329	334	349	364	379	394	379	389	400	411	422	432	443	453	463	473	483	488	493
	142.5	277	284	291	298	305	311	316	322	327	332	337	352	367	382	397	381	392	403	414	424	435	445	455	466	476	486	491	496
	140	280	287	294	300	307	314	319	324	329	335	340	355	370	385	399	384	395	406	416	427	438	448	458	468	479	489	494	499
	137.5	283	290	296	303	310	317	322	327	332	337	342	357	372	387	402	387	398	408	419	430	440	451	461	471	481	491	496	
	135	285	292	299	306	313	319	325	330	335	340	345	360	375	390	405	389	400	411	422	432	443	453	464	474	484	494	499	
	132.5	288	295	302	309	315	322	327	332	338	343	348	363	378	393	408	392	403	414	424	435	446	456	466	476	487	497		
	130	291	298	304	311	318	325	330	335	340	345	350	365	380	395	410	395	406	416	427	438	449	459	469	479	489	500		
	127.5	294	300	307	314	321	328	333	338	343	348	353	368	383	398	413	398	408	419	430	441	451	462	472	482	492			
	125	296	303	310	317	323	330	335	341	346	351	356	371	386	401	416	400	411	422	433	443	454	464	474	485	495			
	122.5	299	306	313	319	326	333	338	343	348	353	359	374	389	403	418	403	414	425	435	446	457	467	477	487	498			
120	302	309	315	322	329	336	341	346	351	356	361	376	391	406	421	406	416	427	438	449	459	470	480	490	500				
117.5	304	311	318	325	332	338	344	349	354	359	364	379	394	409	424	408	419	430	441	451	462	472	483	493					
115	307	314	321	328	334	341	346	351	356	362	367	382	397	412	427	411	422	433	443	454	465	475	485	495					
112.5	310	317	323	330	337	344	349	354	359	364	369	384	399	414	429	414	425	435	446	457	468	478	488	498					
110	313	319	326	333	340	347	352	357	362	367	372	387	402	417	432	417	427	438	449	460	470	480	491						
107.5	315	322	329	336	342	349	354	359	365	370	375	390	405	420	435	419	430	441	451	462	473	483	493						
105	318	325	332	338	345	352	357	362	367	372	378	393	407	422	437	422	433	443	454	465	476	486	496						
102.5	321	327	334	341	348	355	360	365	370	375	380	395	410	425	440	425	435	446	457	468	478	489	499						
100	323	330	337	344	351	357	362	368	373	378	383	398	413	428	443	427	438	449	460	470	481	491							

TO USE CHARGING CHART- FIND SUCTION PRESSURE ON THE LEFT HAND SIDE COLUMN ,AND FIND THE WATER TEMPERATURE ON THE TOP ROW. USING THE THE SUCTION PRESSURE AND THE WATER TEMPERATURE, INTERSECT THE LINES TO THE DISCHARGE PRESSURE.