

# Commercial High Efficiency Water Heater


## USE & CARE MANUAL

WITH INSTALLATION INSTRUCTIONS FOR THE CONTRACTOR

For use with the following models:

GHE80ES/THE80ES

GHE100ES/THE100ES

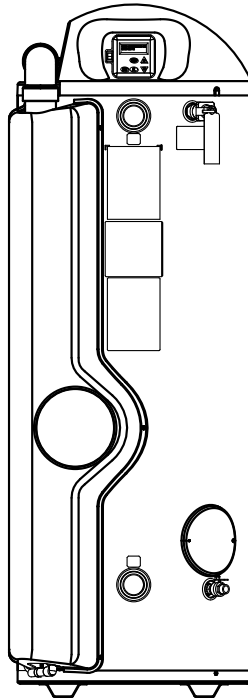

Recognize this symbol as an Indication of Important Safety Information!



Do Not Destroy this Manual. Please read carefully and keep in a safe place for Future Reference.



**NOTICE:** This water heater is designed for use in a commercial application and the installation and maintenance of it should be performed by a qualified, licensed service personnel. If the foregoing assumption is not appropriate, then we recommend that you obtain and retain our Residential Use & Care Manual.



**CALIFORNIA PROPOSITION 65 WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



**WARNING:** If the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

### FOR YOUR SAFETY!

- Do not store or use gasoline or other flammable vapors or liquids or other combustible materials in the vicinity of this or any other appliance. To do so may result in an explosion or fire.

#### – WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.

- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Do not return to your building until authorized by the gas supplier or fire department.
- Improper installation, adjustment, alteration, service or maintenance can cause injury, property damage or death. Refer to this manual. Installation and service must be performed by a qualified installer, service agency or the gas supplier.

## TABLE OF CONTENTS

### Safety Information

Safety Precautions ..... 3-4

### Introduction

Local Installation Regulations ..... 5

Water Heater Location ..... 5

### Installation Instructions

Inspect Shipment ..... 5

Water Supply Connections ..... 6

Gas Supply..... 6

Wiring ..... 7

Typical Installation..... 8

### Vent Installation

Information for Pipe & Fittings..... 9

General Venting Information ..... 9

Joining Pipe and Fittings ..... 9-10

Vent Length Information..... 11

Vent Terminal Precautions ..... 12-15

Horizontal Vent Installation..... 16-18

Vertical Vent Installation ..... 19-20

Concentric Vent Installation..... 21-23

Installation Checklist..... 24

### Operating Instructions

Lighting Instructions..... 25

Water Temperature ..... 26

Emergency Shut Down..... 26

User Interface .....27-28

### Care and Cleaning

Pressure Switch Inspection..... 29

Venting Inspection..... 29

Routine Maintenance ..... 29

Anode Inspection ..... 29

Seasonal Operation ..... 29

Venting System ..... 29

### Troubleshooting

Before You Call For Service..... 30-31

LockOut Codes ..... 32

### Customer Service

Parts List ..... 33

Wiring Diagrams ..... 34

How to Obtain Service Assistance ..... 35

## READ THE SAFETY INFORMATION

Your safety and the safety of others are very important. There are many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. Recognize this symbol as an indication of Important Safety Information! This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER”, “WARNING”, “CAUTION” or “NOTICE”.

These words mean:

### DANGER

An imminently hazardous situation that will result in death or serious injury.

### WARNING

A potentially hazardous situation that could result in death or serious injury and/or damage to property.

### CAUTION

A potentially hazardous situation that may result in minor or moderate injury.

### Notice:

Attention is called to observe a specified procedure or maintain a specific condition.



# General Safety Precautions

To meet commercial water use needs, the temperature on this water heater is adjustable up to 185°F (85° C). However, water temperatures over 125°F (52° C) can cause severe burns instantly or death from scalds. This is the preferred starting point for setting the control for supplying general purpose hot water.

Safety and energy conservation are factors to be considered when setting the water temperature. The most energy efficient operation will result when the temperature setting is the lowest that satisfies the needs consistent with the application.

The following chart details the relationship of water temperature and time with regard to scald injury and may be used as a guide in determining the safest water temperature for your applications.

TIME / TEMPERATURE RELATIONSHIPS IN SCALDS


Temperature	Time to Produce Serious Burn
120° F (49°C)	More than 5 minutes
125° F (52°C)	1 <sup>1</sup> / <sub>2</sub> to 2 minutes
130° F (54°C)	About 30 seconds
135° F (57°C)	About 10 seconds
140° F (60°C)	Less than 5 seconds
145° F (63°C)	Less than 3 seconds
150° F (66°C)	About 1 <sup>1</sup> / <sub>2</sub> seconds
155° F (68°C)	About 1 second

Table courtesy of Shriners Burn Institute

The temperature of the water in the heater can be regulated by setting the temperature on the display (see pages 27 & 28). To comply with safety regulations the temperature was set at 120°F (49°C) before water heater was shipped from the factory. The illustration information on pages 27 & 28 shows the Display and how to adjust the water temperature.


## DANGER

Hotter water increases the Potential for Hot Water SCALDS.

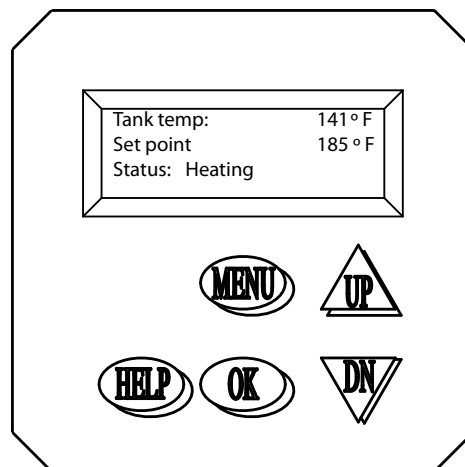

See Section "User Interface" (pages 27 & 28) for setting the temperature.

**DANGER**

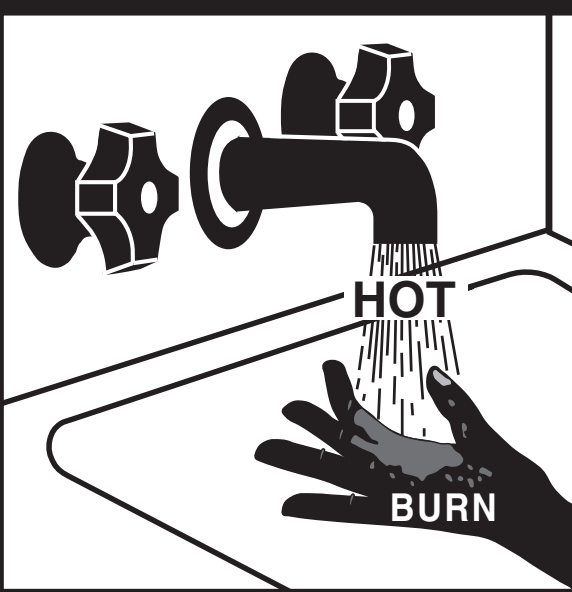

**Water temperature over 125°F can cause severe burns instantly or death from scalds.**

**Children, disabled and elderly are at highest risk of being scalded.**

**See instruction manual before setting temperature at water heater.**

**Feel water before bathing or showering.**

**Temperature limiting valves are available, see manual.**

Maximum water temperatures occur just after burner has shut off. To find hot water temperature being delivered, turn on a hot water faucet and place a thermometer in the hot water stream and read the thermometer.

**Notice: Mixing valves are recommended for reducing point of use water temperature by mixing hot and cold water in branch water lines. It is recommended that a mixing valve complying with the Standard for Temperature Actuated Mixing Valves for Hot Water Distribution Systems, ASSE 1017 be installed. See pages 26 for more details and contact a licensed plumber or the local plumbing authority for further information.**



## General Safety Precautions

Be sure to read and understand the entire Use & Care Manual before attempting to install or operate this water heater. Pay particular attention to the following General Safety Precautions. Failure to follow these warnings could result in a fire or explosion, causing property damage, bodily injury or death. Should you have any problems understanding the instructions in this manual, STOP, and get help from a qualified installer or service technician or the gas supplier.

### WARNING


Gasoline, as well as other flammable materials and liquids (adhesives, solvents, etc.) and the vapors they produce, are extremely dangerous. **DO NOT** handle, use or store gasoline or other flammable or combustible materials anywhere near or in the vicinity of a water heater. Be sure to read and follow the warning label pictured below and other labels on the water heater, as well as the warnings printed in this manual. Failure to do so can result in property damage, bodily injury, or death.

### DANGER

Failure to properly vent the water heater to the outdoors as outlined in the Venting Section of this manual can result in unsafe operation of the water heater. To avoid the risk of fire, explosion, or asphyxiation from carbon monoxide, never operate this water heater unless it is properly vented and has an adequate air supply for proper operation. Be sure to inspect the vent system for proper installation at initial start-up and at least annually thereafter. Refer to the Maintenance section of this manual for more information regarding vent system inspections.

### WARNING

Gasoline, as well as other flammable materials and liquids (which include but are not limited to adhesives, solvents, paint thinners etc.), and the vapors they produce are extremely dangerous. **DO NOT** handle, use or store gasoline or other flammable or combustible materials anywhere near or in the vicinity of a water heater or any other appliance. Be sure to read and follow warning label pictured below and other labels on the water heater, as well as the warnings printed in this manual. Failure to do so can result in property damage, bodily injury or death.

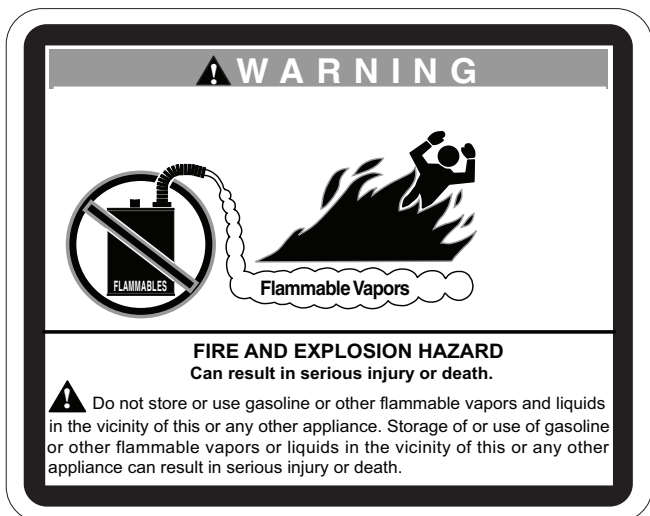

### DANGER

**LIQUEFIED PETROLEUM MODELS** – Propane (LP) gas, must be used with great caution.

- It is heavier than air and will collect first in lower areas making it hard to detect at nose level.
- Make sure to look and smell for LP leaks before attempting to light appliance. Use a soapy solution to check all gas fittings and connections. Bubbling at a connection indicates a leak that must be corrected. When smelling to detect an LP leak, be sure to sniff near the floor too.
- Gas detectors are recommended in LP applications and their installation should be in accordance with the manufacturer's recommendations and/or local laws, rules, regulations or customs.
- It is recommended that more than one method be used to detect leaks in LP applications.

**IF LP GAS IS PRESENT OR SUSPECTED:**

- DO NOT attempt to find the cause yourself;
- DO NOT try to light any appliance;
- DO NOT touch any electrical switch;
- DO NOT use any phone in your building.
- Leave the building immediately and make sure your family and pets leave also.
- Leave the doors open for ventilation and contact the gas supplier, a qualified service agency or the fire department.
- Keep the area clear until the service call has been made, the leak is corrected, and a qualified agency has determined the area to be safe. Read and Review this entire Manual with special emphasis on the Venting Sections (Pages 11-23) and Operation Section (Pages 25-26) prior to any installation work.

### WARNING

Both LP and natural gas have an odorant added to help detection. Some people may not physically be able to smell or recognize this odorant. If unsure or unfamiliar about the smell associated with LP or natural gas, ask the gas supplier. Other conditions, such as "Odorant Fade", which causes the odorant to "fade", or diminish in intensity can also hide or camouflage a gas leak.

### DANGER

Water heaters utilizing Liquefied Petroleum gas (LP) are different from natural gas models. A natural gas heater will not function safely on LP gas and vice versa. No attempt should ever be made to convert a heater from natural gas to LP gas. To avoid possible equipment damage, personal injury or fire: **DO NOT** connect this water heater to a fuel type not in accordance with unit data plate. Propane for propane units. Natural gas for natural gas units. These units are not certified for any other type fuel.

### WARNING

LP appliances should not be installed below-grade (for example, in a basement) if such installation is prohibited by federal, state and/or local laws, rules, regulations or customs.

# Introduction

## LOCAL INSTALLATION REGULATIONS

This water heater must be installed in accordance with these instructions, local codes, utility company requirements and/or, in the absence of local codes, the latest edition of the National Fuel Gas Code, ANSI Z223.1 in the United States, or CAN/CSA B149.1 Installation Codes in Canada.

## LOCATION

- A. If this water heater is of the Direct Vent design, all air for combustion and all products of combustion are routed through the venting system, directly from and to the outside of the building.

Otherwise: This unit can also be set up as a Power Vent Unit. Combustion air for a power vent unit will be obtained from the surrounding area. Make sure that there is an adequate air supply for the water heater, see codes in "Local Installation Regulations".

The water heater should be installed in a clean, dry location as close as practical to the vent terminals. Long hot water lines should be insulated to conserve water and energy. The water heater and water lines should be protected from exposure to freezing temperatures.

- B. A gas fired water heater should not be installed in a space where liquids which give off flammable vapors are to be used or stored. Such liquids include gasoline, LP gas (butane and propane), paint or adhesives and their thinners, solvents or removers. Because of natural air movement in a room or other enclosed space, flammable vapors can be carried some distance from where their liquids are being used or stored. The open flame of the water heater's main burner can ignite these vapors causing an explosion or fire which may result in severe burns or death to those in range, as well as property damage. For these reasons, installation of a gas fired water heater in a garage is not desirable.
- C. All models are certified for installation on combustible floors and in alcoves. The minimum side and top clearance to walls and ceiling for providing protection of combustible materials are shown on the water heater's rating label. A top and front clearance of 24 inches (61 cm) is recommended for inspection and servicing.

**NOTICE:** Auxiliary catch pan installation **MUST** conform to the applicable local codes.

### CAUTION

The water heater should not be located in an area where leakage of the tank or connections will result in damage to the area adjacent to it or to lower floors of the structure. When such areas cannot be avoided, it is recommended that a suitable catch pan, adequately drained, be installed under the water heater. The pan **MUST NOT** interfere with the operation of the water heater and access of the serviceable components.

- D. **RESTAURANT INSTALLATION:** — If the water heater is to be installed in a restaurant or other location where NSF International listing is required, this unit must be sealed to the floor and other components must be added utilizing Rheem's UL Listed NSF Seal Kit (See kit listing on page 34). A factory designed sealing kit is available from the distributor or store

where the water heater was purchased. When installed according to the instructions supplied with the kit, these heaters will meet the NSF international requirements.

- E. **CORROSIVE ATMOSPHERES** — The heater should not be installed near an air supply containing halogenated hydrocarbons. For example, the air in beauty shops, dry cleaning establishments, photo processing labs, and storage areas for liquid and powdered bleaches or swim pool chemicals often contain such hydrocarbons. The air there may be safe to breathe, but when it passes through a gas flame, corrosive elements are released that will shorten the life of any gas burning appliance. Propellants from common spray cans or gas leaks from refrigeration equipment are highly corrosive after passing through a flame. The limited warranty is voided when failure of water heater is due to a corrosive atmosphere. (Refer to the Certificate of Limited Warranty for complete terms and conditions.) The manufacturer's warranty does not cover any damage or defect caused by installation, or attachment, or use of any special attachment such as energy saving devices (other than those authorized by the manufacturer) into, onto, or in conjunction with the water heater. The use of such unauthorized devices may shorten the life of the water heater and may endanger life and property. The manufacturer disclaims any responsibility for such loss or injury resulting from the use of such unauthorized devices.

1. **INSPECT SHIPMENT** — for possible damage. The manufacturer's responsibility ceases upon delivery of goods to the carrier in good condition. Any claims for damage, shortage in shipments, or non delivery must be filed immediately against carrier by consignee.

Included with this water heater are two plastic bags attached to the unit. One bag contains the Use & Care Manual, Warranty, and Start Up Instructions. The other bag contains a 3 inch elbow w/screen, condensate trap, diffuser tube and instructions to install the diffuser tube.

2. **THERMAL EXPANSION** — Determine if a check valve exists in the inlet water line. It may have been installed in the cold water line as a separate back flow preventer, or it may be part of a pressure reducing valve, water meter or water softener. A check valve located in the cold water inlet line can cause what is referred to as a "closed water system". A cold water inlet line with no check valve or back flow prevention device is referred to as an "open" water system.

As water is heated, it expands in volume and creates an increase in the pressure within the water system. This action is referred to as "thermal expansion". In an "open" water system, expanding water which exceeds the capacity of the water heater flows back into the city main where the pressure is easily dissipated.

A "closed water system", however, prevents the expanding water from flowing back into the main supply line, and the result of "thermal expansion" can create a rapid, and dangerous pressure increase in the water heater and system piping. This rapid pressure increase can quickly reach the safety setting of the relief valve, causing it to operate during each heating cycle. Thermal expansion, and the resulting rapid, and repeated expansion and contraction of

# Installation

components in the water heater and piping system can cause premature failure of the relief valve, and possibly the heater itself. Replacing the relief valve will not correct the problem!

The suggested method of controlling thermal expansion is to install an expansion tank in the cold water line between the water heater and the check valve. The expansion tank is designed with an air cushion built in that compresses as the system pressure increases, thereby relieving the over pressure condition and eliminating the repeated operation of the relief valve. Other methods of controlling thermal expansion are also available. Contact your installing contractor, water supplier, or plumbing inspector for additional information regarding this subject.

If a recirculation line is installed, the return connection should be made to a tee close to the inlet connection on the water heater. A check valve should always be installed in the recirculation line to prevent cold water from entering.

**WATER CONNECTIONS** — This water heater may be connected individually, in multiples with others, or with an external hot water storage tank.

Inlet water connections are made to the lower coupling on the heater, and outlet water connections are made to the upper coupling.

Each water heater is supplied with the necessary components (Diffuser tubes) to make the water connections that will ensure proper performance. The components are supplied in a bag attached to the water heater. If special instructions are required for any specific water heater, they will be included in the bag.

Cap or plug unused connections. Use only clean, new galvanized steel, copper or approved plastic pipe for water connections. Local codes or regulations shall govern the exact type of material to be used. The installation of unions on the inlet and outlet water lines and a shut-off valve in at least the cold water inlet line is recommended, so the water heater may be easily disconnected for servicing. Dielectric unions are not required for protection of water heater.

**Mixing valves are recommended for reducing point of use water temperature by mixing hot and cold water in branch water lines. It is recommended that a mixing valve complying with the Standard for Temperature Actuated Mixing Valves for Hot Water Distribution Systems, ASSE 1017 be installed. See page 3 for more details and contact a licensed plumber or the local plumbing authority for further information.**

Thermometer(s) should be installed so that they indicate the temperature of the water at or near the outlet of the water heater and storage tank(s) if provided. See Fig. 2.

3. **RELIEF VALVE** — A new factory installed combination pressure and temperature relief valve, complying with the Standard for Relief Valves and Automatic Gas Shutoff Devices for Hot Water Supply Systems, ANSI Z21.22, or Standard CSA 4.4, Temperature, Pressure, Temperature and Pressure Relief Valves and Vacuum Relief Valves is provided with the water

heater. No valve is to be placed between the relief valve and the water heater. For a circulating tank installation, the separate storage tank(s) must have similar protection. The pressure rating of the relief valve must not exceed 150 psi (1034 kPa) (160 psi for ASME models), the maximum working pressure as marked on front of the water heater.

## **WARNING**

Connect the outlet of the relief valve to a suitable open drain. The discharge line must pitch downward from the valve to allow complete draining (by gravity) of the relief valve and discharge line, and be no smaller than the outlet of the valve. The end of the discharge line should not be threaded or concealed and should be protected from freezing. No valve of any type, restriction or reducer coupling should be installed in the discharge line. Local codes shall govern the installation of relief valves.

The Btu/h rating of the relief valve must equal or exceed the Btu/h input of the water heater as marked on its rating plate.

4. **GAS SUPPLY** — The inlet gas pressure to the water heater must not exceed 10.5" w.c. (2.6 kPa) for Natural gas and 13.0" w.c. (3.2 kPa) for L.P. gas. The minimum inlet gas pressure (with main burner on) is shown on the rating plate. Check to see if high or low gas pressure is present and then contact the gas company for correction.

The gas line should be of adequate size to prevent undue pressure drop (pressure should not drop more than 1.5 In. WC, when going from the stand by to full blower speed condition). Sizing based upon information in Table 2, on page 24. No additional allowance is necessary for an ordinary number of fittings.

**NOTE: The minimum inlet gas pressure (at gas valve), during ignition to full input, should not be less than 5.3" WC for Nat. or 11" WC for LP.**

A ground joint union and manual shutoff valve should be installed in the gas line near the water heater so that the burner assembly may be easily removed. The shut-off valve must be readily accessible for turning on or off. See Fig. 2.

Where a sediment trap is not incorporated as part of the appliance, a sediment trap shall be installed downstream of the equipment shutoff valve as close to the inlet of the appliance as practical at the time of the appliance installation. The sediment trap shall be either a tee fitting with a capped nipple in the bottom outlet or other device recognized as an effective sediment trap. See Fig. 2.

**LEAK TESTING** — The water heater and its gas connections **MUST** be leak tested at normal operating pressure before it is placed in operation. Turn ON the manual gas shut-off valve near the water heater. Use a soapy water solution to test for gas leaks at all connections and fittings. Bubbles indicate a gas leak that must be corrected. The water heater factory connections to the gas valve should also be leak tested after placing the water heater in operation.

**NEVER** use open flame to test for gas leaks, as bodily injury or property damage could result.

# Installation

## PRESSURE TESTING THE GAS SUPPLY SYSTEM –

The water heater and its manual gas shut-off valve **MUST** be disconnected from the gas supply piping system during any high pressure testing of that system at pressures in excess of 1/2 psi (14" w.c. / 3.5 kPa).

The water heater **MUST** be isolated from the gas piping system by closing the manual gas shut-off valve during any pressure testing of the gas supply piping at pressures equal to or less than 1/2 psi (14" w.c. / 3.5 kPa).

## 5. CONDENSATE

### Filling The Condensate Trap:

**THE CONDENSATE TRAP MUST BE FILLED WITH WATER, BEFORE OPERATING WATER HEATER.**

To fill the trap (Refer to Figure 1), remove the plastic cap on the trap. Pour about one (1) cup of water into the trap and then re-install the plastic cap.

This is a condensing high efficiency appliance, therefore this unit has a condensate removal system. Condensate is water vapor, derived from the combus-

tion products. This condensate does have a low pH and condensate removal must comply with all local codes. See information below for optional Condensate Neutralizer, if required. It is very important that the condensate line is sloped away from and down to a suitable inside drain. If the condensate outlet on this unit is lower than the drain, you must use a condensate removal pump. It is also very important that the condensate line is not exposed to freezing temperatures, or any other type of blockage. Plastic tubing should be the only material used for the condensate line. Steel, brass, copper, or other metals will be subject to corrosion and deterioration, so they are not recommended to be used for the condensate drain line. A second vent may be necessary to prevent condensate line vacuum lock if a long horizontal run is used. Also an increase to 1" tubing may be necessary.

6. WIRING – A correct polarity 120V 60 Hz power supply, with suitable disconnect means, must be connected to the black and white leads provided. The maximum current draw by these models is 6 Amps. The water heater, when installed, must be electri-


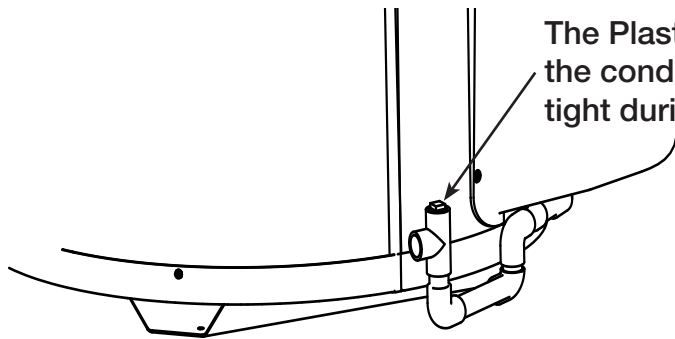


Figure 1 - Condensate Trap

## INSTALLATION OF A CONDENSATE NEUTRALIZER AND PUMP (Not Supplied)

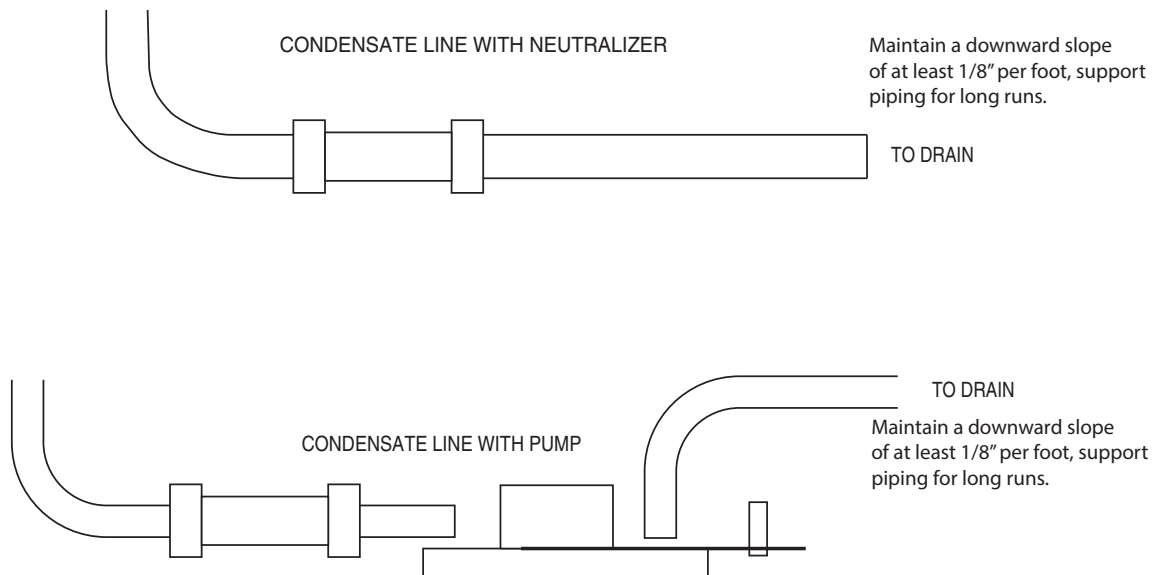

Condensate line must be sloped down at least 1/8" per foot to properly drain. If this cannot be done or a very long length of condensate piping is used, you

must increase the condensate piping to a minimum of 1" ID or use a condensate pump.

# Installation

cally grounded in accordance with local codes, or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70 in the United States; or CSA C22.1 Electrical Code, in Canada. Improper grounding or polarity may result in abnormal operation of the unit. Refer on page 33 of this manual for water heater internal wiring diagrams.

## ⚠ WARNING

The water heater must be vented to the outdoors as described in these instructions.

## ⚠ WARNING

DO NOT connect this water heater to an existing Vent or Chimney; it must be vented separately from all other appliances, using only approved venting materials.


## ⚠ WARNING

Failure to properly vent the water heater to the outdoors as outlined above and in the following section can result in unsafe operation of the water heater causing bodily injury, explosion, fire or death.

## ⚠ WARNING

**NOTICE: DO NOT use in conjunction with a GFCI.** To avoid the risk of fire, explosion or asphyxiation from carbon monoxide, NEVER operate this water heater unless it is properly vented and has an adequate air supply for proper operation. It is important that the vent pipe engages fully into any pipe fitting and be kept in that position until the adhesive has fully cured. DO NOT drill or punch holes in the plastic pipe or fittings.

Figure 2. — Typical Installation Drawing.

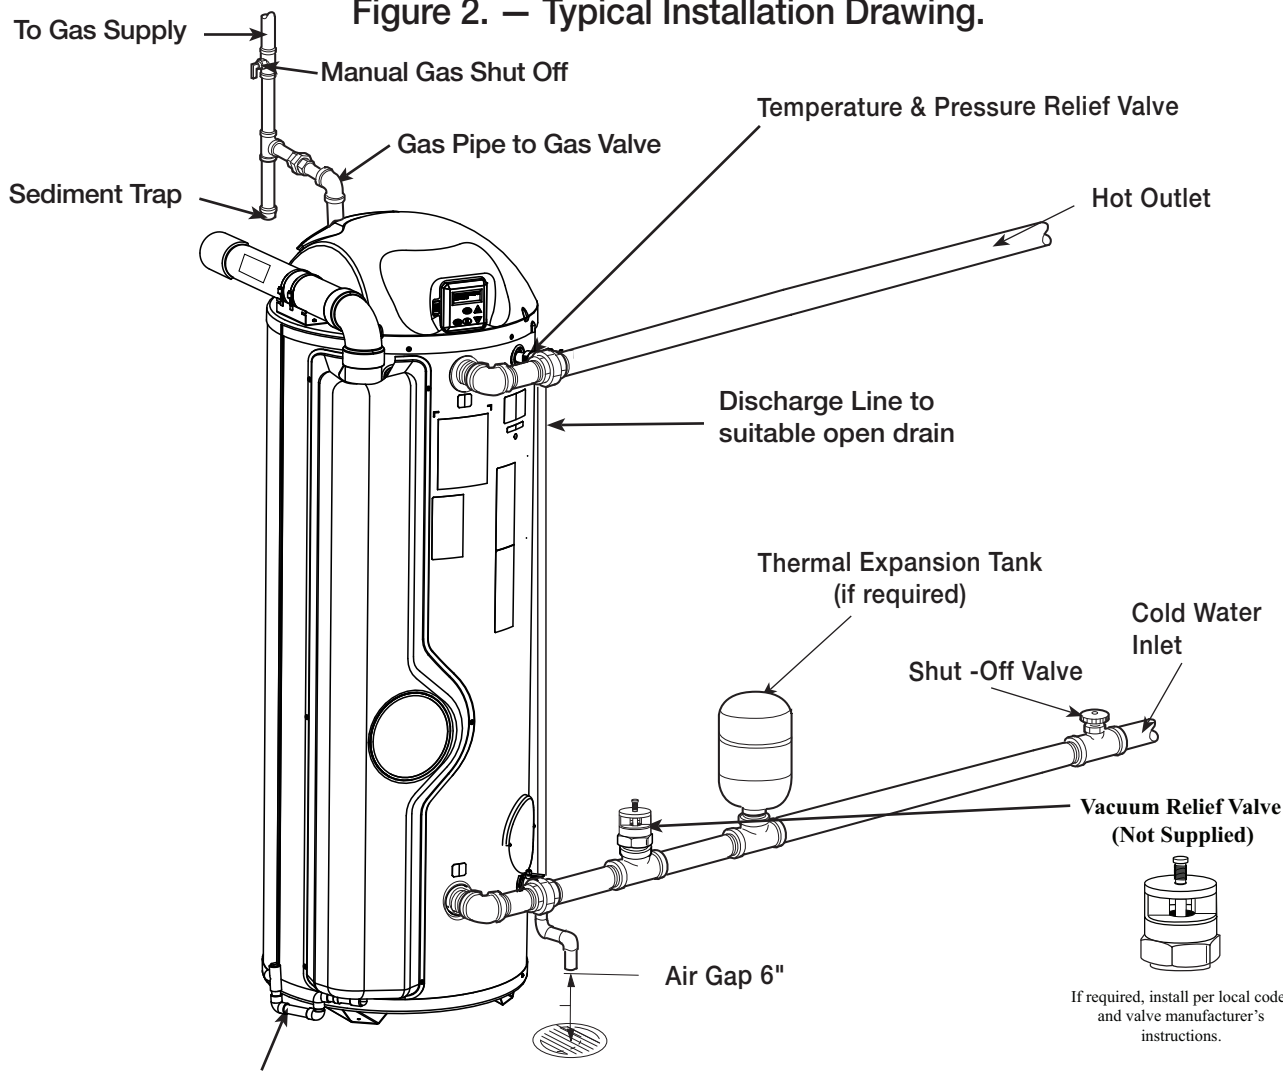

Condensate Trap:  
(See previous page for proper slope, for condensate drain line.)

### NOTES:

- 1.) The gas supply piping must be adequately supported and aligned to minimize loads (forces) on the water heater's gas valve and burner system.
- 2.) Refer to local codes for installation guidelines for the Thermal Expansion Tank (if required).



# Installation

## 7. VENTING –

**NOTE:** This unit can be vented either as a Direct Vent or Power Vent configuration.

**NOTICE:** This unit can be vented using only the following recommended pipe material. Use only 2, 3, 4, or 6 inch diameter pipe.

Refer to local codes for restrictions on the use of PVC, CPVC or ABS pipe and fittings. All exhaust venting materials for product installed in Canada must meet ULC-S636.

PVC (Schedule 40, ASTM D-1785)  
CPVC (Schedule 40, ASTM F-441)  
ABS (Schedule 40, ASTM D-2661)(Not permitted in Canada)

PVC Cellular Core (Schedule 40, ASTM F-891)(Not Permitted in Canada)

The fittings, other than the VENT TERMINAL, should be equivalent to the following:

PVC (Schedule 40 DWV, ASTM D-2665)  
CPVC (Schedule 40 DWV, ASTM F-438)  
ABS (Schedule 40 DWV, ASTM D-2661)(Not permitted in Canada)

The unit may be vented horizontally through a wall or vertically through the roof. Pipe runs must be adequately supported along both vertical and horizontal runs. Maximum unsupported span is recommended to be no more than 4 feet. It is imperative that the first hanger be located on the horizontal run immediately adjacent to the first 90-degree elbow from the vertical rise or at the blower outlet in the case of a horizontal blower position. Support method used should isolate the vent pipe from floor joists or other structural members to help prevent the transmission of noise and vibration. **DO NOT** support, pin or otherwise secure the venting system in a way that restricts the normal thermal expansion and contraction of the chosen venting material.

If the water heater is being installed as a replacement for an existing power vented water heater, a thorough inspection of the existing venting system must be performed prior to any installation work. Verify that the correct materials, as detailed above have been used, and that the minimum or maximum vent length and terminal locations as detailed in this manual have been met. Carefully inspect the entire venting system for any signs of cracks or fractures, particularly at the joints between elbows or other fittings and the straight runs of vent pipe. Check the system for signs of sagging or other stresses in the joints as a result of misalignment of any components in the system. If any of these conditions are found, they must be corrected in accordance with the venting instructions in this manual before completing the installation and putting the water heater into service.

### VENT PIPE CONNECTION –

Note: It is recommended that a suitable rubber coupling is used on the outlet vent connection.

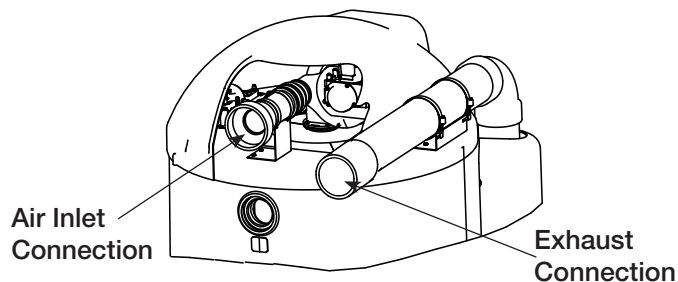


Figure 3. – Vent Pipe Connection Locations

Refer to Figure 3, for connecting the vent pipe to the water heater. These models can be vented either as a Direct Vent or as a Power Vent water heater.

**NOTICE:** If the unit is installed as a Power Vent water heater, the vent terminal with screen must still be installed on the inlet air side.

Before starting the vent installation, careful planning should be given to the routing and termination of the vent pipes. The length of the vent pipes (inlet and outlet) should be kept to a minimum. Also, see Figure 10 for vent terminal placement. Refer to the venting charts on Table 1, for the pipe sizes that can be used and the total equivalent length of pipe that can be used. **DO NOT** exceed equivalent length of pipe in charts.

Depending on the size of pipe selected for venting the water heater, it may be necessary to use a fitting for stepping up or down in pipe size, to connect to the water heater. All models are shipped with three (3) inch vent terminals with screen. If another size of pipe is used for venting the unit, the proper vent terminal must be installed.

When the unit is vented as a Direct Vent, through a side wall, the vent terminals must be on the same exterior wall mounted horizontally and at least twenty-four (24 inches / 61 cm) apart (on center). See Figures 7, 8, and 10 for other vent terminal restrictions.

**JOINING PIPES AND FITTINGS –** All pipe, fittings, solvent cement, primers and procedures, for the U.S., must conform to American National Standards Institute and American Society for Testing and Materials (ANSI/ASTM) standards. For Canada, all pipe, fittings, solvent cement, primers and procedures must conform to ULC-S636 and vent manufacture specifications

**CEMENTING JOINTS –** All joints in the vent piping must be properly sealed and we recommend using the following material:

PVC materials should use ASTM D-2564 grade cement.

CPVC materials should use ASTM F-493 grade cement.

ABS materials should use ASTM D-2235 grade cement.

(ABS is not allowed in Canada)

Cleaner-Primer and Medium Body Solvent Cement

1. Cut pipe end square, remove jagged edges and burrs. Chamfer end of pipe, then clean fitting socket and pipe joint area of all dirt, grease or moisture.
2. After checking pipe and socket for proper fit, wipe socket and pipe with cleaner-primer. Apply a liberal coat of primer to inside surface of socket and outside of pipe. **DO NOT** allow primer to dry before applying cement.
3. Apply a thin coat of cement evenly in the socket. Quickly apply a heavy coat of cement to the pipe end and insert pipe into fitting with a slight twisting motion until it bottoms out.

**NOTICE: Cement must be fluid; if not, re-coat.**

4. Hold the pipe fitting for 30 seconds to prevent the tapered socket from pushing the pipe out of the fitting.
5. Wipe all excess cement from the joint with a rag. Allow 15 minutes before handling. Cure time will vary according to fit, temperature and humidity.

# Installation

**NOTICE:** Stir the solvent cement frequently while using. Use a natural bristle brush or the dauber supplied with the can. The proper brush size is one inch.

FOR PROPER INSTALLATION:

## ⚠ CAUTION

- **DO NOT** use solvent cement that has become curdled, lumpy or thickened.
- **DO NOT** thin solvent cement. Observe shelf precautions printed on the containers.
- For applications below 32°F (0°C) use only low temperature type solvent cement.
- Appropriate solvent and cleaner must be used for the type of vent pipe used (PVC, CPVC or ABS).

**DANGER OF FIRE OR BODILY INJURY** – Solvent cements and primers are highly flammable. Provide adequate ventilation and do not assemble near heat source or open flame. **DO NOT** smoke. Avoid skin or eye contact. Observe all cautions and warnings on material containers.

**DIRECT VENT INSTALLATION** - Check to make sure flue gases **DO NOT** recirculate into the air intake terminal when using direct venting. If the water heater is having service issues, flue recirculation may be a contributing factor. Even when the minimum vent terminal separation distances are followed, recirculation may still occur depending upon the location outside the building, the distance from other buildings, proximity to corners, weather conditions, wind patterns, and snow depth. Periodically check to make sure that flue recirculation is not occurring. Signs of flue gas recirculation include frosted or frozen intake terminals, condensate in the intake terminal and venting system, oxidation or white chalk material on the flame sensor or igniter shield. Correction to flue recirculation may involve angling the intake away from the exhaust terminal, increasing the distance between them, or using inside air for combustion. Check to be sure the intake and exhaust terminals are not obstructed, especially during periods of below freezing weather.

All intake and exhaust venting components must have the same diameter size. **DO NOT** use a different size on the intake and exhaust venting.

Be sure the condensate runs freely to a drain and does not accumulate inside the water heater. In cold climates, precautions may need to be taken to insure that the condensate drain does not freeze. Make sure the condensate trap or drain loop is installed to prevent flue gases from being discharged into the room. Refer to the Venting section of the Installation and Operating Instructions Manual for complete instructions on venting and condensate drainage.

Stress levels in the pipe and fittings can be significantly increased by improper installation. If rigid pipe clamps are used to hold the pipe in place, or if the pipe cannot move freely through a wall penetration, the pipe may be directly stressed, or high thermal stresses may be formed when the pipe heats up and expands. Install accordingly to minimize such stresses. Follow the following procedure to vent through the wall:


1. Cut two 2 1/2 in. (6.4 cm) diameter holes, 3 1/2 in. (8.9 cm) diameter holes or 6 1/2 in. (16.5 cm) diameter holes for 6 in. (15.2 cm) diameter pipe. Vent terminals must be a minimum of 24 inches (61 cm) and a maximum of 36 inches (91 cm) horizontally apart (See Figure 4).
2. Use the proper PVC cement (primer and adhesive) to secure the exhaust vent and air intake terminals provided with the water heater to the plastic pipes. The distance between the back edge of the exhaust vent terminal and the exterior wall (see Figure 9) must be 6 inches (12.7 cm) more for the exhaust vent terminal than the air intake terminal. Use the proper cement or sealant and assembly procedures to secure the vent connector joints between the terminal and the blower outlet. Provide support brackets for every 3 feet (.91 m) of horizontal vent beyond the intake terminal as seen in Figure 9.

## Additional Fitting Considerations

Figure - 4. Examples of Elbows:


**DO NOT** use short sweep elbows. It is recommended to use only standard and/or long sweep elbows. See examples as shown.

DO NOT use

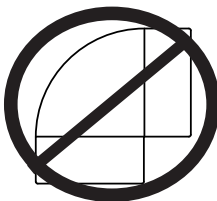


Short Sweep 90° Elbow

Good

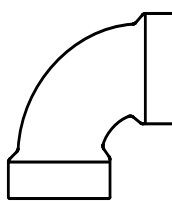

Standard 90° Elbow

Best

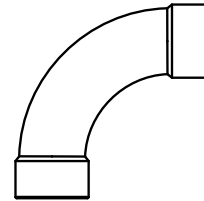

Long Sweep 90° Elbow

# Installation

## MINIMUM AND MAXIMUM VENT LENGTHS

Important Information for all Installations:

- 1) Minimum required venting is what is required to safely extend the inlet and outlet vent pipes outside of the building.
- 2) Each 90° elbow (standard or long sweep elbow) reduces the equivalent vent length by five ( 5 ) feet (1.5m).
- 3) Each 45° elbow reduces the equivalent vent length by two and one half ( 2.5 ) feet (0.8m).
- 4) **DO NOT** mix pipe sizes for venting these models, only use one size pipe for all venting.
- 5) All vent terminations (horizontal or vertical) should be a minimum of 24 inches and a maximum of 36 inches apart (center to center of terminals).
- 6) Maximum equivalent vent lengths, for inlet and outlet, must be within 20 equivalent feet of each other. Supplied vent terminal(s) are not included in the maximum equivalent vent length.

Feet	to	Meters
20		6.1
50		15.2
60		18.3
70		21.3
80		24.4
100		30.5
120		36.6
130		39.6
170		51.8

**TABLE 1**

Exceeding the maximum equivalent vent lengths may cause the water heater to malfunction or cause a lock-out condition.

Power Direct Vent				
Table 1a	Maximum Vent Length for Inlet or Outlet (Eq. ft. )			
Vent Pipe Size ( In. )	2 (5 cm)	3 (8 cm)	4 (10 cm)	6 (15 cm)
Model				
*GHEXXX-130	20	60	120	X
GHEXXX-150,160	20	60	120	X
GHEXXX-200	20	60	120	X
GHEXXX-250	X	50	120	X
GHEXXX-300	X	50	120	120
GHEXXX-350	X	50	70	120
GHEXXX-400	X	50	70	120

Power Vent				
Table 1b	Maximum Vent Length for Inlet or Outlet (Eq. ft. )			
Vent Pipe Size ( In. )	2 (5 cm)	3 (8 cm)	4 (10 cm)	6 (15 cm)
Model				
*GHEXXX-130	20	120	170	X
GHEXXX-150,160	20	120	170	X
GHEXXX-200	20	120	170	X
GHEXXX-250	X	80	130	X
GHEXXX-300	X	80	130	120
GHEXXX-350	X	50	100	120
GHEXXX-400	X	50	100	120
*GHE can be THE				

### Equivalent Vent Lengths for Concentric Vents:

For Concentric Vent Installation, with 3" kit, for either a 2 inch or 3 inch vent system reduce the maximum equivalent vent length (inlet and outlet) by 3 feet.

For Concentric Vent Installation, with a 4" kit, for a 4 inch vent system, reduce the maximum equivalent vent length (inlet and outlet) by 5 feet.

# Installation

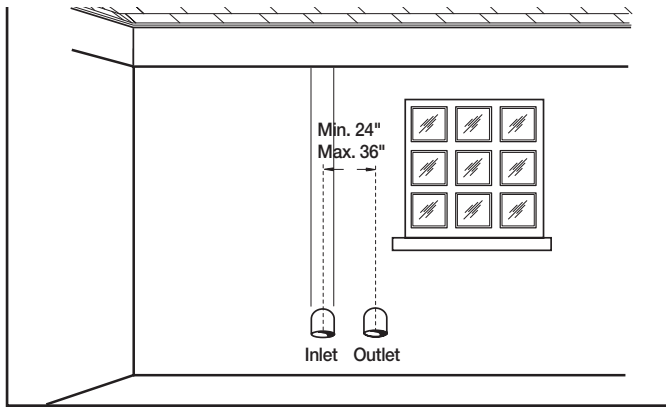


Figure 4

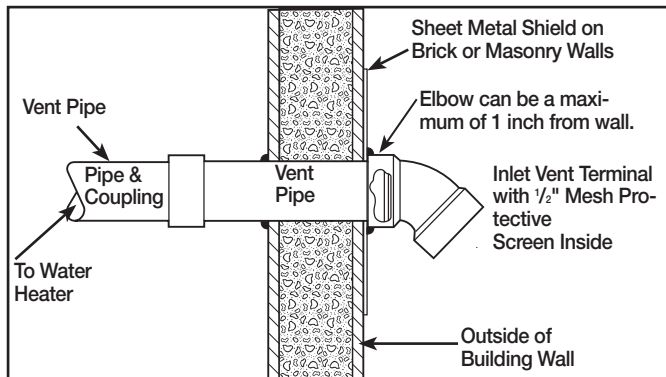


Figure 5 – Typical Horizontal Vent Installation

Additional Considerations (See Figure 9 & 10)

1. **DO NOT** install vent terminals under any patio or deck.
2. To help prevent moisture from freezing on walls and under eaves, **DO NOT** locate outlet vent terminal on the side of a building with prevailing winter winds.
3. **DO NOT** terminate vent pipe directly on brick or masonry surfaces. Use a rust-resistant sheet metal backing plate behind vent. (See Figure 5.)
4. **DO NOT** locate vent terminal too close to shrubbery, since flue gases may damage them.
5. Caulk all cracks, seams and joints within six (6) (1.83 m) feet of vent terminal.
6. All painted surfaces should be primed to lessen the chance of physical damage. Painted surfaces will require maintenance.
7. Make sure that all vent pipes exposed to cold conditions (attics, crawl spaces, etc.) have the proper slope and support, to keep moisture from accumulating in the vent pipes. Insulation may be required on the vent pipe to help reduce the amount of condensation forming in the pipe.
8. This water heater requires its own separate venting system. **DO NOT** connect the exhaust vent to an existing vent pipe or chimney.

## **WARNING**

Moisture in the flue gas will condense as it leaves the vent terminal. In cold weather this condensate can freeze on the exterior wall, under the eaves and on surrounding objects. Some discoloration to the exterior of the building is to be expected. However, improper location or installation can result in severe damage to the structure or exterior finish of the building. In locations with extended amounts of time with temperatures under 40°F. (4°C.) and/or prevailing wind toward the outlet vent, then make sure that the outlet vent

terminal is at least 2 ft. (0.61 m) away from anything that can be damaged by the condensate

**HORIZONTAL VENT INSTALLATION** – Once the vent terminal location has been determined, make a hole through the exterior wall to accommodate the vent pipe. Vent pipe must exit exterior wall horizontally only (See Figure 5).

Insert a small length of vent pipe through the wall and connect the coupling as shown in Figure 5. Connect terminal as shown to the vent pipe on the exterior of the building. Seal any opening around the vent pipe or fittings with mortar or silicone caulk as shown in Figure 5.

Complete the rest of the vent pipe installation to the water heater's vent connector fitting on the blower outlet. If necessary support horizontal run as previously mentioned.

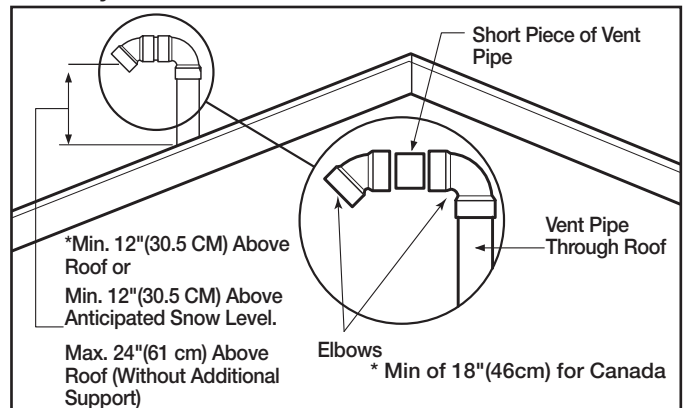


Figure 6 – Vertical Vent Terminal Location


**VERTICAL VENT INSTALLATION** – Once the vent terminal location has been determined, make a hole through the roof and interior ceiling to accommodate the vent pipe. Complete the vent pipe installation to the water heater's vent connector fitting on the blower outlet. Support vertical or horizontal runs as previously mentioned.

Install adequate flashing where the vent pipe passes through the roof. Determine the vent terminal height and cut vent pipe accordingly. Refer to Fig. 8 for proper vent terminal height. Connect vent elbow onto vertical pipe through roof. Connect short piece of vent pipe (approximately 3" (7.6 cm) long) to elbow, then join terminal to the short piece of vent pipe.

**VERTICAL VENT TERMINAL LOCATION** – The location of vertical vent terminal depends on the following considerations (see Figure 6):

1. Minimum twelve (12 inches) (30.5 cm) above roof  
18" inches (46 cm) for Canada.
2. Minimum twelve (12 inches) (30.5 cm) inches above anticipated snow level.
3. Maximum twenty-four (24 inches) (61 cm) inches above roof level without additional support for vent pipe.
4. Four (4) feet (1.22 m) from any gable, dormer or other roof structure with building interior access (i.e., vent, window, etc.).
5. Ten (10) feet (3.05 m) from any forced air inlet to the building. Any fresh or make-up air inlet such as a dryer or furnace area is considered to be a forced air inlet.
6. Vent Terminals are a minimum of twenty-four (24) inches (61 cm) and a max of 36" horizontally apart.

Figure 7

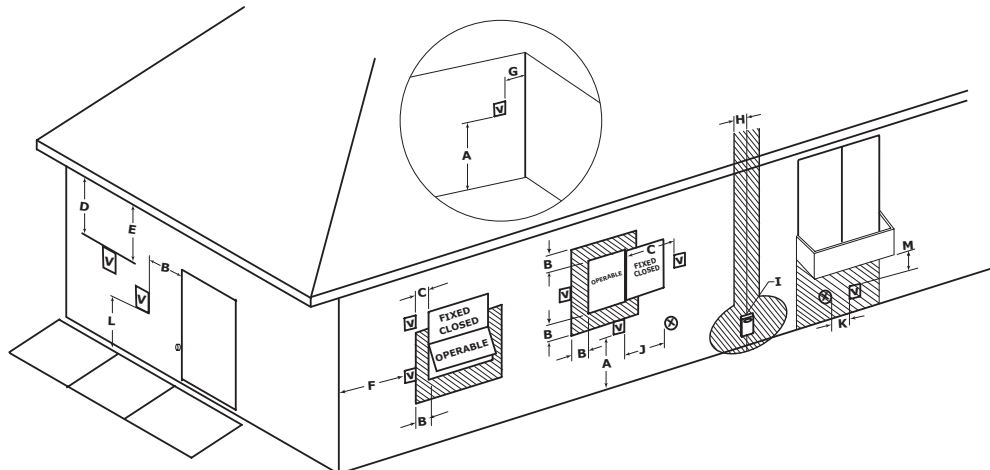

**Horizontal Vent Terminal Location for Power Direct Vent**

The following information should be used for determining the proper location of the vent terminal for direct vent water heaters.

	Canadian Installations <sup>1</sup>	US Installations <sup>2</sup>
A= Clearance above grade, veranda, porch, deck or balcony.	12 inches (30 cm)	12 inches (30 cm)
B= Clearance to window or door that may be opened.	6 inches (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 inches (30 cm) for appliances > 10,000 Btuh (3kW) and ≤ 100,000 Btuh (30kW), 36 inches (91 cm) for appliances > 100,000 Btuh (30kW).	6 inches (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 9 inches (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW), 12 inches (30 cm) for appliances > 50,000 Btuh (15 kW)
C= Clearance to permanently closed window.	*	*
D= Vertical Clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (61 cm) from the center line of the terminal.	*	*
E= Clearance to unventilated soffit.	*	*
F= Clearance to outside corner.	*	*
G= Clearance to inside corner.	*	*
H= Clearance to each side of center line extended meter/regulator assembly above	3 feet (91 cm) within a height 15 feet (4.57 m) above the meter/regulator assembly.	*
I= Clearance to service regulator vent outlet.	3 feet (91 cm)	*
J= Clearance to nonmechanical air supply inlet to the building or the combustion air inlet of any other appliance..	6 inches (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 inches (30 cm) for appliances > 10,000 Btuh (3kW) and ≤ 100,000 Btuh (30kW), 36 inches (91 cm) for appliances > 100,000 Btuh (30kW).	6 inches (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 9 inches (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW), 12 inches (30 cm) for appliances > 50,000 Btuh (15 kW)
K= Clearance to mechanical air supply inlet.	6 feet (1.83 m)	3 feet (91 cm) above if within 10 feet (3 m) horizontally.
L= Clearance above paved side walk or paved driveway located on public property.	7 feet (2.13 m)+	7 feet (2.13 m)+
M= Clearance under veranda, porch, deck or balcony.	Not Allowed	Not Allowed

<sup>1</sup> In accordance with current CAN/CSA-B149.1 Installation Codes.

<sup>2</sup> In accordance with current ANSI Z223.1/ NFPA 54 National Fuel Gas Code.

+ A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

\*"Clearance in accordance with local installation codes and the requirements of the gas supplier."

# Installation

---

**VENT INSTALLATION** – Before proceeding, make certain you understand the procedure and cautions covered in the section “Joining Pipes and Fittings.”

**POWER VENT INSTALLATION:**


Power venting is where the indoor air is used and the exhaust is vented to the outside. Venting may be run horizontally through an outside wall or vertically through a roof through using either 2" (5.1 cm), 3" (7.6 cm), 4" (10.2 cm) or 6" (15.2 cm) diameter PVC, ABS or CPVC. This water heater is supplied with a screened intake elbow and exhaust coupling referred to as the air intake terminal and the exhaust vent terminal

In a horizontal application, it is important that condensate not be allowed to buildup in the exhaust vent pipe. To prevent this from happening, the pipe should be installed with a slight upward slope of ¼" per foot. The vent system must be supported every 5 feet of vertical run and every 3 feet of horizontal run of vent pipe length.

Failure to properly support the vent piping with hangers and clamps may result in damage to the water heater or venting system.

# Installation

Figure 8

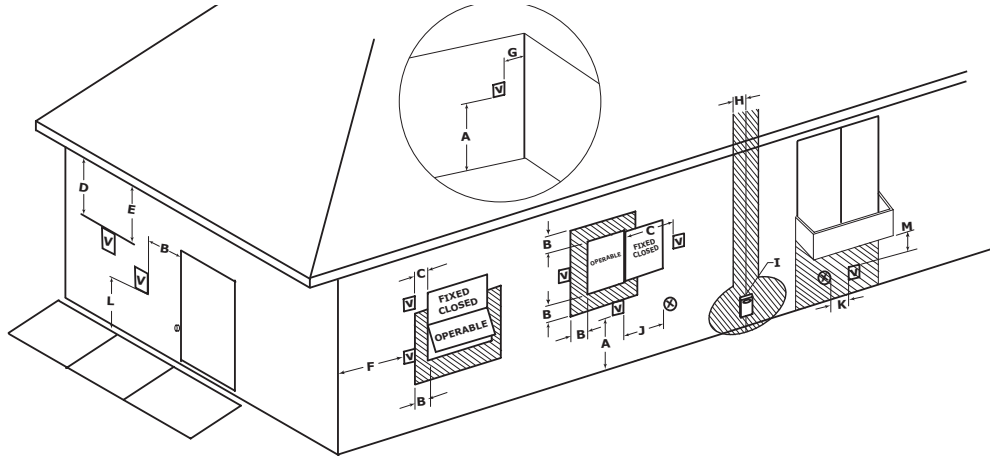

V VENT TERMINAL   
 X AIR SUPPLY INLET   
  AREA WHERE TERMINAL IS NOT PERMITTED

## Horizontal Vent Terminal Location for Power Vent

The following information should be used for determining the proper location of the vent terminal for direct vent water heaters.

	Canadian Installations <sup>1</sup>	US Installations <sup>2</sup>
A= Clearance above grade, veranda, porch, deck or balcony.	12 inches (30 cm)	12 inches (30 cm)
B= Clearance to window or door that may be opened.	6 inches (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 inches (30 cm) for appliances > 10,000 Btuh (3kW) and ≤ 100,000 Btuh (30kW), 36 inches (91 cm) for appliances > 100,000 Btuh (30kW).	4 feet (1.2 m) below or to side of opening; 1 foot (300 mm) above opening.
C= Clearance to permanently closed window.	*	*
D= Vertical Clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (61 cm) from the center line of the terminal.	*	*
E= Clearance to unventilated soffit.	*	*
F= Clearance to outside corner.	*	*
G= Clearance to inside corner.	*	*
H = Clearance to each side of center line extended meter/regulator assembly above	3 feet (91 cm) within a height 15 feet (4.57 m) above the meter/regulator assembly.	*
I = Clearance to service regulator vent outlet.	3 feet (91 cm)	*
J = Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance..	6 inches (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 inches (30 cm) for appliances > 10,000 Btuh (3kW) and ≤ 100,000 Btuh (30kW), 36 inches (91 cm) for appliances > 100,000 Btuh (30kW).	4 feet (1.2 m) below or to side of opening; 1 foot (300 m) above opening.
K = Clearance to mechanical air supply inlet.	6 feet (1.83 m)	3 feet (91 cm) above if within 10 feet (3 m) horizontally.
L = Clearance above paved side walk or paved driveway located on public property.	7 feet (2.13 m)+	7 feet (2.13 m)+
M = Clearance under veranda, porch, deck or balcony.	Not Allowed	Not Allowed

<sup>1</sup> In accordance with current CAN/CSA-B149.1 Installation Codes.


<sup>2</sup> In accordance with current ANSI Z223.1/ NFPA 54 National Fuel Gas Code.

+ A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

\* "Clearance in accordance with local installation codes and the requirements of the gas supplier."

# Installation

Figure - 9- Typical Horizontal Power Vent System

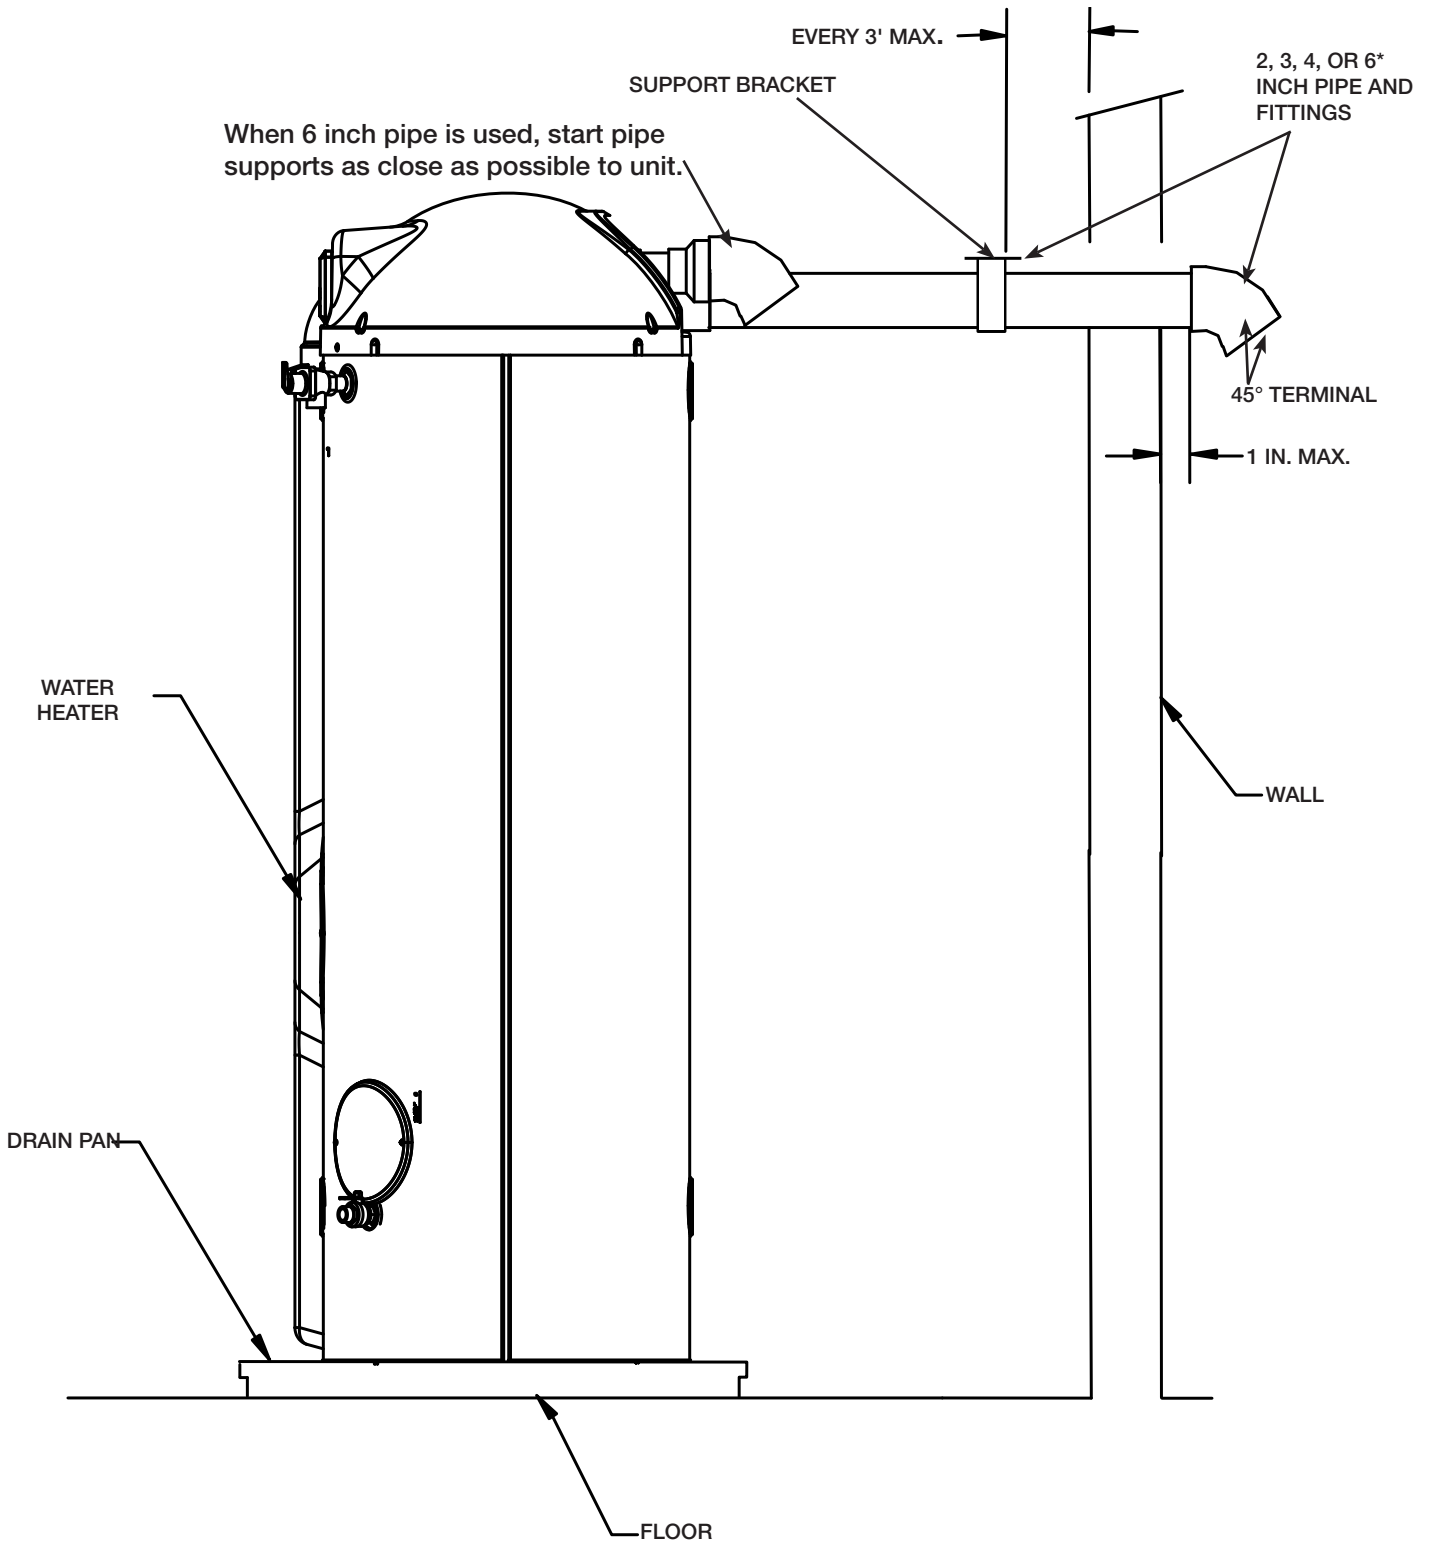


\* A 6 inch pipe can be used on 300,000 Btu/h models and above.



# Installation


**Figure - 10- Typical Horizontal Direct Vent System**

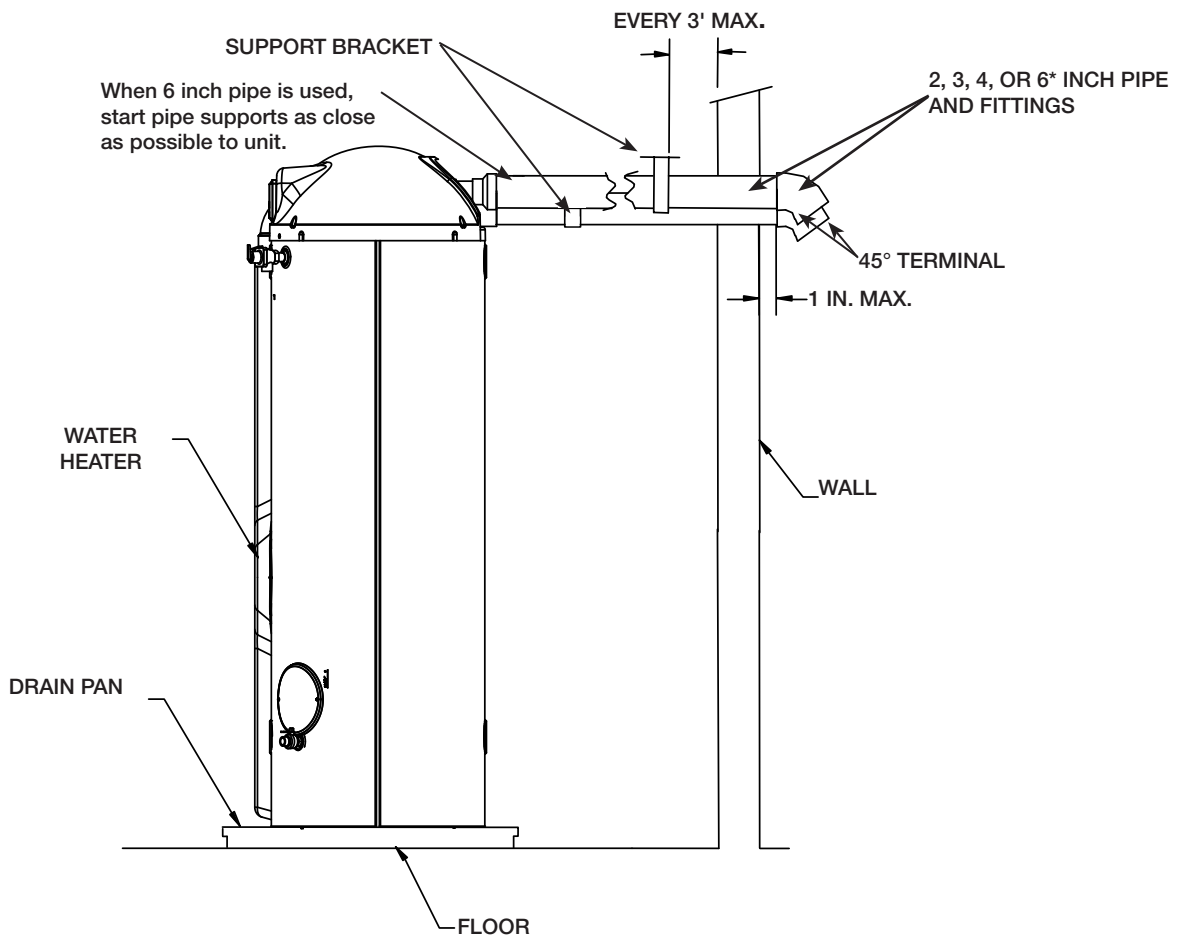

\* A 6 inch pipe can be used on 300,000 Btu/h models and above.

**Through The Wall Venting With Low Ground Clearance:**

When venting cannot exit through the wall at a height greater than or equal to 12" (30.5 cm) (and above expected snow level) from the ground, then the installation must be modified as shown below (see Figure 10a).

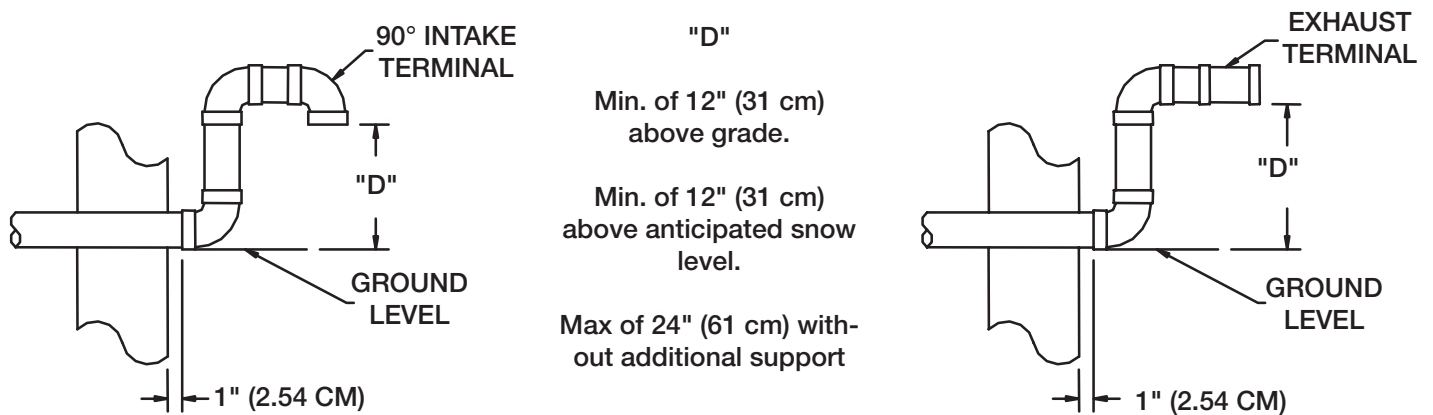


**Figure 10a. Vent Terminal (Low Ground Clearance)**


# Installation

## Horizontal Venting

**Figure 11a: Multiple Unit Venting**

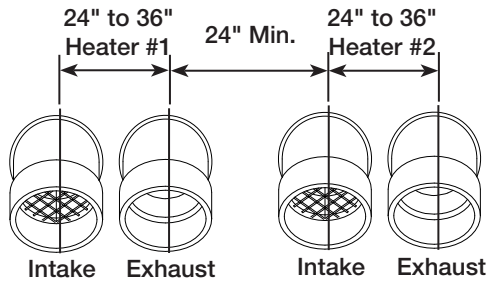


**Figure 11c: Optional Configuration**

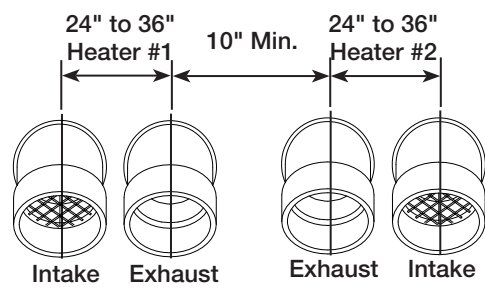


**Figure 11b: Multiple Unit Venting**

NOTICE: 11c can also be configured for 4 units.

Example of 4 Units' Vent.

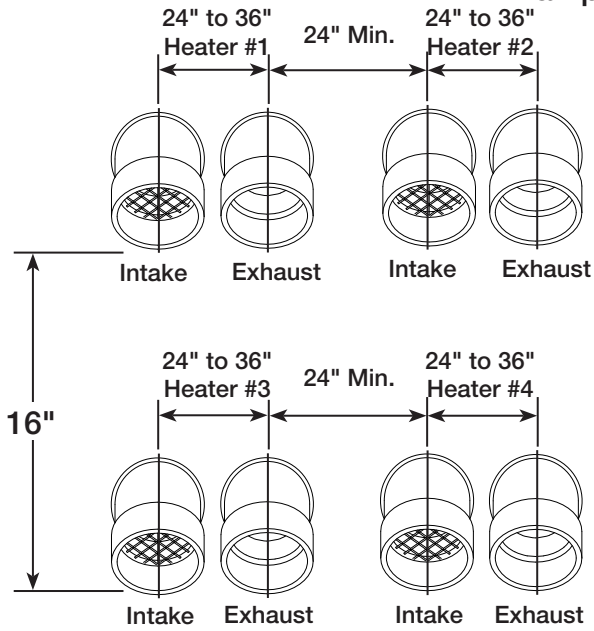


**Figure 11d: Optional Configuration**

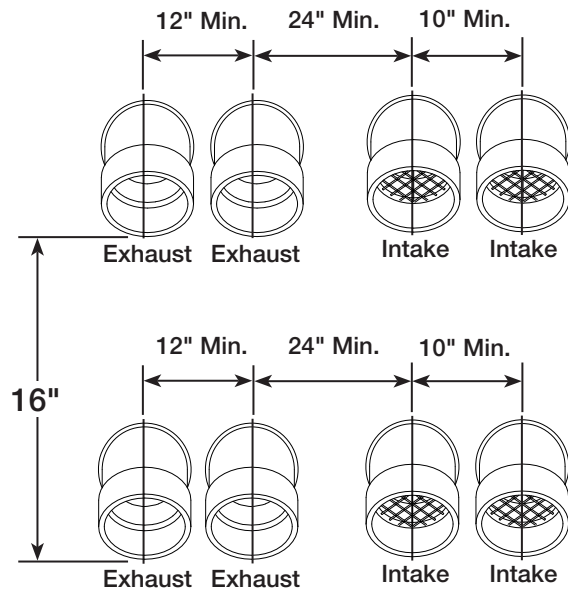


**Figure 11e**

Example of 4 Units' Vent.

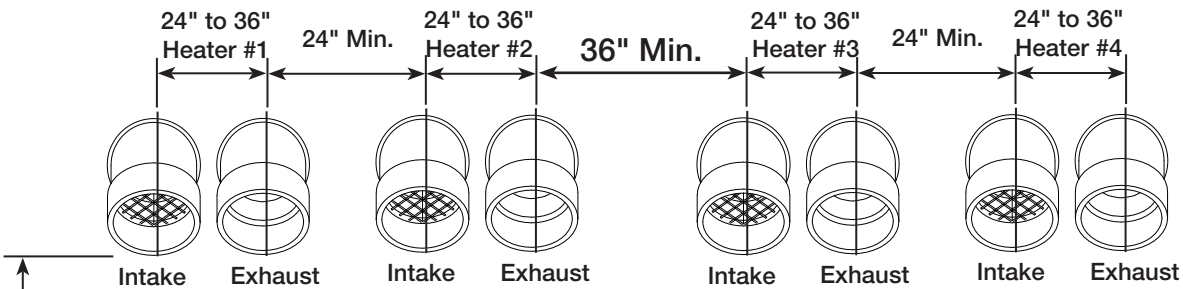

**Figure 11f**

Example of 8 Units' Vent.

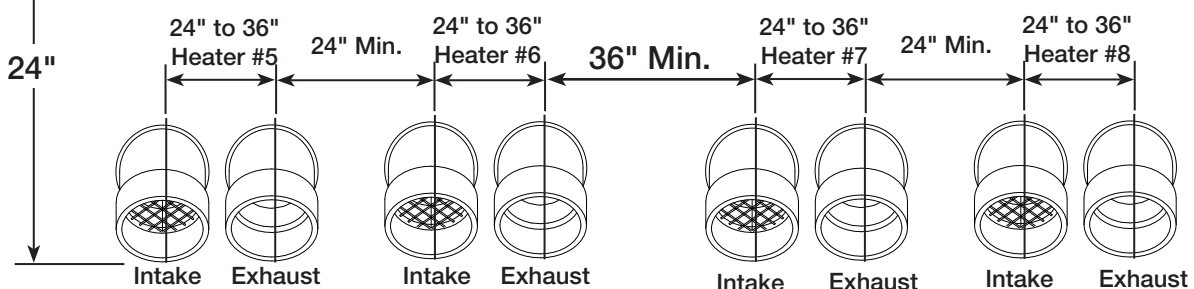


inch to cm	
10"	= 25 cm
12"	= 31 cm
16"	= 41 cm
18"	= 46 cm
24"	= 61 cm
36"	= 91 cm

# Installation


**Figure 12. Typical Vertical Direct Vent System Installation**

**NOTICE:** Intake and exhaust terminals must be in the same pressure zone.

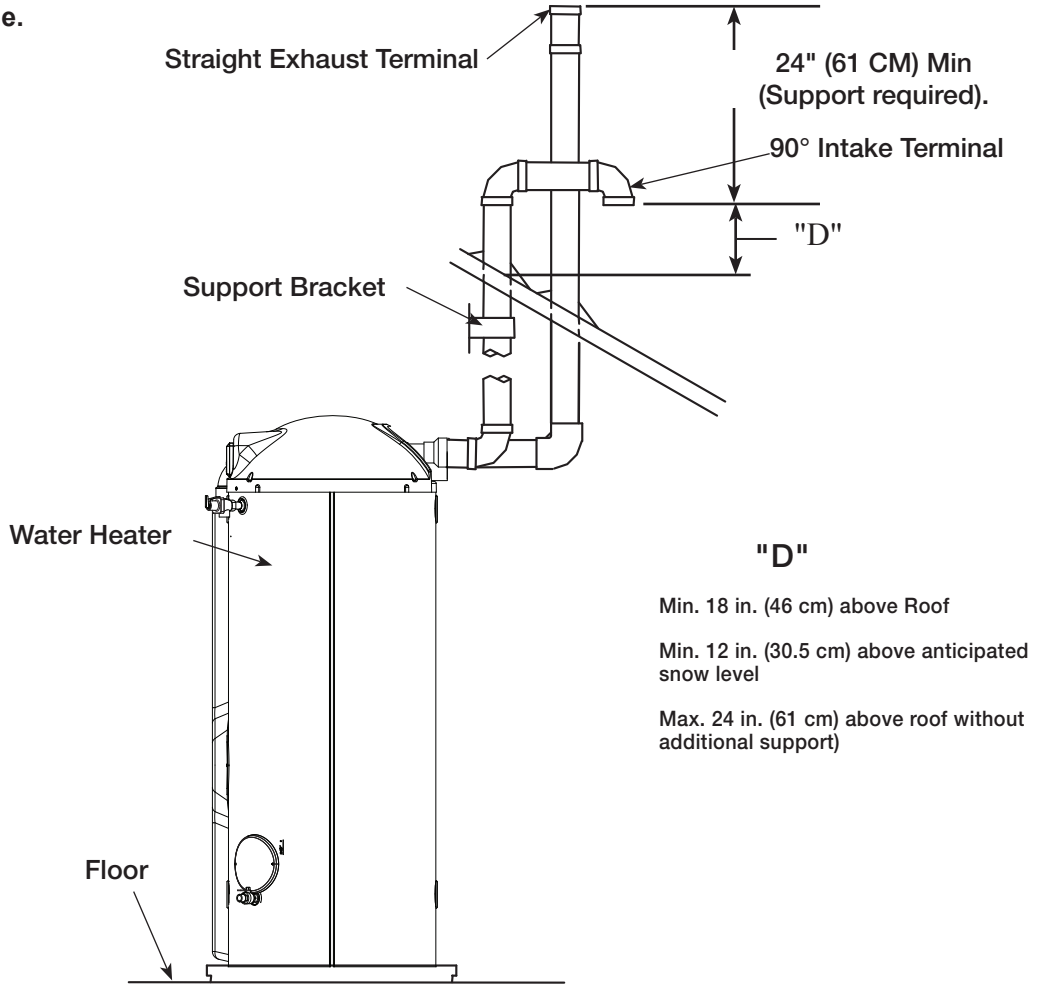


Alternate vertical venting with exhaust vent turned down - preferred for cold climates.

Terminals with 1/2 in. (1.3 cm) Mesh Protective Screen

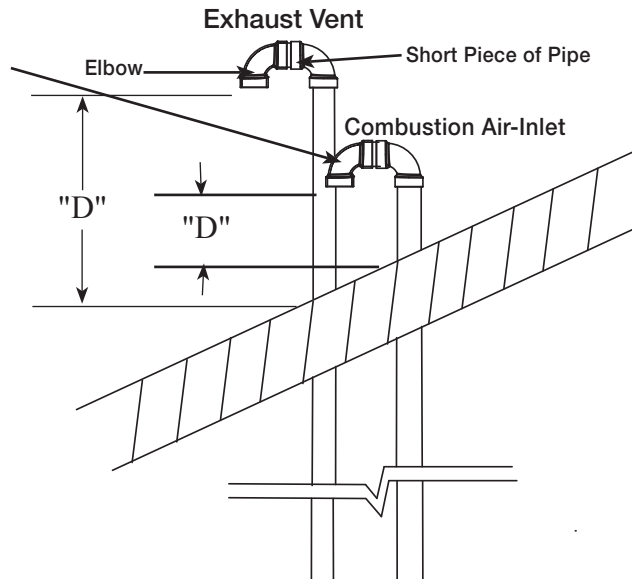


Terminals spacing for horizontal or vertical venting.

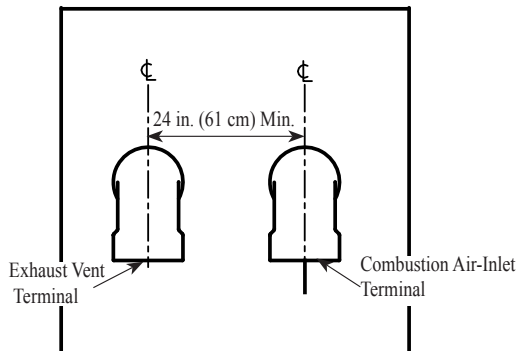


# Installation

Figure 13. Typical Vertical Power Vent System Installation

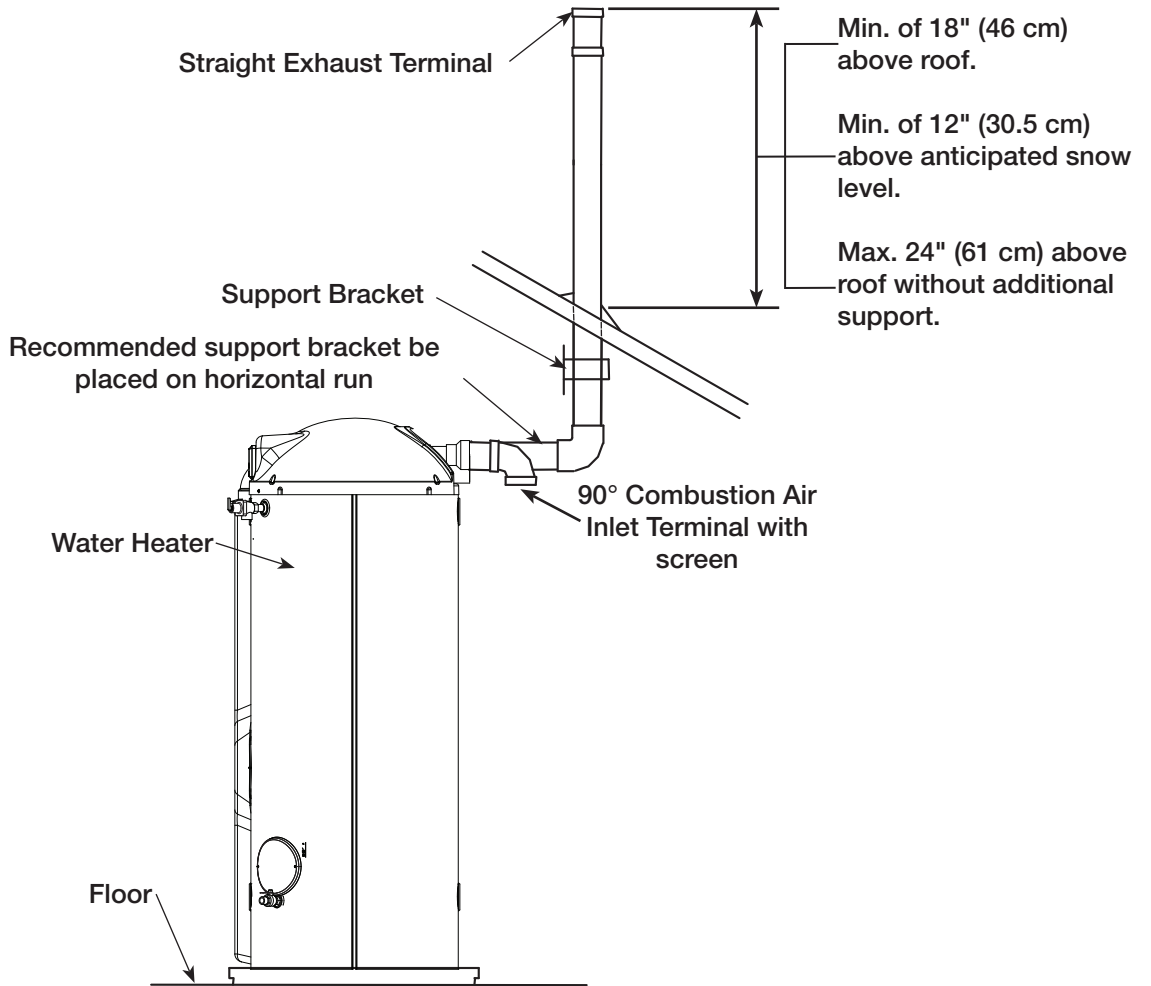

Alternate vertical venting with exhaust vent turned down - preferred for cold climates.

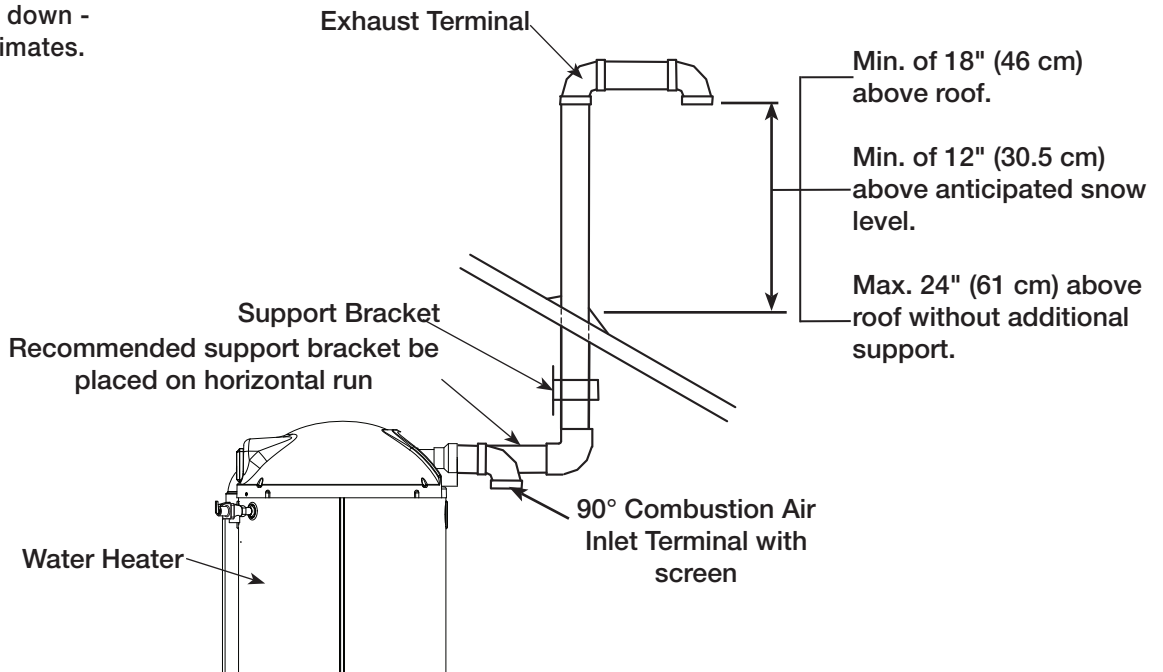

# Installation

## CONCENTRIC VENT TERMINAL INSTALLATION: PROCEDURE

Improper installation, adjustment, service, or maintenance can cause property damage, personal injury, or death. Consult a qualified installer, service agency, or the gas supplier for information or assistance.

This kit must be used only for terminating this water heater. **DO NOT** use this termination kit for any other appliance. Using this kit on other appliances and/or water heaters can result in property damage, personal injury, or death.

**NOTICE:** Concentric vent kit requires that the joints be cemented.

## CAUTION



**DO NOT** operate this water heater with the rain cap removed or recirculation of combustion products may occur. Water may also collect inside larger combustion-air pipe and flow to the burner assembly. Failure to follow this warning could result in product damage, or improper operation, personal injury or death.

**DO NOT** use field-supplied couplings to extend pipes. Airflow restriction will occur and the water heater pressure switches may cause intermittent problems.

Kits for US						Kits for Canada (ULC S636 Material)					
		Nominal PVC Dimensions						Nominal PVC Dimensions			
	"A"	"B"	"C"	"D"	"E"		"A"	"B"	"C"	"D"	"E"
3" Vent Kit	39.98"	21"	3"	4" *	2"	3" Vent Kit	36.16" (91.9 cm)	21" (53.3 cm)	3" (7.6 cm)	4" * (10.2 cm)	2" (5.1 cm)
4" Vent Kit	53.75"	34.8"	4"	6" ^	4"	4" Vent Kit	55.96" (142 cm)	38.25" (97.2 cm)	4" (10.2 cm)	6" * (15.2 cm)	4" (10.2 cm)

\*Hole size for nominal 4" PVC would be 5.0" (12.7 cm) in. and for 6" PVC would be 7.0" (17.8 cm) in.

^ The pipe is on 6.3 in. OD, but a 7 in. hole can still be used.

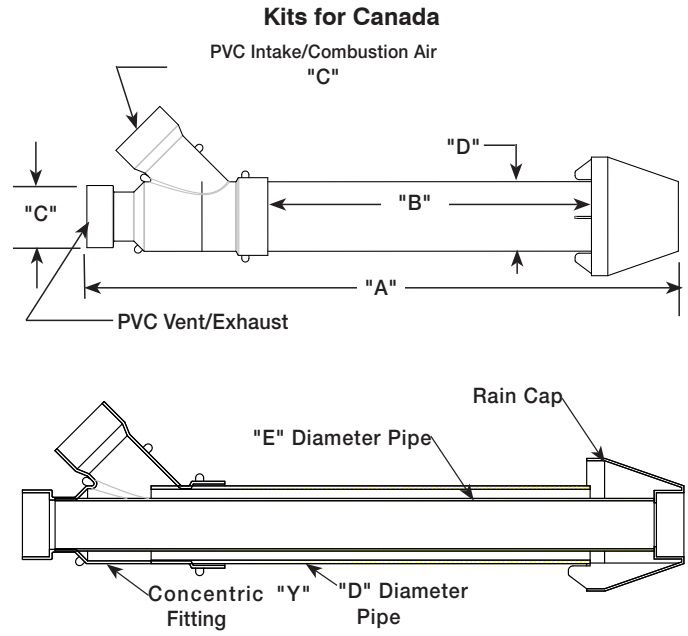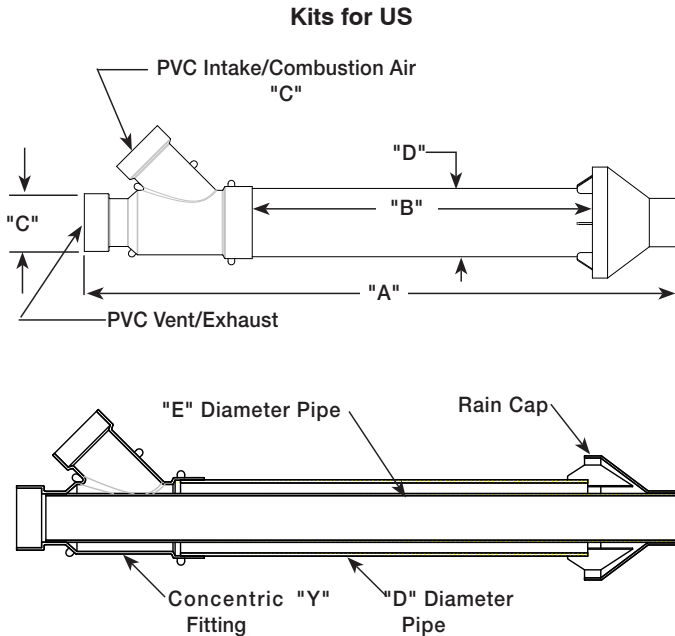

## Installation:

1. Become familiar with concentric vent kit parts (see charts above).
2. Determine the best location for the termination kit.
3. Cut the recommended diameter hole for the nominal PVC pipe size called out in the charts above – Dim. "D".
4. Partially assemble the vent kit by performing the following:
  - a. Cement concentric Y fitting to larger diameter pipe (see charts above).
  - b. Cement rain cap to smaller diameter pipe (see charts above).

# Installation

## ⚠ WARNING

These instructions are intended as an aid to qualified service personnel for proper installation, adjustment, and operation of this kit. Read these instructions thoroughly before attempting installation, adjustment, or operation. Failure to follow these instructions can result in improper installation, adjustment, service, or maintenance possibly resulting in fire, electrical shock, property damage, personal injury, or death.

## ⚠ WARNING

This kit is to be used only for vent & combustion air-inlet termination for PowerDirectVent Gas Water Heaters. **DO NOT** use this kit to terminate any other type of appliance. Failure to follow this warning could result in fire, personal injury, or death.

**LOCATION:** The Concentric Vent & Combustion Air-Inlet Termination Kit can be installed in a horizontal or vertical (roof) orientation. Before installation procedures begin, determine the best location for the termination kit.

**IMPORTANT:** When installing the kit, consider the following when choosing a location:

- Kit is positioned where vent gases will not damage nearby structure.
- Kit is positioned so that wind will not cause combustion products, leaves, snow, or other debris from entering the combustion air-inlet.
- Kit is positioned where it will not get damaged by foreign objects (i.e.: balls, stones, etc.).
- Kit is positioned where vent gases will not be inhaled or cause a nuisance.

**NOTE:** Ensure that the heights of the vent and/or combustion air-inlet openings are above the anticipated snow level (1 ft.).


### HORIZONTAL INSTALLATION

#### STEP 1:

Cut the proper size opening, see "D" in chart in the sidewall and install field supplied weather-seal boot/flashing for PVC pipe.

#### STEP 2:

From inside, insert the combustion air-inlet pipe through the seal boot so that a maximum of 1" clearance occurs between the outside wall and rain cap fins (See Figure 14). Ensure that no insulation or debris accumulate in the pipe.

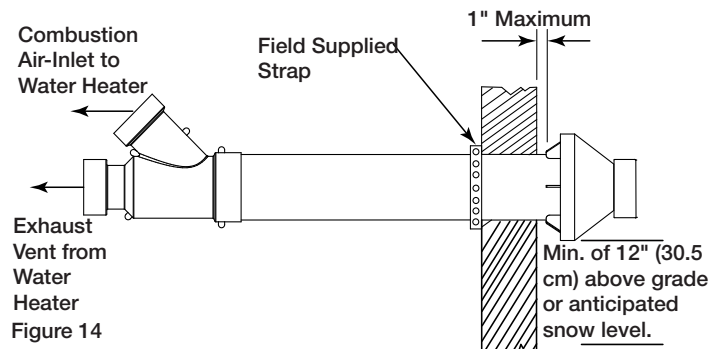

#### STEP 3:

Secure the combustion air-inlet pipe using a field supplied perforated strap or a suitable type material. (See Figure 14)

#### STEP 4:

Assemble the vent pipe assembly by cleaning and cementing the rain cap to the smaller diameter vent pipe.

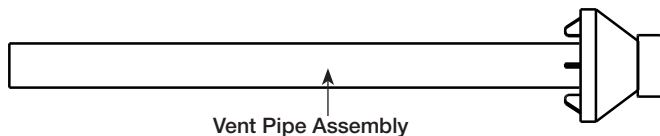


Figure 15

**Note:** If field disassembly is desired for cleaning, a stainless steel screw may be used to secure the rain cap to the PVC vent pipe.

## ⚠ WARNING

When using the alternate screw method, pre-drill a clearance hole in the rain cap slightly larger than the screw and a pilot hole in the vent pipe to prevent cracking of the PVC pipe. Cracking of the PVC components will cause a failure of the system, allowing combustion products to be recirculated. Failure to follow this warning could result in personal injury of death.

## ⚠ WARNING

**DO NOT** operate the water heater with the rain cap and elbow removed or recirculation of combustion products may occur. The vent and combustion air-inlet systems may also take in water, causing damage to the water heater. Failure to follow this warning could result in damage to the unit, improper operation, personal injury, or death.

#### STEP 5:

From the outside, slide the vent pipe assembly through the combustion air-inlet pipe and cement the rain cap to the combustion air-inlet pipe. From the inside, cement the wye fitting to the combustion air-inlet pipe. (See Figure 14 & 15)

#### STEP 6:

Complete the installation of the remainder of the vent and combustion air-inlet systems as required in the Use and Care manual supplied with the water heater.

### VERTICAL INSTALLATION

#### STEP 1:

Cut a proper size opening, see "D" in chart in the roof and install field-supplied weather-seal boot/flashing for the larger PVC pipe.

#### STEP 2:

From inside, insert the larger diameter combustion air-inlet pipe up through the seal boot, ensuring that no insulation or debris accumulate in the pipe. Ensure termination height is above the 12" minimum clearance anticipated snow level.

# Installation

## STEP 3:

Secure the combustion air-inlet pipe using a field supplied perforated strap or a suitable type material. (See Figure 16)

## STEP 4:

Assemble the vent pipe assembly by cleaning and cementing the rain cap to the smaller diameter exhaust pipe. Assemble the 90° elbow by cleaning and cementing to the rain cap. Assemble the field supplied PVC connector and 90° elbow by cleaning and cementing together as shown in Figure ?. The alternate screw method is not necessary for the field supplied PVC parts.

Note: If field disassembly is desired for cleaning, a stainless steel screw may be used to secure the rain cap to smaller diameter exhaust pipe.

## ⚠ WARNING

When using the alternate screw method, pre-drill a clearance hole in the rain cap slightly larger than the screw and a pilot hole in the vent pipe to prevent cracking of the PVC pipe. In a separate location, pre-drill a slightly larger clearance hole in the 90° elbow and a pilot hole in the rain cap for the screw being used at that site. Cracking of the PVC components will cause a failure of the system, allowing combustion products to be recirculated. Failure to follow this warning could result in personal injury or death.

## ⚠ WARNING

DO NOT operate the water heater with the rain cap removed or recirculation of combustion products may occur. The vent air pipes may also take in water, causing damage to the water heater. Failure to follow this warning could result in damage to the unit, improper operation, personal injury, or death.

## STEP 5:

From the roof top, slide the vent pipe assembly down through the intake pipe and cement the rain cap to the intake pipe. From the inside, cement the wye fitting to the intake pipe. (See Figure 16)

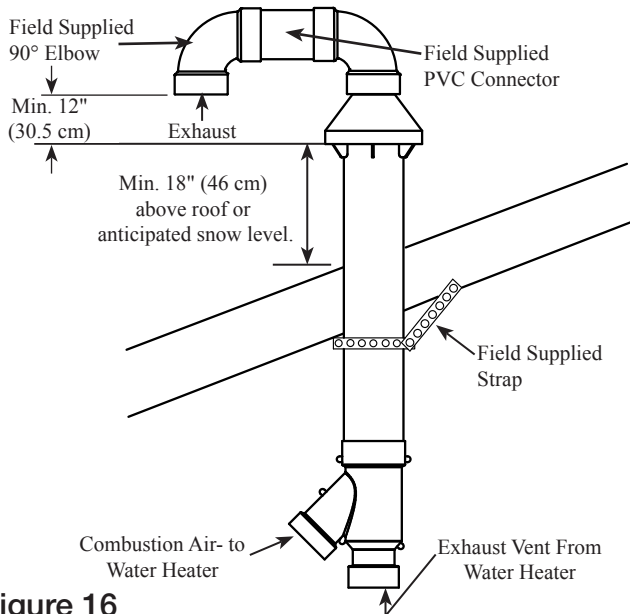


Figure 16

Figure 17 Multiple Sidewall or Vertical Concentric Vents


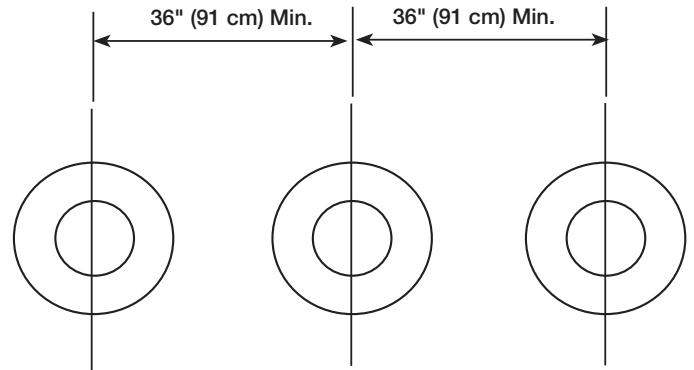


Figure 17A Multiple Sidewall Concentric Vents

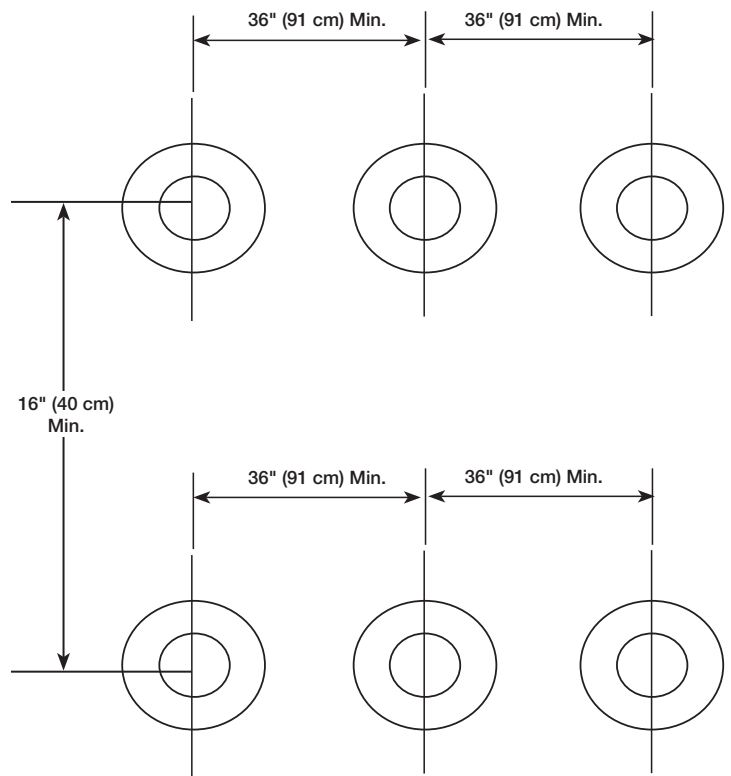

## STEP 6:

Complete the installation of the remainder of the vent and air intake systems as required in the Use and Care manual supplied with the water heater.

# Installation Check List

## A. Water Heater Location

- Close to area of vent.
- Indoors and protected from freezing temperatures.
- Proper clearance from combustible surfaces observed and water heater not installed on carpeted floor.
- Air supply free of corrosive elements and flammable vapors.
- Provisions made to protect area from water damage.
- Sufficient room to service heater.

## B. Water Supply

- Water heater completely filled with water.
- Water heater and piping air vented.
- Water connections tight and free of leaks.

## C. Gas Supply

- Gas line equipped with shut-off valve, union, and sediment trap/drip leg.
- Approved pipe joint compound used.
- Minimum pipe size of 3/4", NO flex pipe.
- Recommended a minimum of 10" WC inlet pressure for Natural Gas.
- Soap and water solution used to check all connections and fittings for possible gas leak.
- Gas Company inspected installation (if required).

## D. Relief Valve

- Discharge line run to open drain.
- Discharge line protected from freezing.

## E. Venting

- All pipe connections are secure (at blower, vent terminals and for each pipe joint connection), and proper support of all pipe.
- Vent terminals mounted properly in allowed locations, with proper clearances .

## F. Condensate

- Condensate trap installed and primed.
- Install condensate neutralizer where required.

## G. Wiring

- Correct power supply (120 VAC).
- Electrical connections are tight.
- Water heater is properly grounded with proper polarity.

**TABLE 2**  
For U.S. Installations  
Maximum Capacity of Pipe in Cubic Feet of Gas per Hour for Gas Pressures of  
0.5 psig or Less and a Pressure Drop of 0.3 Inch Water Column  
Based on a 0.60 Specific Gravity Natural Gas; If 1.5 Specific Gravity L.P. Gas is used, multiply capacity by 0.63

Nominal Iron Pipe Size Inches	Internal Diameter Inches	Length of Pipe, Feet													
		10	20	30	40	50	60	70	80	90	100	125	150	175	200
3/4	.824	278	190	152	130	115	105	96	90	84	79	72	64	59	55
1	1.049	520	350	285	245	215	195	180	170	160	150	130	120	110	100
1 1/4	1.380	1,050	730	590	500	440	400	370	350	320	305	275	250	225	210
1 1/2	1.610	1,600	1,100	890	760	670	610	560	530	490	460	410	380	350	320
2	2.067	3,050	2,100	1,650	1,450	1,270	1,150	1,050	990	930	870	780	710	650	610
2 1/2	2.469	4,800	3,300	2,700	2,300	2,000	1,850	1,700	1,600	1,500	1,400	1,250	1,130	1,050	980
3	3.068	8,500	5,900	4,700	4,100	3,600	3,250	3,000	2,800	2,600	2,500	2,200	2,000	1,850	1,700
4	4.026	17,500	12,000	9,700	8,300	7,400	6,800	6,200	5,800	5,400	5,100	4,500	4,100	3,800	3,500

Maximum Pipe Capacity for Installations in Canada, refer to CAN/CSA B149.1.

For Natural Gas see Tables A.1 to A.17

For Propane (LP) Gas see Tables B.1 to B.12



# Operation

Before operating this water heater, be sure to read and follow the instructions on the label pictured below and all other labels on the water heater, as well as the warnings printed in this manual. Failure to do so can result in unsafe operation of the water heater resulting in property damage, bodily injury, or death. Should you have any problems reading or following the instructions in this manual, STOP, and get help from a qualified person.

## FOR YOUR SAFETY READ BEFORE OPERATING

**WARNING:** If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life


- A. This appliance is equipped with an ignition device which automatically lights the burner. DO NOT try to light the burner by hand.
- B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
- WHAT TO DO IF YOU SMELL GAS**
- Do not try to light any appliance
  - Do not touch any electrical switch; do not use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to turn the gas control knob. Never use tools. If the knob will not turn by hand, don't try to repair it, call a qualified service technician. Force or attempt to repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

## OPERATING INSTRUCTIONS

1. STOP! READ THE SAFETY INFORMATION ABOVE ON THIS LABEL.
2. SET THE "ON/OFF" SWITCH NEXT TO THE CONTROL DISPLAY TO THE "OFF" POSITION.
3. THIS APPLIANCE IS EQUIPPED WITH AN IGNITION DEVICE WHICH AUTOMATICALLY LIGHTS THE BURNER.
7. WATER TEMPERATURE ADJUSTMENT IS APPROXIMATELY 120° F. SET THE THERMOSTAT TO THE DESIRED TEMPERATURE SETTING.

### DO NOT TRY TO LIGHT THE BURNER BY HAND

4. IF YOU THEN SMELL GAS, STOP! FOLLOW "B" IN THE SAFETY INFORMATION ABOVE ON THIS LABEL. IF YOU DON'T SMELL GAS, GO TO THE NEXT STEP.
5. TURN ON ELECTRICAL POWER TO THE APPLIANCE SWITCH LOCATED TO THE LEFT OF THE CONTROL DISPLAY.
6. IF THE APPLIANCE WILL NOT OPERATE, FOLLOW THE INSTRUCTIONS "TO TURN OFF GAS TO APPLIANCE"

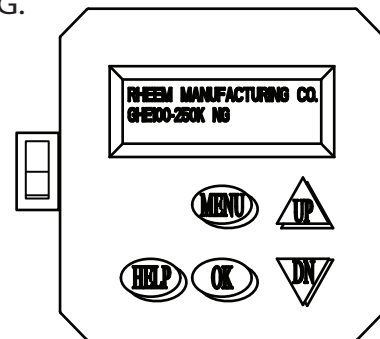

**CAUTION:** HOTTER WATER INCREASES THE RISK OF SCALD INJURY. CONSULT THE INSTRUCTION MANUAL BEFORE CHANGING TEMPERATURE.

**WARNING:** TURN OFF ALL ELECTRIC POWER BEFORE SERVICING.

## TO TURN OFF GAS TO APPLIANCE

1. TURN OFF ALL ELECTRIC POWER TO THE APPLIANCE IF SERVICE IS TO BE PERFORMED.
2. TURN THE "MANUAL GAS VALVE KNOB" TO THE "OFF" POSITION.

# Operation

## SAFETY PRECAUTIONS

- A. Do not turn off manual gas shut-off valve if water heater has been subjected to over heating, fire, flood, physical damage or if gas supply fails to shut off.
- B. **DO NOT** turn on water heater unless it is filled with water.
- C. **DO NOT** turn on water heater if cold water supply shut-off valve is closed.
- D. **DO NOT** store or use gasoline or other flammable vapors and liquids, such as adhesives or paint thinner, in vicinity of this or any other appliance. If such flammables must be used, open doors and windows for ventilation, and all gas burning appliances in vicinity should be shut off, including their pilot lights, to avoid vapors igniting.

**NOTICE: Flammable vapors may be drawn by air currents from surrounding areas to the water heater.**

- E. **DO NOT** allow combustible materials such as newspaper, rags or mops to accumulate near water heater.

- F. If there is any difficulty in understanding or following the OPERATION or MAINTENANCE instructions, it is recommended that a qualified person or serviceman perform the work.

### CAUTION

**Hydrogen gas can be produced in a hot water system served by this water heater that has not been used for a long period of time (generally two weeks or more). HYDROGEN GAS IS EXTREMELY FLAMMABLE!! To dissipate such gas and to reduce risk of injury, it is recommended that the hot water faucet be opened for several minutes at the kitchen sink before using any electrical appliance connected to the hot water system. If hydrogen is present, there will probably be an unusual sound such as air escaping through the pipe as the water begins to flow. DO NOT smoke or use an open flame near the faucet at the time it is open.**

### Quick Guide for Water Heater Operating Conditions:

#### Min. Inlet Gas Pressure (at gas valve, during ignition to full input):

Natural Gas:	5.3 In. WC
LP Gas:	11.0 In. WC

#### Max. Inlet Gas Pressure (at gas valve, during ignition to full input):

Natural Gas:	10.5 In. WC
LP Gas:	13.0 In. WC

#### Electrical:

120 Vac, 60 Hz., 6 amp min. powered required

#### Basic Clearances for Water Heaters:

To combustibles: 0" for sides and back; 6" for top  
Recommended for service: 24" for front and top

water temperature is recommended. Contact a licensed plumber or the local plumbing authority for further information.

Outlet water temperature will vary during normal operating cycles. Reliable temperature readings should be taken shortly after main burner cycles off during a period of little or no use.

### 3. EMERGENCY SHUTDOWN —

### WARNING

**Should overheating occur or the gas supply fail to shut off, turn off the manual gas control valve to the appliance.**

**DO NOT** use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

If the water heater has been subjected to fire or physical damage, turn off gas at the manual gas control (shut-off) valve. **DO NOT** operate the water heater again until it has been checked out by a qualified service technician.

- 1. **TEMPERATURE SETTINGS** — The temperature is adjusted to 120° F when shipped from the factory. To meet commercial water use needs, it is adjustable up to 185° F (85° C). However, water temperatures over 125° F (52° C) can cause severe burns instantly or death from scalds. This is the preferred starting point for setting the control for supplying general purpose hot water.

Safety and energy conservation are factors to be considered when setting the water temperature. The most energy efficient operation will result when the temperature setting is the lowest that satisfies the needs consistent with the application.

### DANGER

**Hotter water increases the Potential for Hot Water SCALDS. When this water heater is supplying general purpose hot water requirements for individuals, a thermostatically controlled mixing valve for reducing point of use**

# User Interface

Overview of the functionality provided by each button of the user interface.

**MENU:** To enter user menu mode for access to Temperatures, Heater Status, and Heater Information.

**UP/DN:** To navigate through heater menus for adjustment of settings.

**OK:** To confirm storage of adjustments to system settings.

**HELP:** Access to heater information in the event of a system fault.

**DISPLAY WINDOW:** Provides information as changes are made to control.

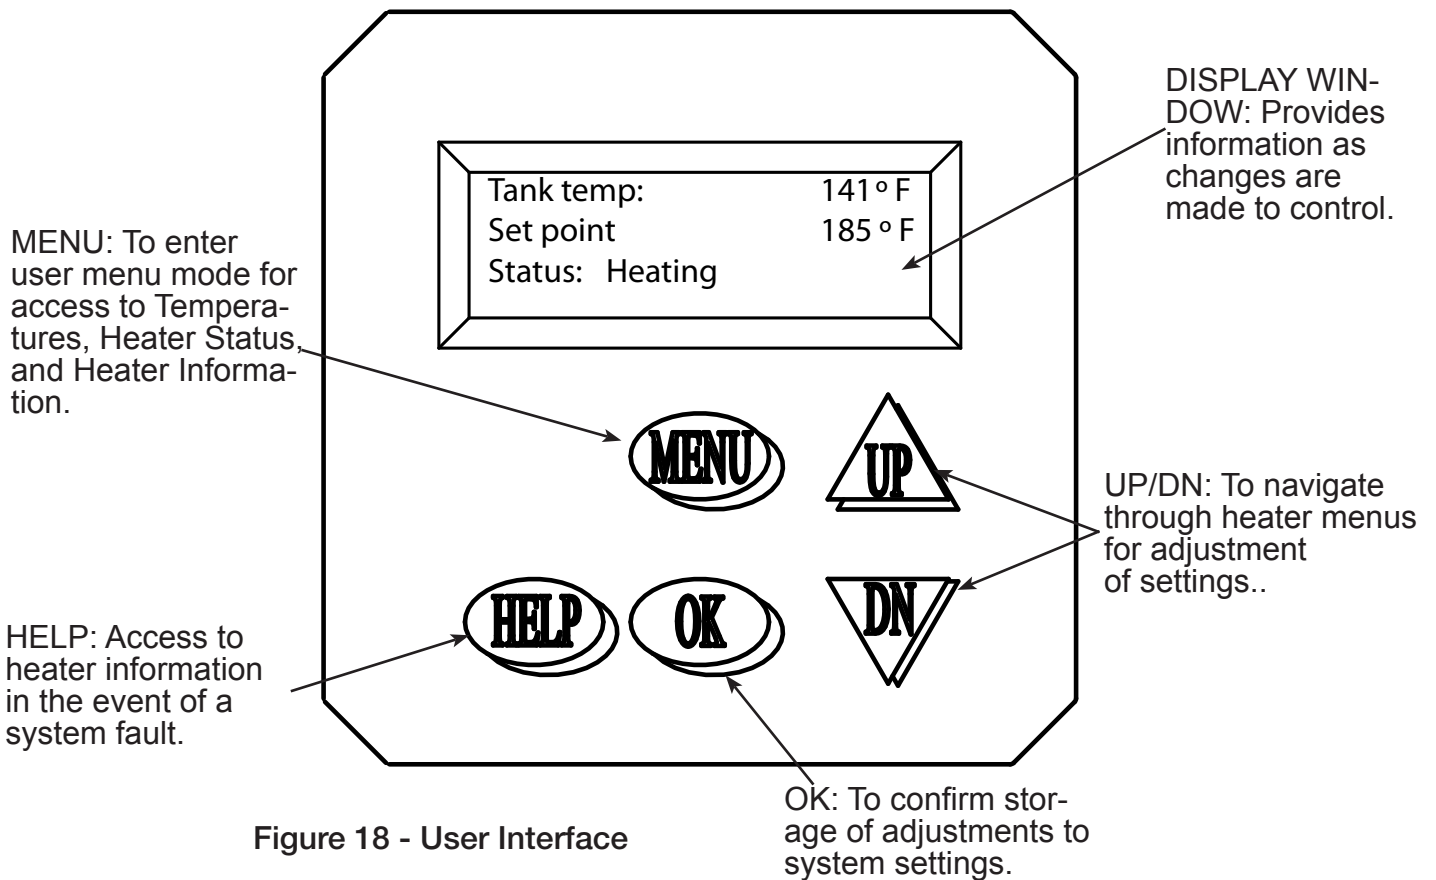


Figure 18 - User Interface

# User Interface

## Temperature Adjustment :

Enter Menu Mode by pressing the “MENU” button on the LCD interface screen, see Figure 18.

Press the UP or DN button to move the arrow to the Temperatures header. Press OK to enter the Temperatures submenu, see Figure 19.



Figure 19 Menu Mode




← Water Temperature Setting

Figure 20 Temperatures Menu  
Press the MENU button to return to MAIN MENU screen.

To adjust the water temperature set point, press the OK button. The Set Point value will begin blinking( see Figure 20 above ). Press the UP or DN buttons to change the value of the Set Point. Press the OK button to con-

firm the setting. The interface automatically moves to the next adjustable parameter (Differential setting) wherein such parameter will begin blinking.

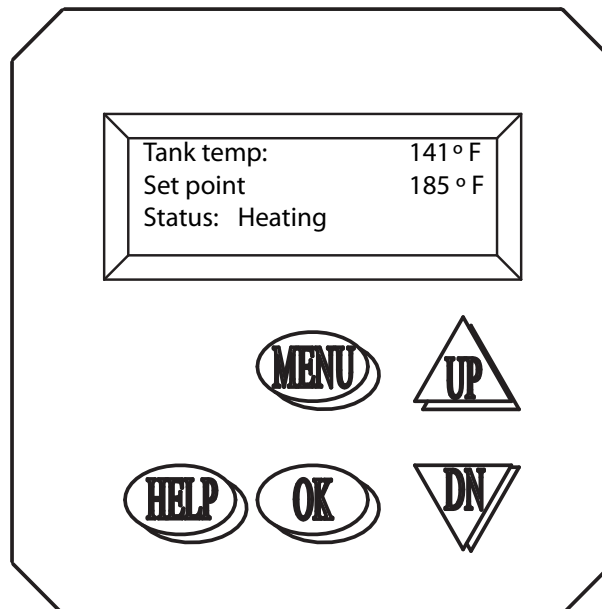

# Maintenance

Properly maintained, this water heater will provide years of dependable, trouble free service. It is strongly suggested that a regular routine maintenance program be established and followed by the owner. It is further recommended that a periodic inspection of the relief valve and venting system should be made by service technicians qualified in gas appliance repair.

## 1. ROUTINE PREVENTIVE MAINTENANCE

A. **PRESSURE SWITCH** — Inspect the inlet to the pressure switch and the tubing for debris or blockage. Clean out the tubing periodically to prevent buildup of debris.

B. **COLLECTOR PAN** — Remove any particles.

C. **CONDENSATE TRAP** — Check for blockages.

D. **ELECTRICAL CONNECTIONS** — Periodic inspection of all electrical connections and wiring conditions.

### CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

## VERIFY PROPER OPERATION AFTER SERVICING !

### CAUTION

Make certain all power to the water heater is turned "OFF" before performing any maintenance or inspection work on this water heater.

Before manually operating the relief valve, make certain no one will be exposed to the danger of coming in contact with the hot water released by this valve. The water may be hot enough to create a SCALD hazard. The water released should be directed to a suitable drain to prevent injury or damage.

**NOTICE:** If the temperature and pressure relief valve on the water heater discharges periodically, this may be due to thermal expansion in a "closed" water system. Contact the water supplier or local plumbing inspector on how to correct this. **DO NOT** plug the relief valve outlet.

E. **TANK**— Good maintenance requires that the tank be cleaned of deposits. Unless the water supply is soft (0 to 5 grains hardness), scale or lime deposits will accumulate in the tank. Hard water scale is deposited at an increasingly high rate in proportion to increased water temperature. Accumulation of these deposits may reduce efficiency, and shorten the life of the water heater.

Any new installation should have a tank inspection program set up initially for frequent inspection. The first inspection should be within a six month period. Once the scaling tendencies have been established, the inspection program can be modified to suit the water conditions. Cleaning should be performed if the scale has accumulated above the drain valve opening.

A wet-dry shop vac with a nozzle fashioned from 1" and/or 3/4" polyethylene pipe makes a good tool for scraping and removing scale.

## TO CLEAN OR INSPECT TANK:

1. Shut off gas valve and drain tank.
2. Remove tank clean-out cover on jacket and with pocket knife cut and remove a circular plug of insulation the full size of jacket opening.
3. Loosen nut on seal plate assembly enough to twist yoke sideways. Hold assembly securely and push inward, then remove from tank.
4. Remove as much built-up scale from flue tubes and tank bottom as practical. Do not allow cleaning tool to damage the glass lining.
5. Clean the seal plate and install a new gasket. Wipe clean the interior surface of the tank that contacts the gasket. Reinstall the seal plate and tighten in position. Fill tank with water and check for leaks. If no leaks are found, install insulation plug and clean-out cover on jacket and re-light the water heater.

If chemical lime dissolving cleaners are preferred, cautiously follow the instructions supplied with the cleaner. **DO NOT** use a muriatic or hydrochloric acid (HCl) base cleaner.

2. **ANODE INSPECTION** — The water supply in certain areas contains very aggressive elements. In these areas, periodic inspection of the anode is recommended to determine if replacement is necessary. The anode(s) supplied in this water heater is slowly consumed, thereby eliminating or minimizing corrosion and protecting the glass lined tank. The anode(s) should be replaced when more than 6 inches (15 cm) of core wire is exposed at either end.

**NOTE:** Work should only be done by a qualified service person.

3. **SEASONAL OPERATION** - If the water heater is to remain idle for an extended period (60 days or more) the heater should be turned off. The water heater and piping should be drained if they might be subjected to freezing temperatures. It is recommended that the water heater's operation is thoroughly checked (by a qualified service technician) before it is placed back in service. **NOTICE:** Refer to the Hydrogen Gas caution notation on page 24.


- F. **VENTING SYSTEM** — Inspect venting system at least yearly to make certain the passageways are free and unobstructed, and that the vent connector from the water heater's blower assembly is properly positioned and securely attached. Remove any obstructions in vent connector or vent terminal.

# Before You Call For Service...



## Troubleshooting Tips

Save time and money! Review the charts on the following pages first and you may not need to call for service.

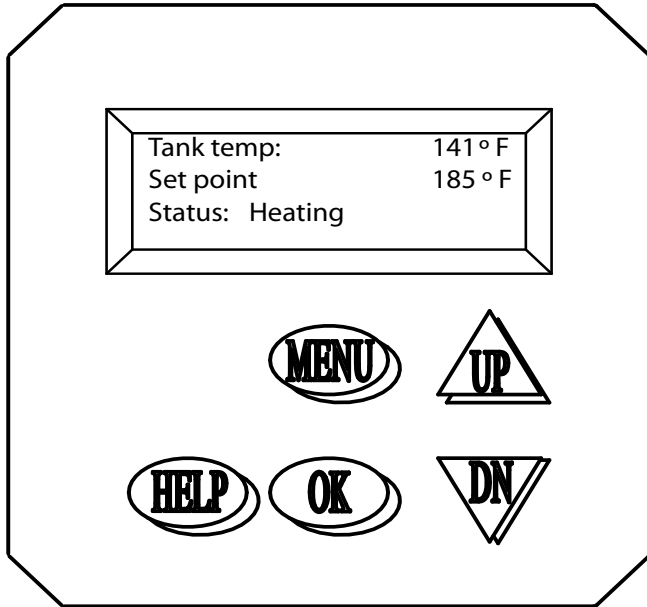

If the screen on the display is flashing, the burner did not light. To reset the ignition sequence, press the "HELP" button and then the "OK" button (see Display screen at left). On initial startup, it might be necessary to clear the "flashing" screen two or three times, to make sure that the gas has made its way to the burner. If the unit has been operating and then shows the flashing display, then there is another issue to be resolved (unless gas has been off).

Problem	Possible Causes	What To Do	
Display not on	Is there power to unit?	Verify that there is 120 Vac to Control Board.	
	Is display not completely installed?	Make sure that the two pins on the back of the display are inserted into circuit board.	
	Is harness from control board connected?	Make sure that wire harness from Control Board is still connected.	
Blower does not run	No power to blower motor.	Verify power to Control Board and that all harnesses to the blower are properly installed. Make sure that there is no damage to harness or connectors.	
Unable to light the main burner	Air in gas line.	Let the unit cycle at least 3 times to remove air from gas line. If unit does not try to light, contact a qualified service technician to purge the air from the gas line.	
	Manual gas shut-off valve(s) not open.	Check to make sure that all manual shut-off valves between unit and gas line are open.	
	Blocked inlet or exhaust vent pipe	Contact a qualified service technician to evaluate vent pipes for blockage.	
	Pressure switch		Make sure the pressure switch hoses are not "kinked" or disconnected.
			Blocked inlet or outlet vent systems will cause pressure switch to shut off unit. Contact a qualified service technician to evaluate vent system.
Wire connection not fully secured		Contact a qualified service technician to confirm wire connections.	

# Before You Call For Service...



## Troubleshooting Tips

Save time and money! Review the charts on the following pages first and you may not need to call for service.

Problem	Possible Cause	What To Do
Unable to light the main burner	Gas Control Problem.	Contact a qualified service technician.
	Incorrect wiring polarity.	Make sure that the electrical supply line is wired properly.
	Unit or electrical supply line not properly grounded.	Verify that electrical supply line and unit have proper ground connection.
Main burner does not stay lit	Burner flame not contacting sensor rod.	Call a qualified service technician to review flame rectification.
	Unit or electrical supply line not properly grounded.	Verify the electrical supply line and unit have proper ground connection.
Not enough or no hot water	Water usage may have exceeded the capacity.	Wait for the water heater to recover after an abnormal demand of the water heater.
	Low gas pressure.	Check gas supply pressure.
	The display setting may be set too low.	See the "User Interface" section of this manual to set water temperature.
	Leaking or open hot water faucets.	Make sure all faucets are closed
	"ON/OFF" switch turned off.	Turn switch "ON"
	Colder supply water.	Incoming water temperature might be lower than when the unit was initially installed. This will require longer heat up cycle.
	Burner not staying on.	Refer to "Main Burner" section.
Water is to hot	The display setting is set too high.	See the "User Interface" section of this manual to set water temperature.

### **⚠ CAUTION**

Make certain power to water heater is "OFF" before removing protective cover FOR ANY REASON.

### **⚠ CAUTION**

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. **VERIFY PROPER OPERATION AFTER SERVICING!**

### **⚠ CAUTION**

For your safety **DO NOT** attempt repair of gas piping, gas control burner, vent connectors or other safety devices. Refer repairs to qualified service personnel.

**NOTE:** A GHE/THE Training Manual is available through the Technical Services Department for a more detailed Troubleshooting and Repair Guide.

## Before You Call For Service...

'A' Code	Description	Screen Display
1	Three unsuccessful ignition attempts in a row then 1 hour lockout, three more unsuccessful ignition attempts and then 1 hour lockout, three more ignition attempts and then hard lockout.	A01 ignition Error Heater did not light Call Tech Service Press OK to reset
2	Three times flame lost during one demand	A02 Burner flame is Not stable Call Tech Service Press OK to reset
3	Overheat stat is open	A03 High Water Temp.Im- mediate Lock Out Call Tech Service
6	No pressure in burn state for 3 times. Caused by either intake or exhaust pressure switch trip 3+3+3 times in the same call for heat. There is 15 seconds between each 3 retries. For intake/exhaust pressures switch errors in other states please refer to A23, A24	A06 Blocked Venting Check venting for Obstructions Press Help
7	3 times reset at 90 volts	A07 Low volt to unit Call Electrician Press OK to reset
8	Proof of fan pressure switch tripped 3+3+3 times in burn state in a single heat call. There is 15 seconds between each 3 retries. For PoF errors in other states please refer to A25,A26	A08 Proof of Fan err Check air flow for obstructions PRESS HELP
19	Flame still present 10 sec. after closing the gas valve	A19 Flame sncse wo ht Immediate Lock Out! Call Tech Service PRESS HELP
20	Flame detected just before gas valve opened	A20 Flame sncse wo ht Immediate Lock Out! Call Tech Service PRESS HELP
23	Blocked flue switch during Post purge	A23 Pressure Switch Check wiring To pressure switch
24	Blocked flue switch during Pre purge	A24 Pressure Switch Check wiring To pressure switch
25	Air flow switch error pre purge	A25 POF Switch Check Blower and Air Flow Proving Switch Press OK to reset
26	Air flow switch error post purge	A26 POF Switch Check Blower and Air Flow Proving Switch Press OK to reset
33	Fan deviation more than 300 rpm longer than 1 minute (when fan speed > 4200 rpm this error is ignored)	A33 Blower Error Check wiring Connection to Blower Press OK to reset



# Replacement Parts

## Instructions For Placing a Parts Order


All parts orders should include:

The model and serial number of the water heater from the rating plate.


Specify type of gas (natural or LP) as marked on the rating plate.

Part description (as noted below) and number of parts desired.

**CAUTION:** For your safety **DO NOT** attempt repair of gas piping, gas control burner, vent connectors or other safety devices. Refer repairs to qualified service personnel.

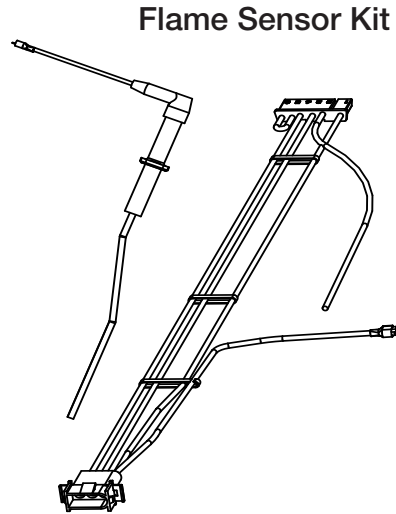

Flame Sensor Kit

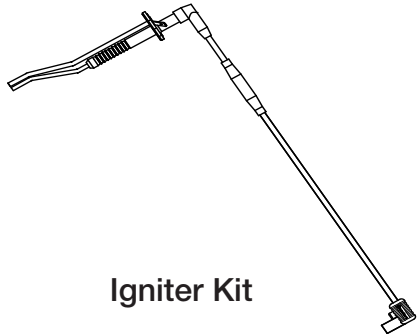

Igniter Kit


Exhaust Gas Temperature Probe

Condensate Trap

On / Off Switch

Blower / Gas Valve / Burner Assembly Kit

This is a Service Part for the blower only or a Service Part for the complete combustion assembly.



Pressure Switch Assembly



Control Board

Service part contains both the control board and display kit.

Display Kit

Anode


Relief Valve

Water Temperature and ECO Probe

Hand Hole (under cover)

Drain Valve

# Wiring and Schematic Diagrams

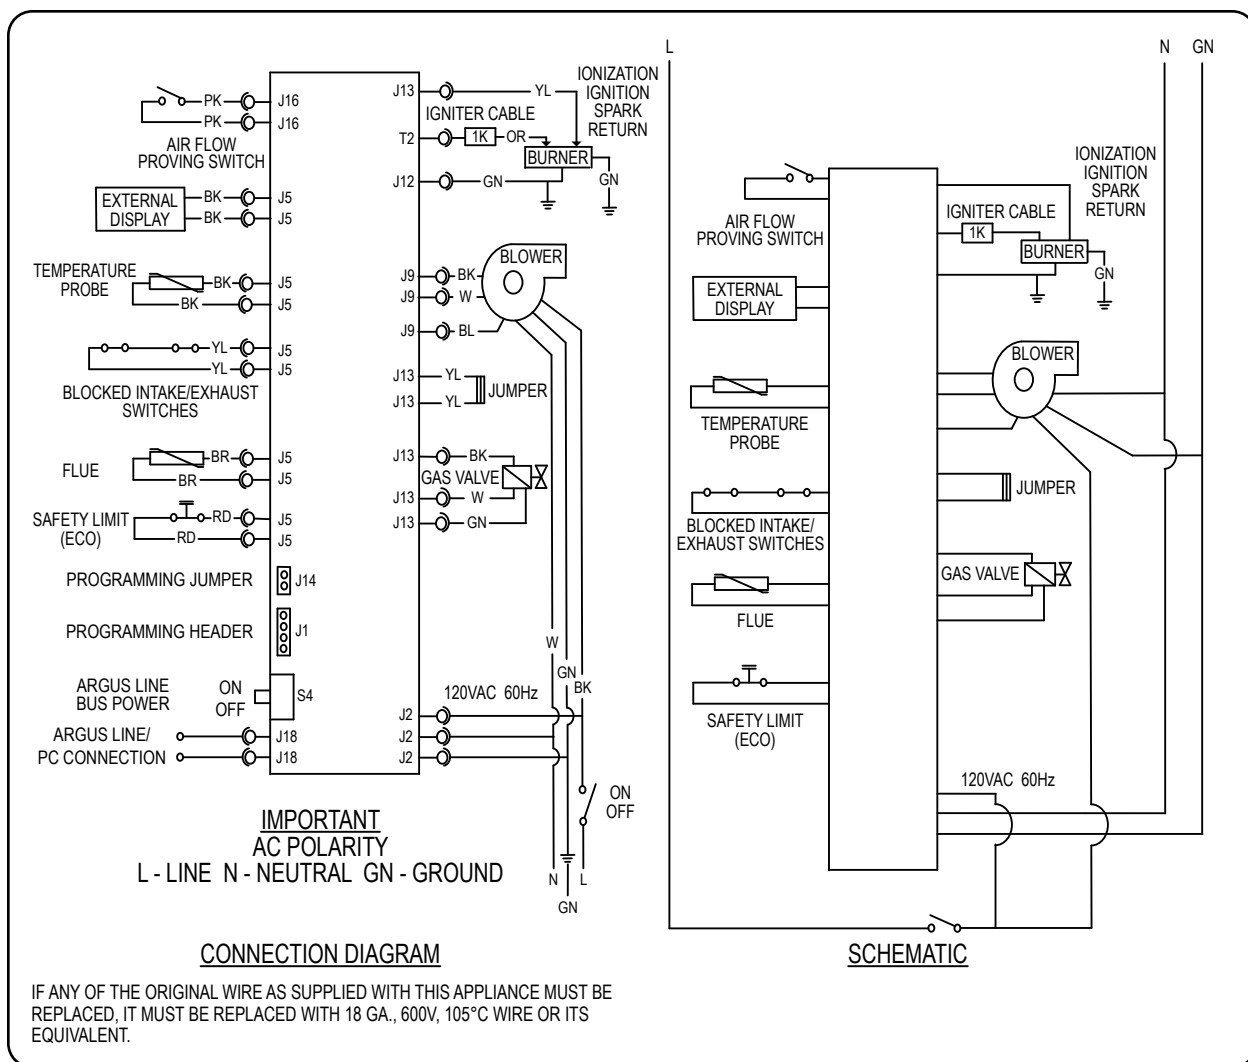

**CAUTION**

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation VERIFY PROPER OPERATION AFTER SERVICING!

---

**NOTES:**

---

# How to Obtain Service Assistance

1. Should you have any questions about your new water heater, or if it requires adjustment, repair, or routine maintenance, it is suggested that you first contact your installer, plumbing contractor or previously agreed upon service agency. In the event that the firm has moved, or is unavailable, refer to the telephone directory commercial listings or local utility for qualified service assistance.
2. Should your problem not be solved to your complete satisfaction, you should then contact the Manufacturer's National Service Department at one of the following address:

In The U.S.A.:

Rheem Manufacturing Co., Water Heater Division  
1241 Carwood Court  
Montgomery, Alabama 36117  
Phone: 1-800-432-8373.

In CANADA:

Rheem Canada, Ltd. / Ltée  
125 Edgeware Road, Unit 1  
Brampton, ON L6Y 0P5  
Phone: 1-800-268-6966.

When contacting the manufacturer, the following information should be made available:

- a. Model and serial numbers of the water heater as shown on the rating plate attached to the jacket of the heater.
- b. Address where water heater is located and can be seen.
- c. Name and address of installer and any service agency who performed service on the water heater.
- d. Date of original installation and dates any service work was performed.
- e. Details of the problem as you can best describe them.
- f. List of people, with dates, who have been contacted regarding your problem.

The following Gasket is required for tank cleanout maintenance for all models:

SP5886 Tank Handhole Sealplate Gasket

All other Parts can be ordered by providing the following information:

1. Description of Part(s), such as:  
Gas Valve  
Igniter  
Burner  
Switch/Sensor  
Blower Assembly  
Anode Rods  
Or other parts as required (see replacement parts section).
2. Quantity of each part required.
3. Complete model number and name of the water heater.
4. Serial Number of water heater.
5. Specify Type of Gas.
6. Address Parts Orders to your distributor or dealer.

**NOTICE:** For installations requiring NSF 5 compliance, order kit AS42690A or B to meet sealing requirements and NSF 5 label.