

INSTALLATION INSTRUCTIONS ROOF JACK EXTENSION KIT

ON CERTAIN INSTALLATIONS WHERE LOCAL CODES REQUIRE THE ROOF JACK (SUPPLIED IN A SEPERATE CARTON) TO BE INSTALLED ABOVE THE PEAK OF THE ROOF (FIGURE 1), IT WILL BE NECESSARY TO INSTALL A ROOF JACK EXTENSION KIT.

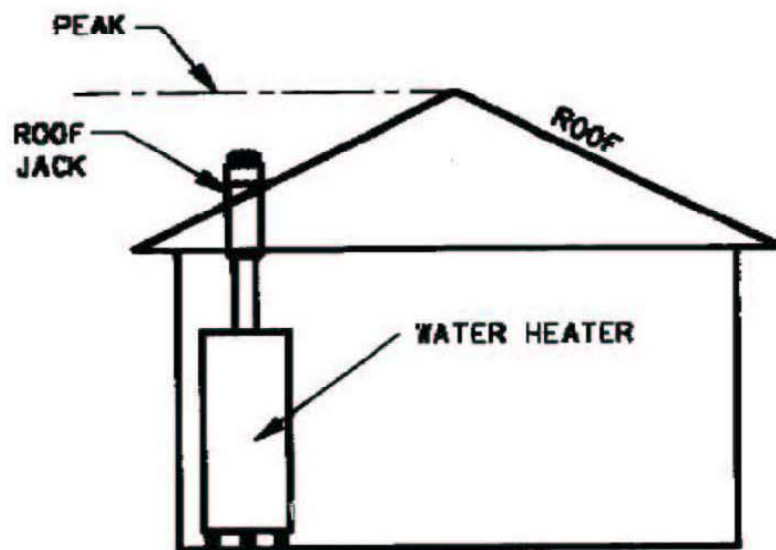


FIGURE 1

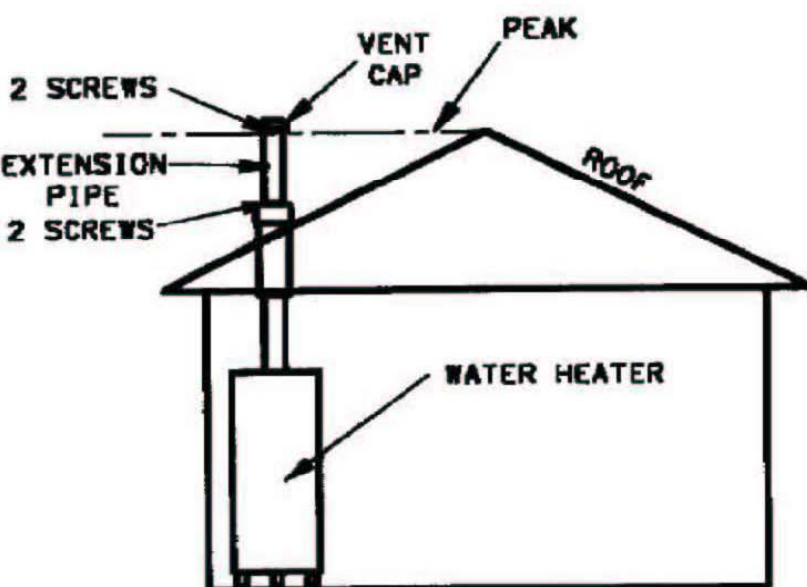


FIGURE 2

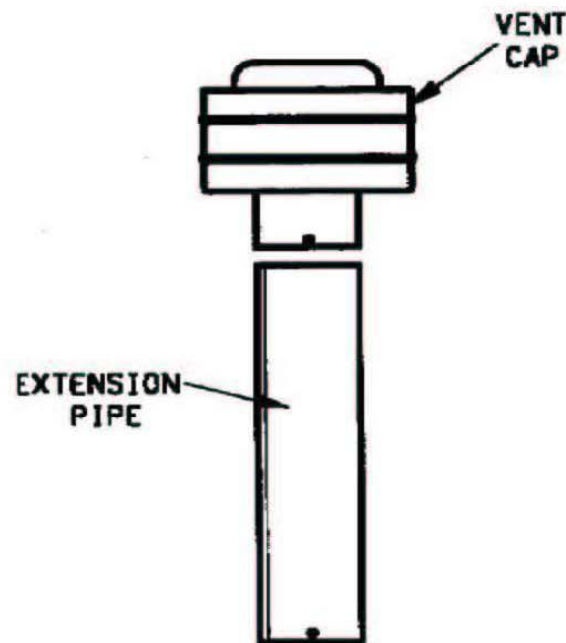


FIGURE 3

1. Remove screws securing the Vent Cap to the Roof Jack Assembly.
2. Install Extension Pipe as shown in figure 2. Rotate pipe 90° from existing holes and drill two 3/32 pilot holes. Secure extension pipe with two screws removed in step 1. "DO NOT" overtighten the screws.
3. Install vent cap over top of extension pipe as shown in figure 3. Move vent cap until it bottoms out on the extension pipe. Drill two 3/32 pilot holes. Secure vent cap with two screws supplied. "DO NOT" overtighten the screws.