




Installation Instructions
Aluminum Outside Termination Vent Kit for AdvantagePlus
SP12162

1. Locate vent terminal location by referencing the guidelines in the use and care manual. Vent kit may be installed in a horizontal or vertical position. Prior planning is essential to proper venting of the AdvantagePlus.
2. Take the vent terminal backing plate off the face removing the four (4) screws located on the long sides of the vent kit.
3. Fasten the backing plate to the face of the building by using the pre-drilled mounting holes on the backing plate.
4. Cut the two holes (3 ½ inches diameter) using the backing plate as a template. Holes must penetrate thru inner wall and outer wall.
5. Install the vent pipes thru the holes making sure there is 2 inches of pipe protruding on the intake and 1-½ inches of exhaust pipe beyond the face of the backing plate. Make sure the ends of the pipe are cut clean and square.
6. Put the face of the vent terminal back in place and reinstall the four (4) mounting screws removed in step #2. (The exhaust portion of the vent pipe will mate into the plastic sleeve on the face piece.)


Typical wall mount installation

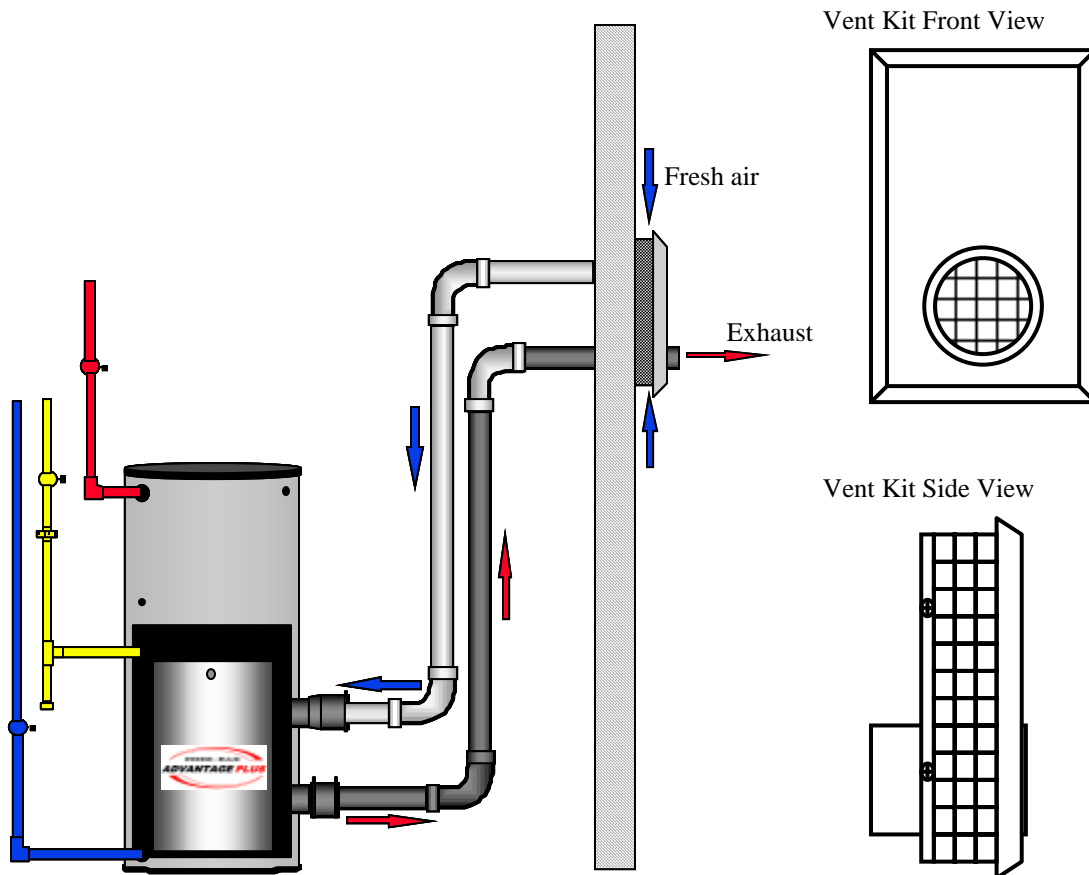




Installation Instructions
Aluminum Outside Termination Vent Kit for AdvantagePlus
SP12162

Mounting Plate:

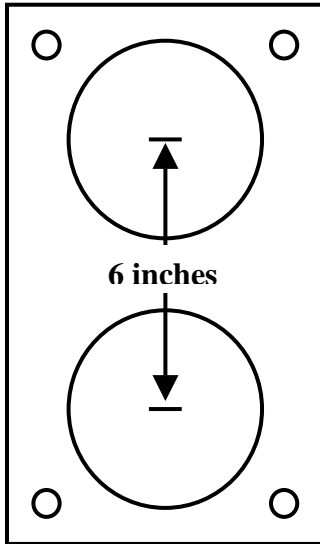

Mounting Plate on Wall

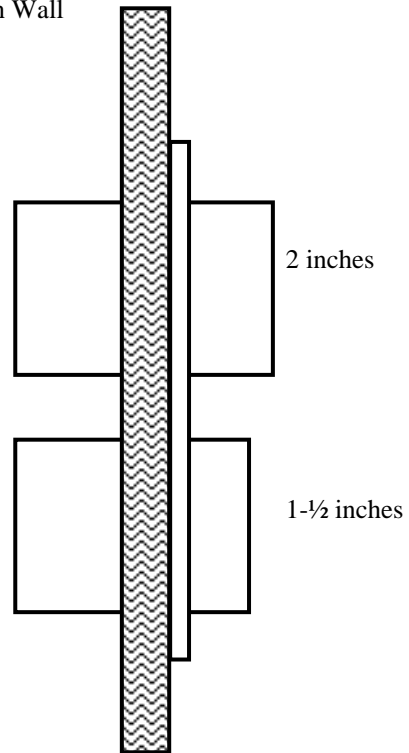

Multiple venting techniques:

