

INSTALLATION INSTRUCTIONS

PACKAGE AIR CONDITIONERS FEATURING NEW INDUSTRY STANDARD
R410A REFRIGERANT ~~R-410A~~

RLNL-B/RLNL-C SERIES 6, 7.5, 8.5, 10 & 12.5 TON [21.1, 26.4, 29.9,
35.2 & 44 kW]
60 HZ MODELS



Recognize this symbol as an indication of Important Safety Information!

DO NOT DESTROY
PLEASE READ CAREFULLY AND KEEP IN A SAFE PLACE
FOR FUTURE REFERENCE.

WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED, LICENSED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS UNIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

I. TABLE OF CONTENTS

I. Table of Contents	2
II. Introduction	2
III. Checking Product Received	2
IV. Equipment Protection	2
V. Specifications	2
A. General	2
B. Major Components	3
C. R-410A Refrigerant	3
Unit Dimensions	4-6
General Data	7-17
Electrical Data	18-22
VI. Installation	23
A. General	23
1. Pre-Installation Check Points	23
2. Location	23
B. Outside Slab Installation	23
C. Clearances	23
D. Rooftop Installation	24
VII. Ductwork	25
VIII. Filters	25
VIX. Conversion Procedure	25
X. Condensate Drain	26
XI. Electrical Wiring	26
A. Power Wiring	26
B. Control Wiring	26
C. Internal Wiring	27
D. Grounding	27
E. Thermostat	27
XII. Indoor Air Flow Data	27
XIII. Crankcase Heat	27
XIV. Pre-Start Check	28
XV. Startup	28
XVI. Operation	29
XVII. Miscellaneous	29
XVIII. Airflow Data Tables	30-34
XIX. Heater Kit Characteristics	35-43
XX. Troubleshooting	44
XXI. Wiring Diagrams	45-52
XXII. Charge Charts	53-58

II. INTRODUCTION

▲ WARNING

THE MANUFACTURER'S WARRANTY DOES NOT COVER ANY DAMAGE OR DEFECT TO THE AIR CONDITIONER CAUSED BY THE ATTACHMENT OR USE OF ANY COMPONENTS, ACCESSORIES OR DEVICES (OTHER THAN THOSE AUTHORIZED BY THE MANUFACTURER) INTO, ONTO OR IN CONJUNCTION WITH THE AIR CONDITIONER. YOU SHOULD BE AWARE THAT THE USE OF UNAUTHORIZED COMPONENTS, ACCESSORIES OR DEVICES MAY ADVERSELY AFFECT THE OPERATION OF THE AIR CONDITIONER AND MAY ALSO ENDANGER LIFE AND PROPERTY. THE MANUFACTURER DISCLAIMS ANY RESPONSIBILITY FOR SUCH LOSS OR INJURY RESULTING FROM THE USE OF SUCH UNAUTHORIZED COMPONENTS, ACCESSORIES OR DEVICES.

This booklet contains the installation and operating instructions for your air conditioner. There are a few precautions that should be taken to derive maximum satisfaction from it. Improper installation can result in unsatisfactory operation or dangerous conditions.

Read this booklet and any instructions packaged with separate equipment required to make up the system prior to installation. Give this booklet to the owner and explain its provisions. The owner should retain this booklet for future reference.

III. CHECKING PRODUCT RECEIVED

Upon receiving the unit, inspect it for any damage from shipment. Claims for damage, either shipping or concealed, should be filed immediately with the shipping company. Check the unit model number, heating size, electrical characteristics, and accessories to determine if they are correct.

IV. EQUIPMENT PROTECTION FROM THE ENVIRONMENT

The metal parts of this unit may be subject to rust or deterioration in adverse environmental conditions. This oxidation could shorten the equipment's useful life. Salt spray, fog or mist in seacoast areas, sulphur or chlorine from lawn watering systems, and various chemical contaminants from industries such as paper mills and petroleum refineries are especially corrosive.

If the unit is to be installed in an area where contaminants are likely to be a problem, special attention should be given to the equipment location and exposure.

1. Avoid having lawn sprinkler heads spray direction on the unit cabinet.
2. In coastal areas, locate the unit on the side of the building away from the waterfront.
3. Shielding provided by a fence or shrubs may give some protection.

Regular maintenance will reduce the buildup of contaminants and help to protect the unit's finish.

▲ WARNING

DISCONNECT ALL POWER TO THE UNIT BEFORE STARTING MAINTENANCE. FAILURE TO DO SO CAN RESULT IN SEVERE ELECTRICAL SHOCK OR DEATH.

1. Frequent washing of the cabinet, fan blade and coil with fresh water will remove most of the salt or other contaminants that build up on the unit.
2. Regular cleaning and waxing of the cabinet with a good automobile polish will provide some protection.
3. A good liquid cleaner may be used several times a year to remove matter that will not wash off with water.

Several different types of protective coatings are offered in some areas. These coatings may provide some benefit, but the effectiveness of such coating materials cannot be verified by the equipment manufacturer.

The best protection is frequent cleaning, maintenance and minimal exposure to contaminants.

V. SPECIFICATIONS

A. GENERAL

The Packaged Air Conditioner is available without heat or with 10, 15, 20, 30, 40 or 50 kW electric heat. Cooling capacities of 6, 7½, 8½, 10 and 12½ nominal tons of cooling are available. Units are convertible from horizontal supply and return to bottom supply and return by relocation of supply and return air access panels. See cover installation detail.

The units are weatherized for mounting outside of the building.

The information on the rating plate is in compliance with the FTC and DOE rating for single phase units. The following information is for three phase units which **are not** covered under the DOE certification program.

1. The efficiency rating of this unit is a product thermal efficiency rating determined under continuous operating conditions independent of any installed system.

B. MAJOR COMPONENTS

The unit includes a hermetically-sealed refrigerating system (consisting of a compressor, condenser coil, evaporator coil with thermal expansion valve), a circulation air blower, a condenser fan, and all necessary internal electrical wiring. The cooling system of these units is factory-evacuated, charged and performance tested. Refrigerant amount and type are indicated on rating plate.

C. R-410A REFRIGERANT

All units are factory charged with R-410A refrigerant.

1. Specification of R-410A:

Application: **R-410A is not a drop-in replacement for R-22;** equipment designs must accommodate its higher pressures. It cannot be retrofitted into R-22 units.

Pressure: **The pressure of R-410A is approximately 60% (1.6 times) greater than R-22.** Recovery and recycle equipment, pumps, hoses and the like need to have design pressure ratings appropriate for R-410A. *Manifold sets need to range up to 800 psig high-side and 250 psig low-side with a 550 psig low-side retard. Hoses need to have a service pressure rating of 800 psig. Recovery cylinders need to have a 400 psig service pressure rating.* DOT 4BA400 or DOT BW400.

Combustibility: At pressures above 1 atmosphere, mixture of R-410A and air can become combustible. **R-410A and air should never be mixed in tanks or supply lines, or be allowed to accumulate in storage tanks. Leak checking should never be done with a mixture of R-410A and air.** Leak checking can be performed safely with nitrogen or a mixture of R-410A and nitrogen.

2. Quick Reference Guide For R-410A

- R-410A refrigerant operates at approximately 60% higher pressure (1.6 times) than R-22. Ensure that servicing equipment is designed to operate with R-410A.

- R-410A refrigerant cylinders are pink.
- R-410A, as with other HFC's is only compatible with POE oils.
- Vacuum pumps will not remove moisture from POE oil.
- R-410A systems are to be charged with liquid refrigerants. Prior to March 1999, R-410A refrigerant cylinders had a dip tube. These cylinders should be kept upright for equipment charging. Post March 1999 cylinders do not have a dip tube and should be inverted to ensure liquid charging of the equipment.
- Do not install a suction line filter drier in the liquid line.
- A liquid line filter drier is standard on every unit.
- Desiccant (drying agent) must be compatible for POE oils and R-410A.

3. Evaporator Coil / TXV

The thermostatic expansion valve is specifically designed to operate with R-410A. **DO NOT use an R-22 TXV. The existing evaporator must be replaced with the factory specified TXV evaporator specifically designed for R-410A.**

4. Tools Required For Installing & Servicing R-410A Models

Manifold Sets:

- Up to 800 PSIG High side
- Up to 250 PSIG Low Side
- 550 PSIG Low Side Retard

Manifold Hoses:

- Service Pressure Rating of 800 PSIG


Recovery Cylinders:

- 400 PSIG Pressure Rating
- Dept. of Transportation 4BA400 or BW400

▲ CAUTION

R-410A systems operate at higher pressures than R-22 systems. Do not use R-22 service equipment or components on R-410A equipment.

**FIGURE 1
UNIT DIMENSIONS**

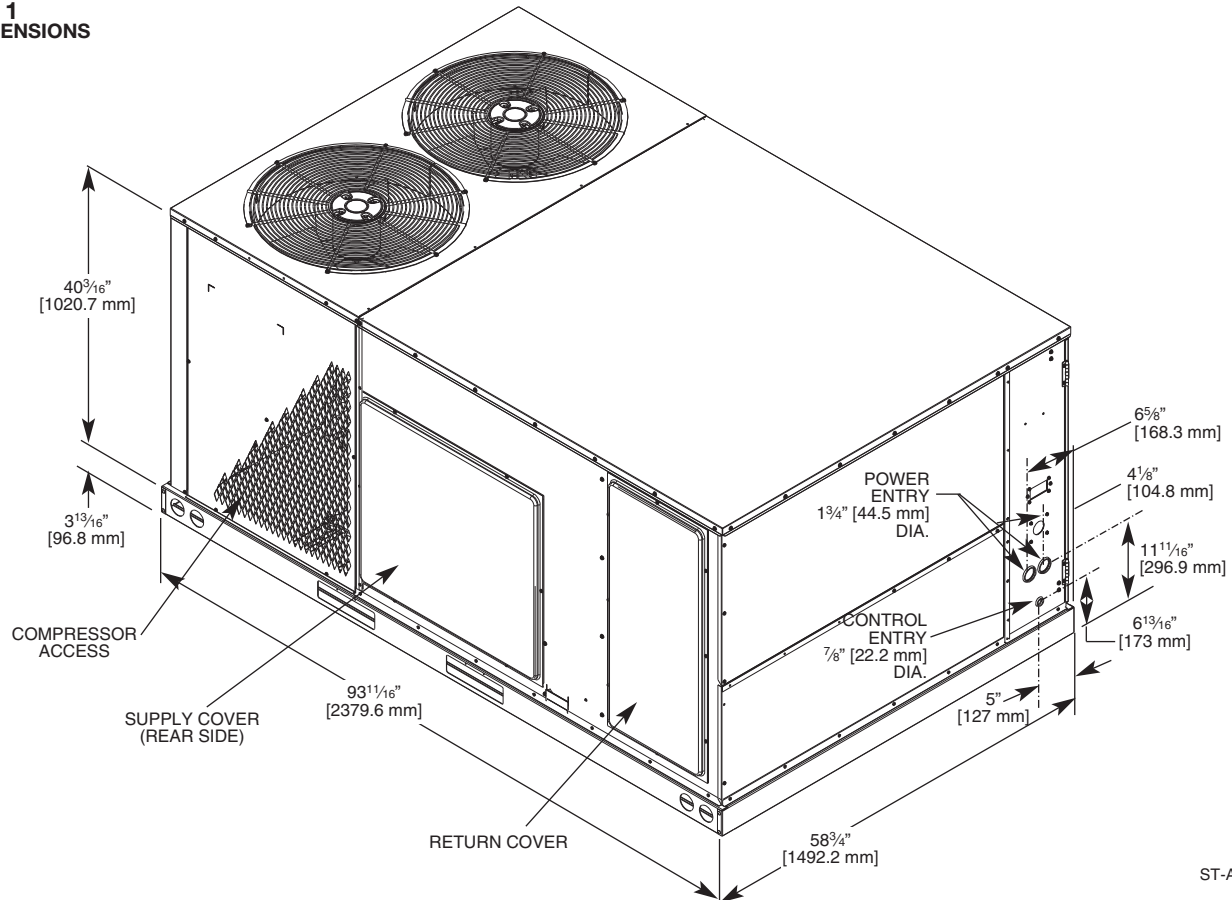

**FIGURE 2
UNIT DIMENSIONS**

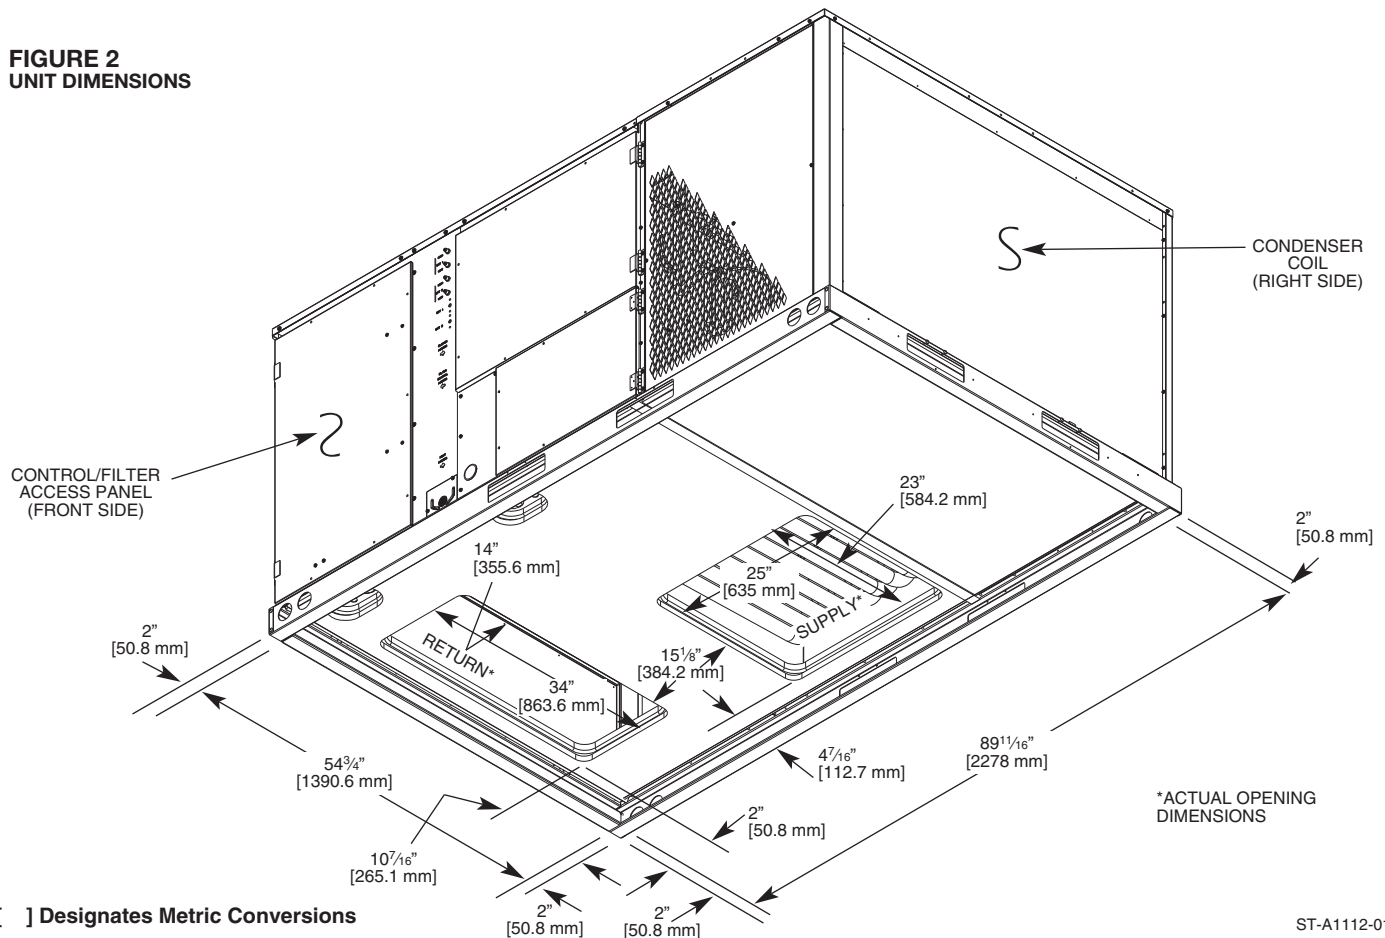


FIGURE 3




FIGURE 4
BOTTOM VIEW

SUPPLY RETURN DIMENSIONS FOR DOWNFLOW APPLICATIONS



FIGURE 5
REAR VIEW

SUPPLY AND RETURN DIMENSIONS FOR HORIZONTAL APPLICATION

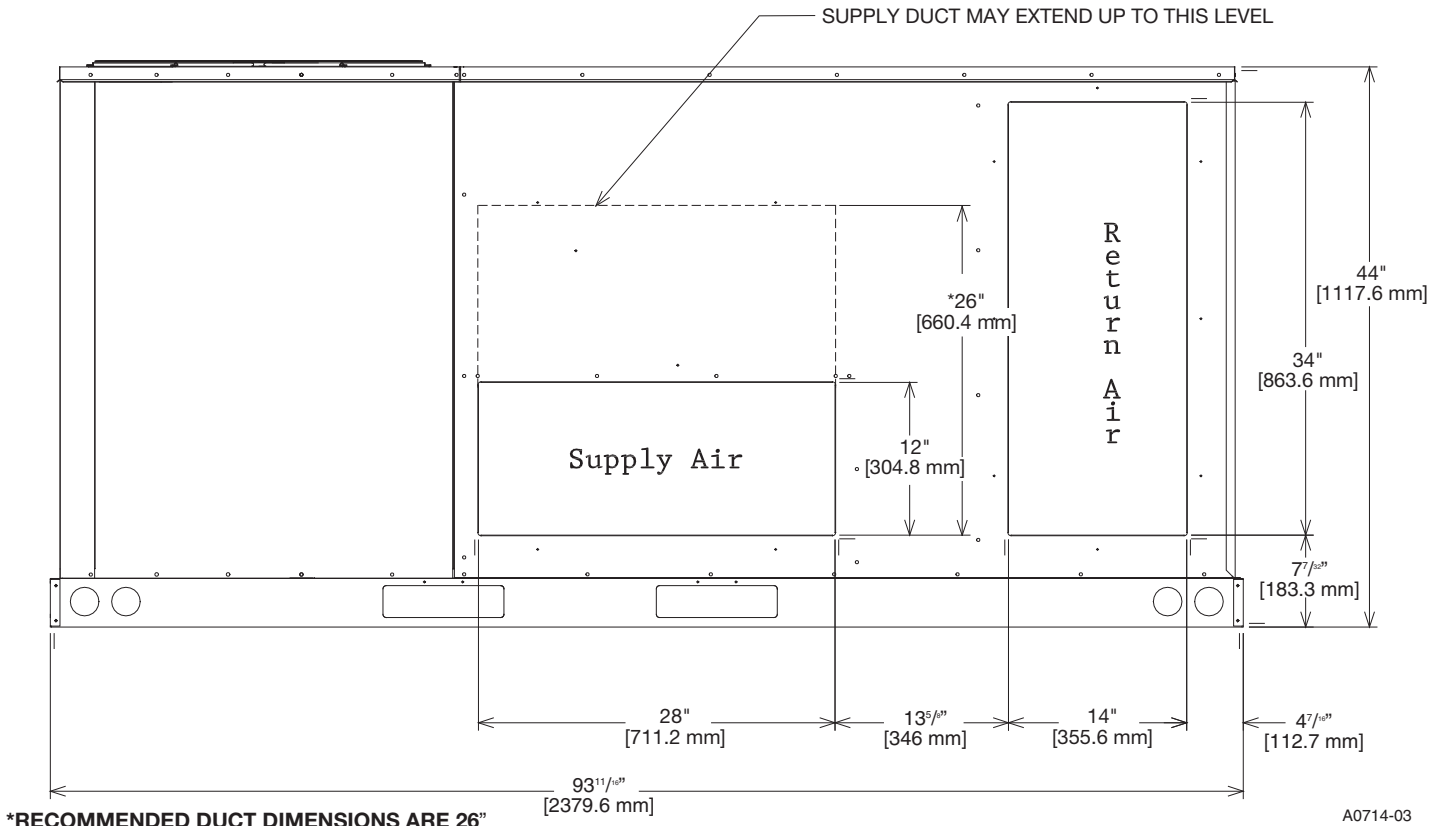

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B072CL/C072CL	B072CM/C072CM	B072DL/C072DL	B072DM/C072DM
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	76,000 [22.27]	76,000 [22.27]	76,000 [22.27]	76,000 [22.27]
EER/SEER ²	11.2/NA	11.2/NA	11.2/NA	11.2/NA
Nominal CFM/ARI Rated CFM [L/s]	2400/2400 [1133/1133]	2400/2400 [1133/1133]	2400/2400 [1133/1133]	2400/2400 [1133/1133]
ARI Net Cooling Capacity Btu [kW]	73,000 [21.39]	73,000 [21.39]	73,000 [21.39]	73,000 [21.39]
Net Sensible Capacity Btu [kW]	53,900 [15.79]	53,900 [15.79]	53,900 [15.79]	53,900 [15.79]
Net Latent Capacity Btu [kW]	19,100 [5.6]	19,100 [5.6]	19,100 [5.6]	19,100 [5.6]
IEER ³	12.8	12.8	12.8	12.8
Net System Power kW	6.31	6.31	6.31	6.31
Compressor				
No./Type	1/Scroll	1/Scroll	1/Scroll	1/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]
Refrigerant Control	Orifices	Orifices	Orifices	Orifices
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/11x12 [279x305]	1/11x12 [279x305]	1/11x12 [279x305]	1/11x12 [279x305]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	1 1/2	1 1/2	1 1/2	1 1/2
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	120 [3402]	120 [3402]	120 [3402]	120 [3402]
Weights				
Net Weights lbs. [kg]	901 [409]	901 [409]	901 [409]	901 [409]
Ship Weights lbs. [kg]	938 [425]	938 [425]	938 [425]	938 [425]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B072YL/C072YL	B072YM/C072YM	B085CL/C085CL	B085CM/C085CM
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	76,000 [22.27]	76,000 [22.27]	88,000 [25.78]	88,000 [25.78]
EER/SEER ²	11.2/NA	11.2/NA	11.2/NA	11.2/NA
Nominal CFM/ARI Rated CFM [L/s]	2400/2400 [1133/1133]	2400/2400 [1133/1133]	2800/3000 [1321/1416]	2800/3000 [1321/1416]
ARI Net Cooling Capacity Btu [kW]	73,000 [21.39]	73,000 [21.39]	85,000 [24.9]	85,000 [24.9]
Net Sensible Capacity Btu [kW]	53,900 [15.79]	53,900 [15.79]	66,100 [19.37]	66,100 [19.37]
Net Latent Capacity Btu [kW]	19,100 [5.6]	19,100 [5.6]	18,900 [5.54]	18,900 [5.54]
IEER ³	12.8	12.8	12.1	12.1
Net System Power kW	6.31	6.31	7.53	7.53
Compressor				
No./Type	1/Scroll	1/Scroll	1/Scroll	1/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]
Refrigerant Control	Orifices	Orifices	Orifices	Orifices
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/11x12 [279x305]	1/11x12 [279x305]	1/11x12 [279x305]	1/15x15 [381x381]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	1 1/2	1 1/2	2	2
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	120 [3402]	120 [3402]	190.9 [5412]	190.9 [5412]
Weights				
Net Weights lbs. [kg]	901 [409]	901 [409]	965 [438]	965 [438]
Ship Weights lbs. [kg]	938 [425]	938 [425]	1002 [455]	1002 [455]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B085CN/C085CN	B085DL/C085DL	B085DM/C085DM	B085DN/C085DN
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	88,000 [25.78]	88,000 [25.78]	88,000 [25.78]	88,000 [25.78]
EER/SEER ²	11.2/NA	11.2/NA	11.2/NA	11.2/NA
Nominal CFM/ARI Rated CFM [L/s]	2800/3000 [1321/1416]	2800/3000 [1321/1416]	2800/3000 [1321/1416]	2800/3000 [1321/1416]
ARI Net Cooling Capacity Btu [kW]	85,000 [24.9]	85,000 [24.9]	85,000 [24.9]	85,000 [24.9]
Net Sensible Capacity Btu [kW]	66,100 [19.37]	66,100 [19.37]	66,100 [19.37]	66,100 [19.37]
Net Latent Capacity Btu [kW]	18,900 [5.54]	18,900 [5.54]	18,900 [5.54]	18,900 [5.54]
IEER ³	12.8	12.8	12.1	12.1
Net System Power kW	6.31	6.31	7.53	7.53
Compressor				
No./Type	1/Scroll	1/Scroll	1/Scroll	1/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	27 [2.51]	27 [2.51]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]
Refrigerant Control	Orifices	Orifices	Orifices	Capillary Tubes
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	2	2	2	3
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	190.9 [5412]	190.9 [5412]	190.9 [5412]	190.9 [5412]
Weights				
Net Weights lbs. [kg]	965 [438]	965 [438]	965 [438]	973 [441]
Ship Weights lbs. [kg]	1002 [455]	1002 [455]	1002 [455]	1002 [455]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B085YL/C085YL	B085YM/C085YM	B085YN/C085YN	B090CL/C090CL
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	88,000 [25.78]	88,000 [25.78]	88,000 [25.78]	93,000 [27.25]
EER/SEER ²	11.2/NA	11.2/NA	11.2/NA	11.2/NA
Nominal CFM/ARI Rated CFM [L/s]	2800/3000 [1321/1416]	2800/3000 [1321/1416]	2800/3000 [1321/1416]	3000/2775 [1416/1310]
ARI Net Cooling Capacity Btu [kW]	85,000 [24.9]	85,000 [24.9]	85,000 [24.9]	90,000 [26.37]
Net Sensible Capacity Btu [kW]	66,100 [19.37]	66,100 [19.37]	66,100 [19.37]	63,100 [18.49]
Net Latent Capacity Btu [kW]	18,900 [5.54]	18,900 [5.54]	18,900 [5.54]	26,900 [7.88]
IEER ³	12.8	12.8	12.1	11.9
Net System Power kW	6.31	6.31	7.53	7.99
Compressor				
No./Type	1/Scroll	1/Scroll	1/Scroll	1/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	27 [2.51]	27 [2.51]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]
Refrigerant Control	Orifices	Orifices	Orifices	TX Valves
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	2	2	3	2
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	190.9 [5412]	190.9 [5412]	190.9 [5412]	107.5/110.7 [3048/3138]
Weights				
Net Weights lbs. [kg]	965 [438]	965 [438]	965 [438]	1017 [461]
Ship Weights lbs. [kg]	1002 [455]	1002 [455]	1002 [455]	1054 [478]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B090CM/C090CM	B090CN/C090CN	B090DL/C090DL	B090DM/C090DM
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	93,000 [27.25]	93,000 [27.25]	93,000 [27.25]	93,000 [27.25]
EER/SEER ²	11.2/NA	11.2/NA	11.2/NA	11.2/NA
Nominal CFM/ARI Rated CFM [L/s]	3000/2775 [1416/1310]	3000/2775 [1416/1310]	3000/2775 [1416/1310]	3000/2775 [1416/1310]
ARI Net Cooling Capacity Btu [kW]	90,000 [26.37]	90,000 [26.37]	90,000 [26.37]	90,000 [26.37]
Net Sensible Capacity Btu [kW]	63,100 [18.49]	63,100 [18.49]	63,100 [18.49]	63,100 [18.49]
Net Latent Capacity Btu [kW]	26,900 [7.88]	26,900 [7.88]	26,900 [7.88]	26,900 [7.88]
IEER ³	11.9	11.9	11.9	11.9
Net System Power kW	7.99	7.99	7.99	7.99
Compressor				
No./Type	1/Scroll	1/Scroll	1/Scroll	2/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	27 [2.51]	27 [2.51]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]
Refrigerant Control	TX Valves	TX Valves	TX Valves	TX Valves
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	2	3	2	2
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	107.5/110.7 [3048/3138]	107.5/110.7 [3048/3138]	107.5/110.7 [3048/3138]	107.5/110.7 [3048/3138]
Weights				
Net Weights lbs. [kg]	1017 [461]	1017 [461]	1017 [461]	1017 [461]
Ship Weights lbs. [kg]	1054 [478]	1054 [478]	1054 [478]	1054 [478]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B090DN/C090DN	B090DN/C090DN	B090YM/C090YM	B090YN/C090YN
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	93,000 [27.25]	93,000 [27.25]	93,000 [27.25]	93,000 [27.25]
EER/SEER ²	11.2/NA	11.2/NA	11.2/NA	11.2/NA
Nominal CFM/ARI Rated CFM [L/s]	3000/2775 [1416/1310]	3000/2775 [1416/1310]	3000/2775 [1416/1310]	3000/2775 [1416/1310]
ARI Net Cooling Capacity Btu [kW]	90,000 [26.37]	90,000 [26.37]	90,000 [26.37]	90,000 [26.37]
Net Sensible Capacity Btu [kW]	63,100 [18.49]	63,100 [18.49]	63,100 [18.49]	63,100 [18.49]
Net Latent Capacity Btu [kW]	26,900 [7.88]	26,900 [7.88]	26,900 [7.88]	26,900 [7.88]
IEER ³	11.9	11.9	11.9	11.9
Net System Power kW	7.99	7.99	7.99	7.99
Compressor				
No./Type	2/Scroll	2/Scroll	2/Scroll	2/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	27 [2.51]	27 [2.51]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]	1 / 22 [9]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]
Refrigerant Control	TX Valves	TX Valves	TX Valves	TX Valves
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	3	2	2	3
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	107.5/110.7 [3048/3138]	107.5/110.7 [3048/3138]	107.5/110.7 [3048/3138]	107.5/110.7 [3048/3138]
Weights				
Net Weights lbs. [kg]	1025 [465]	1017 [461]	1017 [461]	1025 [465]
Ship Weights lbs. [kg]	1054 [478]	1054 [478]	1054 [478]	1054 [478]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B102CL/C102CL	B102CM/C102CM	B102DL/C102DL	B102DM/C102DM
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	101,000 [29.59]	101,000 [29.59]	101,000 [29.59]	101,000 [29.59]
EER/SEER ²	11.2/NA	11.2/NA	11.2/NA	11.2/NA
Nominal CFM/ARI Rated CFM [L/s]	3200/3200 [1510/1510]	3200/3200 [1510/1510]	3200/3200 [1510/1510]	3200/3200 [1510/1510]
ARI Net Cooling Capacity Btu [kW]	97,000 [28.42]	97,000 [28.42]	97,000 [28.42]	97,000 [28.42]
Net Sensible Capacity Btu [kW]	74,000 [21.68]	74,000 [21.68]	74,000 [21.68]	74,000 [21.68]
Net Latent Capacity Btu [kW]	23,000 [6.74]	23,000 [6.74]	23,000 [6.74]	23,000 [6.74]
IEER ³	12	12	12	12
Net System Power kW	8.59	8.59	8.59	8.59
Compressor				
No./Type	2/Scroll	2/Scroll	2/Scroll	2/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	27 [2.51]	27 [2.51]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]	2 / 18 [7]
Refrigerant Control	TX Valves	TX Valves	TX Valves	TX Valves
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	2	3	2	3
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	154.4/166.6 [4372/4723]	154.4/166.6 [4372/4723]	154.4/166.6 [4372/4723]	154.4/166.6 [4372/4723]
Weights				
Net Weights lbs. [kg]	1059 [480]	1067 [484]	1059 [480]	1067 [484]
Ship Weights lbs. [kg]	1096 [497]	1096 [497]	1096 [497]	1096 [497]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B102YL/C102YL	B102YM/C102YM	B120CL/C120CL	B120CM/C120CM
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	101,000 [29.59]	101,000 [29.59]	123,000 [36.04]	123,000 [36.04]
EER/SEER ²	11.2/NA	11.2/NA	11.2/NA	11.2/NA
Nominal CFM/ARI Rated CFM [L/s]	3200/3200 [1510/1510]	3200/3200 [1510/1510]	4000/3750 [1888/1770]	4000/3750 [1888/1770]
ARI Net Cooling Capacity Btu [kW]	97,000 [28.42]	97,000 [28.42]	118,000 [34.57]	118,000 [34.57]
Net Sensible Capacity Btu [kW]	74,000 [21.68]	74,000 [21.68]	88,800 [26.02]	88,800 [26.02]
Net Latent Capacity Btu [kW]	23,000 [6.74]	23,000 [6.74]	29,200 [8.56]	29,200 [8.56]
IEER ³	12	12	11.9	11.9
Net System Power kW	8.59	8.59	10.49	10.49
Compressor				
No./Type	2/Scroll	2/Scroll	2/Scroll	2/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	27 [2.51]	27 [2.51]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	2 / 22 [9]	2 / 22 [9]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	2 / 18 [7]	2 / 18 [7]	3 / 18 [7]	3 / 18 [7]
Refrigerant Control	TX Valves	TX Valves	TX Valves	TX Valves
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	2	3	2	3
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	154.4/166.6 [4372/4723]	154.4/166.6 [4372/4723]	172.8/180.8 [4899/5126]	172.8/180.8 [4899/5126]
Weights				
Net Weights lbs. [kg]	1059 [480]	1059 [480]	1112 [504]	1120 [508]
Ship Weights lbs. [kg]	1096 [497]	1096 [497]	1149 [521]	1149 [521]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B120DL/C120DL	B120DM/C120DM	B120YL/C120YL	B120YM/C120YM
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	123,000 [36.04]	123,000 [36.04]	123,000 [36.04]	123,000 [36.04]
EER/SEER ²	11.2/NA	11.2/NA	11.2/NA	11.2/NA
Nominal CFM/ARI Rated CFM [L/s]	4000/3750 [1888/1770]	4000/3750 [1888/1770]	4000/3750 [1888/1770]	4000/3750 [1888/1770]
ARI Net Cooling Capacity Btu [kW]	118,000 [34.57]	118,000 [34.57]	118,000 [34.57]	118,000 [34.57]
Net Sensible Capacity Btu [kW]	88,800 [26.02]	88,800 [26.02]	88,800 [26.02]	88,800 [26.02]
Net Latent Capacity Btu [kW]	29,200 [8.56]	29,200 [8.56]	29,200 [8.56]	29,200 [8.56]
IEER ³	11.9	11.9	11.9	11.9
Net System Power kW	10.49	10.49	10.49	10.49
Compressor				
No./Type	2/Scroll	2/Scroll	2/Scroll	2/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	27 [2.51]	27 [2.51]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	2 / 22 [9]	2 / 22 [9]	2 / 22 [9]	2 / 22 [9]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	3 / 18 [7]	3 / 18 [7]	3 / 18 [7]	3 / 18 [7]
Refrigerant Control	TX Valves	TX Valves	TX Valves	TX Valves
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP	2 at 1/3 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	2	3	2	3
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	172.8/180.8 [4899/5126]	172.8/180.8 [4899/5126]	172.8/180.8 [4899/5126]	172.8/180.8 [4899/5126]
Weights				
Net Weights lbs. [kg]	1112 [504]	1112 [504]	1112 [504]	1120 [508]
Ship Weights lbs. [kg]	1149 [521]	1149 [521]	1149 [521]	1149 [521]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B150CL/C150CL	B150CM/C150CM	B150DL/C150DL	B150DM/C150DM
Cooling Performance¹				CONTINUED →
Gross Cooling Capacity Btu [kW]	156,000 [45.71]	156,000 [45.71]	156,000 [45.71]	156,000 [45.71]
EER/SEER ²	11/NA	11/NA	11/NA	11/NA
Nominal CFM/ARI Rated CFM [L/s]	5000/4400 [2360/2076]	5000/4400 [2360/2076]	5000/4400 [2360/2076]	5000/4400 [2360/2076]
ARI Net Cooling Capacity Btu [kW]	148,000 [43.36]	148,000 [43.36]	148,000 [43.36]	148,000 [43.36]
Net Sensible Capacity Btu [kW]	107,600 [31.53]	107,600 [31.53]	107,600 [31.53]	107,600 [31.53]
Net Latent Capacity Btu [kW]	40,400 [11.84]	40,400 [11.84]	40,400 [11.84]	40,400 [11.84]
IEER ³	11.4	11.4	11.4	11.4
Net System Power kW	13.39	13.39	13.39	13.39
Compressor				
No./Type	2/Scroll	2/Scroll	2/Scroll	2/Scroll
Outdoor Sound Rating (dB)⁵	88	88	88	88
Outdoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm] OD	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	27 [2.51]	27 [2.51]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	2 / 20 [8]	2 / 22 [9]	2 / 22 [9]	2 / 22 [8]
Indoor Coil—Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	Rifled	Rifled	Rifled	Rifled
Tube Size in. [mm]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]	0.375 [9.5]
Face Area sq. ft. [sq. m]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]	13.5 [1.25]
Rows / FPI [FPcm]	4 / 15 [6]	4 / 15 [6]	4 / 15 [6]	4 / 15 [6]
Refrigerant Control	TX Valves	TX Valves	TX Valves	TX Valves
Drain Connection No./Size in. [mm]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8000 [3775]	8000 [3775]
No. Motors/HP	2 at 1/2 HP	2 at 1/2 HP	2 at 1/2 HP	2 at 1/2 HP
Motor RPM	1075	1075	1075	1075
Indoor Fan—Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type/No. Speeds	Belt/Variable	Belt/Variable	Belt/Variable	Belt/Variable
No. Motors	1	1	1	1
Motor HP	3	5	3	5
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter—Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(No.) Size Recommended in. [mm x mm x mm]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]	159.2/156 [4513/4423]	159.2/156 [4513/4423]	159.2/156 [4513/4423]	159.2/156 [4513/4423]
Weights				
Net Weights lbs. [kg]	1230[558]	1238 [562]	1230 [558]	1238 [562]
Ship Weights lbs. [kg]	1267 [575]	1267 [575]	1267 [575]	1267 [575]

GENERAL DATA - RLNL

NOM. SIZES 6-12½ TONS [21.1-43.9 kW]

Model RLNL-Series	B150YL/C150YL	B150YM/C150YM
Cooling Performance¹		
Gross Cooling Capacity Btu [kW]	156,000 [45.71]	156,000 [45.71]
EER/SEER ²	11/NA	11/NA
Nominal CFM/ARI Rated CFM [L/s]	5000/4400 [2360/2076]	5000/4400 [2360/2076]
ARI Net Cooling Capacity Btu [kW]	148,000 [43.36]	148,000 [43.36]
Net Sensible Capacity Btu [kW]	107,600 [31.53]	107,600 [31.53]
Net Latent Capacity Btu [kW]	40,400 [11.84]	40,400 [11.84]
IEER ³	11.4	11.4
Net System Power kW	13.39	13.39
Compressor		
No./Type	2/Scroll	2/Scroll
Outdoor Sound Rating (dB)⁵		
	88	88
Outdoor Coil—Fin Type		
Tube Type	Louvered	Louvered
MicroChannel Depth in. [mm]	1 [25.4]	1 [25.4]
Face Area sq. ft. [sq. m]	27 [2.51]	27 [2.51]
Rows / FPI [FPcm]	2 / 20 [8]	2 / 20 [8]
Indoor Coil—Fin Type		
Tube Type	Louvered	Louvered
Tube Size in. [mm]	Rifled	Rifled
Face Area sq. ft. [sq. m]	0.375 [9.5]	0.375 [9.5]
Rows / FPI [FPcm]	13.5 [1.25]	13.5 [1.25]
Refrigerant Control	4 / 15 [6]	4 / 15 [6]
Drain Connection No./Size in. [mm]	TX Valves	TX Valves
	1/1 [25.4]	1/1 [25.4]
Outdoor Fan—Type		
No. Used/Diameter in. [mm]	Propeller	Propeller
Drive Type/No. Speeds	2/24 [609.6]	2/24 [609.6]
CFM [L/s]	Direct/1	Direct/1
No. Motors/HP	8000 [3775]	8000 [3775]
Motor RPM	2 at 1/2 HP	2 at 1/2 HP
	1075	1075
Indoor Fan—Type		
No. Used/Diameter in. [mm]	FC Centrifugal	FC Centrifugal
Drive Type/No. Speeds	1/15x15 [381x381]	1/15x15 [381x381]
No. Motors	Belt/Variable	Belt/Variable
Motor HP	1	1
Motor RPM	3	5
Motor Frame Size	1725	1725
	56	56
Filter—Type		
Furnished	Disposable	Disposable
(No.) Size Recommended in. [mm x mm x mm]	Yes	Yes
	(6)2x18x18 [51x457x457]	(6)2x18x18 [51x457x457]
Refrigerant Charge Oz. [g]		
	159.2/156 [4513/4423]	159.2/156 [4513/4423]
Weights		
Net Weights lbs. [kg]	1238 [562]	1238 [562]
Ship Weights lbs. [kg]	1267 [575]	1267 [575]

ELECTRICAL DATA - RLNL-B

ELECTRICAL DATA - RLNL SERIES										
		B072CL/ C072CL	B072CM/ C072CM	B072DL/ C072DL	B072DM/ C072DM	B072YL/ C072YL	B072YM/ C072YM	B085CL/ C085CL	B085CM/ C085CM	B085CN/ C085CN
Unit Information	Unit Operating Voltage Range	187-253	187-253	414-506	414-506	518-632	518-632	187-253	187-253	187-253
	Volts	208/230	208/230	460	460	575	575	208/230	208/230	208/230
	Minimum Circuit Ampacity	37/37	37/37	18	18	14	14	42/42	42/42	47/47
	Minimum Overcurrent Protection Device Size	40/40	40/40	20	20	15	15	45/45	45/45	50/50
	Maximum Overcurrent Protection Device Size	50/50	50/50	25	25	20	20	60/60	60/60	70/70
Compressor Motor	No.	1	1	1	1	1	1	1	1	1
	Volts	200/240	200/240	480	480	600	600	200/240	200/240	200/240
	Phase	3	3	3	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	5	5	5	5	5	5	6	6	6
	Amps (RLA), Comp. 1	20.5/20.5	20.5/20.5	9.6	9.6	7.6	7.6	23.2/23.2	23.2/23.2	23.2/23.2
	Amps (LRA), Comp. 1	155/155	155/155	75	75	54	54	164/164	164/164	164/164
	HP, Compressor 2	—	—	—	—	—	—	—	—	—
	Amps (RLA), Comp. 2	—	—	—	—	—	—	—	—	—
	Amps (LRA), Comp. 2	—	—	—	—	—	—	—	—	—
Condenser Motor	No.	2	2	2	2	2	2	2	2	2
	Volts	208/230	208/230	460	460	575	575	208/230	208/230	208/230
	Phase	1	1	1	1	1	1	1	1	1
	HP	1/3	1/3	1/3	1/3	1/3	1/3	1/3	1/3	1/3
	Amps (FLA, each)	2.4/2.4	2.4/2.4	1.4	1.4	1	1	2.4/2.4	2.4/2.4	2.4/2.4
	Amps (LRA, each)	4.7/4.7	4.7/4.7	2.4	2.4	1.5	1.5	4.7/4.7	4.7/4.7	4.7/4.7
Evaporator Fan	No.	1	1	1	1	1	1	1	1	1
	Volts	208/230	208/230	460	460	575	575	208/230	208/230	208/230
	Phase	3	3	3	3	3	3	3	3	3
	HP	1 1/2	1 1/2	1 1/2	1 1/2	1 1/2	1 1/2	2	2	3
	Amps (FLA, each)	5.6/5.6	5.6/5.6	2.8	2.8	1.9	1.9	8/8	8/8	13/13
	Amps (LRA, each)	28.8/28.8	28.8/28.8	14.4	14.4	14	14	56/56	56/56	74.5/74.5

ELECTRICAL DATA - RLNL-B

ELECTRICAL DATA - RLNL SERIES										
		B085DL/ C085DL	B085DM/ C085DM	B085DN/ C085DN	B085YL/ C085YL	B085YM/ C085YM	B085YN/ C085YN	B090CL/ C090CL	B090CM/ C090CM	B090CN/ C090CN
Unit Information	Unit Operating Voltage Range	414-506	414-506	414-506	518-632	518-632	518-632	187-253	187-253	187-253
	Volts	460	460	460	575	575	575	208/230	208/230	208/230
	Minimum Circuit Ampacity	21	21	24	16	16	20	43/43	43/43	48/48
	Minimum Overcurrent Protection Device Size	25	25	25	20	20	20	45/45	45/45	50/50
	Maximum Overcurrent Protection Device Size	30	30	35	20	20	25	50/50	50/50	60/60
Compressor Motor	No.	1	1	1	1	1	1	2	2	2
	Volts	480	480	480	600	600	600	200/240	200/240	200/240
	Phase	3	3	3	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	6	6	6	6	6	6	3 1/4	3 1/4	3 1/4
	Amps (RLA), Comp. 1	11.2	11.2	11.2	7.9	7.9	7.9	13.1/13.1	13.1/13.1	13.1/13.1
	Amps (LRA), Comp. 1	75	75	75	54	54	54	83.1/83.1	83.1/83.1	83.1/83.1
	HP, Compressor 2	—	—	—	—	—	—	3 1/4	3 1/4	3 1/4
	Amps (RLA), Comp. 2	—	—	—	—	—	—	13.1/13.1	13.1/13.1	13.1/13.1
	Amps (LRA), Comp. 2	—	—	—	—	—	—	83.1/83.1	83.1/83.1	83.1/83.1
Condenser Motor	No.	2	2	2	2	2	2	2	2	2
	Volts	460	460	460	575	575	575	208/230	208/230	208/230
	Phase	1	1	1	1	1	1	1	1	1
	HP	1/3	1/3	1/3	1/3	1/3	1/3	1/3	1/3	1/3
	Amps (FLA, each)	1.4	1.4	1.4	1	1	1	2.4/2.4	2.4/2.4	2.4/2.4
	Amps (LRA, each)	2.4	2.4	2.4	1.5	1.5	1.5	4.7/4.7	4.7/4.7	4.7/4.7
Evaporator Fan	No.	1	1	1	1	1	1	1	1	1
	Volts	460	460	460	575	575	575	208/230	208/230	208/230
	Phase	3	3	3	3	3	3	3	3	3
	HP	2	2	3	2	2	3	2	2	3
	Amps (FLA, each)	4	4	7	4	4	8	8/8	8/8	13/13
	Amps (LRA, each)	28	28	38.1	19	19	20	56/56	56/56	74.5/74.5

ELECTRICAL DATA - RLNL-B

ELECTRICAL DATA - RLNL SERIES										
		B090DL/ C090DL	B090DM/ C090DM	B090DN/ C090DN	B090YL/ C090YL	B090YM/ C090YM	B090YN/ C090YN	B102CL/ C102CL	B102CM/ C102CM	B102DL/ C102DL
Unit Information	Unit Operating Voltage Range	414-506	414-506	414-506	518-632	518-632	518-632	187-253	187-253	414/506
	Volts	460	460	460	575	575	575	208/230	208/230	460
	Minimum Circuit Ampacity	21	21	24	16	16	21	49/49	54/54	23
	Minimum Overcurrent Protection Device Size	25	25	25	20	20	25	50/50	55/55	25
	Maximum Overcurrent Protection Device Size	25	25	30	20	20	25	60/60	60/60	25
Compressor Motor	No.	2	2	2	2	2	2	2	2	2
	Volts	480	480	480	600	600	600	200/230	200/230	460
	Phase	3	3	3	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	3 1/4	3 1/4	3 1/4	3 1/4	3 1/4	3 1/4	3 3/4	3 3/4	3 3/4
	Amps (RLA), Comp. 1	6.1	6.1	6.1	4.4	4.4	4.4	16/16	16/16	7.1
	Amps (LRA), Comp. 1	41	41	41	33	33	33	91/91	91/91	46
	HP, Compressor 2	3 1/4	3 1/4	3 1/4	3 1/4	3 1/4	3 1/4	3 3/4	3 3/4	3 3/4
	Amps (RLA), Comp. 2	6.1	6.1	6.1	4.4	4.4	4.4	16/16	16/16	7.1
	Amps (LRA), Comp. 2	41	41	41	33	33	33	91/91	91/91	46
Condenser Motor	No.	2	2	2	2	2	2	2	2	2
	Volts	460	460	460	575	575	575	208/230	208/230	460
	Phase	1	1	1	1	1	1	1	1	1
	HP	1/3	1/3	1/3	1/3	1/3	1/3	1/3	1/3	1/3
	Amps (FLA, each)	1.4	1.4	1.4	1	1	1	2.4/2.4	2.4/2.4	1.4
	Amps (LRA, each)	2.4	2.4	2.4	1.5	1.5	1.5	4.7/4.7	4.7/4.7	2.4
Evaporator Fan	No.	1	1	1	1	1	1	1	1	1
	Volts	460	460	460	575	575	575	208/230	208/230	460
	Phase	3	3	3	3	3	3	3	3	3
	HP	2	2	3	2	2	3	2	3	2
	Amps (FLA, each)	4	4	7	4	4	8	8/8	13/13	4
	Amps (LRA, each)	28	28	38.1	19	19	20	56/56	74.5/74.5	28

ELECTRICAL DATA - RLNL-B

ELECTRICAL DATA - RLNL SERIES										
		B102DM/ C102DM	B102YL/ C102YL	B102YM/ C102YM	B120CL/ C120CL	B120CM/ C120CM	B120DL/ C120DL	B120DM/ C120DM	B120YL/ C120YL	B120YM/ C120YM
Unit Information	Unit Operating Voltage Range	414-506	518-632	518-632	187-253	187-253	414-506	414-506	518-632	518-632
	Volts	460	575	575	208/230	208/230	460	460	575	575
	Minimum Circuit Ampacity	26	19	24	49/49	54/54	25	28	19	24
	Minimum Overcurrent Protection Device Size	30	20	25	50/50	55/55	25	30	20	25
	Maximum Overcurrent Protection Device Size	30	20	30	60/60	60/60	30	35	20	30
Compressor Motor	No.	2	2	2	2	2	2	2	2	2
	Volts	460	575	575	200/240	200/240	480	480	575	575
	Phase	3	3	3	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	3 3/4	3 3/4	3 3/4	4 1/4	4 1/4	4 1/4	4 1/4	4 1/4	4 1/4
	Amps (RLA), Comp. 1	7.1	5.6	5.6	16/16	16/16	7.8	7.8	5.7	5.7
	Amps (LRA), Comp. 1	46	37	37	110/110	110/110	52	52	38.9	38.9
	HP, Compressor 2	3 3/4	3 3/4	3 3/4	4 1/4	4 1/4	4 1/4	4 1/4	4 1/4	4 1/4
	Amps (RLA), Comp. 2	7.1	5.6	5.6	16/16	16/16	7.8	7.8	5.7	5.7
	Amps (LRA), Comp. 2	46	37	37	110/110	110/110	52	52	38.9	38.9
Condenser Motor	No.	2	2	2	2	2	2	2	2	2
	Volts	460	575	575	208/230	208/230	460	460	575	575
	Phase	1	1	1	1	1	1	1	1	1
	HP	1/3	1/3	1/3	1/3	1/3	1/3	1/3	1/3	1/3
	Amps (FLA, each)	1.4	1	1	2.4/2.4	2.4/2.4	1.4	1.4	1	1
	Amps (LRA, each)	2.4	1.5	1.5	4.7/4.7	4.7/4.7	2.4	2.4	1.5	1.5
Evaporator Fan	No.	1	1	1	1	1	1	1	1	1
	Volts	460	575	575	208/230	208/230	460	460	575	575
	Phase	3	3	3	3	3	3	3	3	3
	HP	3	2	3	2	3	2	3	2	3
	Amps (FLA, each)	7	4	8	8/8	13/13	4	7	4	8
	Amps (LRA, each)	38.1	19	20	56/56	74.5/74.5	28	38.1	19	20

ELECTRICAL DATA - RLNL-B

ELECTRICAL DATA - RLNL SERIES							
		B150CL/ C150CL	B150CM/ C150CM	B150DL/ C150DL	B150DM/ C150DM	B150YL/ C150YL	B150YM/ C150YM
Unit Information	Unit Operating Voltage Range	187-253	187-253	414-506	414-506	518-632	518-632
	Volts	208/230	208/230	460	460	575	575
	Minimum Circuit Ampacity	67/67	71/71	33	36	28	28
	Minimum Overcurrent Protection Device Size	70/70	75/75	35	40	30	30
	Maximum Overcurrent Protection Device Size	80/80	90/90	40	45	35	35
Compressor Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	460	460	575	575
	Phase	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	5 3/4	5 3/4	5 3/4	5 3/4	5 3/4	5 3/4
	Amps (RLA), Comp. 1	22.4/22.4	22.4/22.4	10.6	10.6	7.7	7.7
	Amps (LRA), Comp. 1	149/149	149/149	75	75	54	54
	HP, Compressor 2	5 1/4	5 1/4	5 1/4	5 1/4	5 1/4	5 1/4
	Amps (RLA), Comp. 2	19/19	19/19	9.7	9.7	7.4	7.4
	Amps (LRA), Comp. 2	123/123	123/123	62	62	50	50
Condenser Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	460	460	575	575
	Phase	1	1	1	1	1	1
	HP	1/2	1/2	1/2	1/2	1/2	1/2
	Amps (FLA, each)	2.3/2.3	2.3/2.3	1.5	1.5	1	1
	Amps (LRA, each)	5.6/5.6	5.6/5.6	3.1	3.1	2.2	2.2
Evaporator Fan	No.	1	1	1	1	1	1
	Volts	208/230	208/230	460	460	575	575
	Phase	3	3	3	3	3	3
	HP	3	5	3	5	3	5
	Amps (FLA, each)	15/15	18.8/18.8	7	10	8	8
	Amps (LRA, each)	74.5/74.5	82.6/82.6	38.1	41.3	20	33

VI. INSTALLATION

A. GENERAL

1. PRE-INSTALLATION CHECK-POINTS

Before attempting any installation, the following points should be carefully considered:

- Structural strength of supporting members. (rooftop installation)
- Clearances and provision for servicing.
- Power supply and wiring.
- Air duct connections.
- Drain facilities and connections.
- Location for minimum noise.

2. LOCATION

These units are designed for outdoor installations. They can be mounted on a slab or rooftop. They are not to be installed within any part of a structure such as an attic, crawl space, closet, or any other place where condenser air flow is restricted or other than outdoor ambient conditions prevail. Since the application of the units is of the outdoor type, it is important to consult your local code authorities at the time the first installation is made.

B. OUTSIDE SLAB INSTALLATION (Typical outdoor slab installations are shown in Figures 6 and 7.)

- Select a location where external water drainage cannot collect around the unit.
- Provide a level concrete slab extending 3" [76.2 mm] beyond all four sides of the unit. The slab should be sufficient above grade to prevent ground water from entering the unit. **IMPORTANT:** To prevent transmission of noise or vibration, slab should not be connected to building structure.
- The location of the unit should be such as to provide proper access for inspection and servicing.
- Locate unit where operating sounds will not disturb owner or neighbors.
- Locate unit so roof runoff water does not pour directly on the unit. Provide gutter or other shielding at roof level. Do not locate unit in an area where excessive snow drifting may occur or accumulate.


C. CLEARANCES

The following minimum clearances must be observed for proper unit performance and serviceability.

- Provide 48" [1219.2 mm] minimum clearance at the front of the unit. Provide 18" [457.2 mm] minimum clearance at all other sides of the unit.
- Provide 60" [1524 mm] minimum clearance between top of unit and maximum 3 foot [.91 m] overhang.
- Unit is design certified for application on combustible flooring with 0" [0 mm] minimum clearance.
- See Figure 6 for illustration of minimum installation-service clearances.


FIGURE 6
OUTSIDE SLAB INSTALLATION, BASEMENT OR CRAWL SPACE DISTRIBUTION SYSTEM

Recommended Clearance	Location
48" [1219.2 mm]	A - Front
18" [457.2 mm]	B - Condenser Coil
18" [457.2 mm]	C - Duct Side
18"* [457.2 mm]	D - Evaporator End
60" [1524 mm]	E - Above
*Without Economizer. 48" [1219.2 mm] With Economizer	

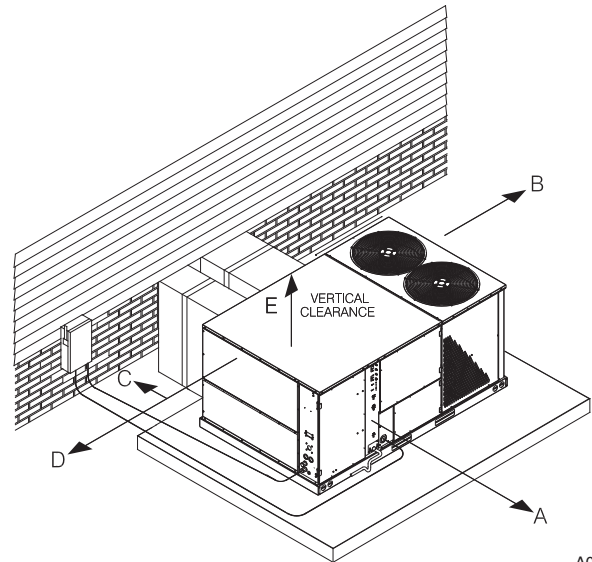

A0741-03

FIGURE 7
OUTSIDE SLAB INSTALLATION, CLOSET DISTRIBUTION SYSTEM. SLAB FLOOR CONSTRUCTION

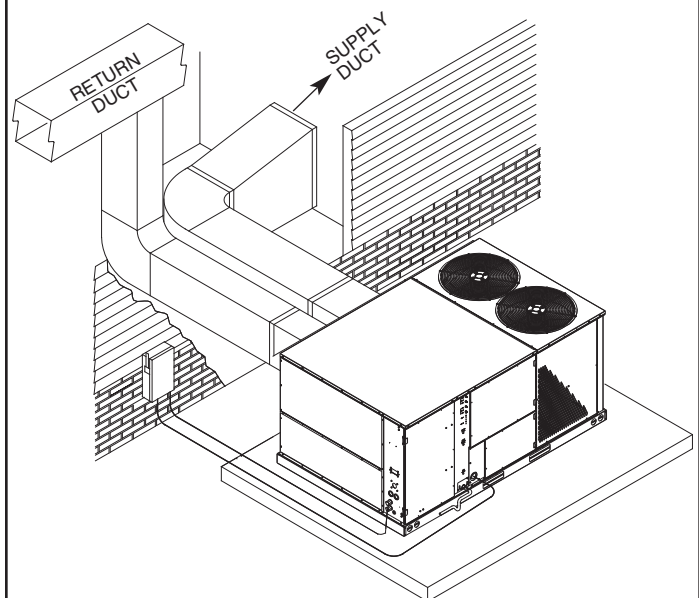

A0739-03

D. ROOFTOP INSTALLATION

1. Before locating the unit on the roof, make sure that the strength of the roof and beams is adequate at that point to support the weight involved. **This is very important and user's responsibility.**
2. For rigging and roofcurb details, see Figures 8 and 9. Use field-furnished spreaders.
3. For roofcurb assembly, see Roofcurb Installation Instructions.
4. If the roofcurb is not used, provisions for disposing of condensate water runoff must be provided.
5. The unit should be placed on a solid and level roofcurb or platform of adequate strength. See Figure 10.
6. The location of the unit on the roof should be such as to provide proper access for inspection and servicing.

IMPORTANT: If unit will not be put into service immediately, cover supply and return openings to prevent excessive condensation.

**FIGURE 8
RIGGING FOR LIFTING**

CORNER WEIGHTS BY PERCENTAGE			
A	B	C	D
33%	27%	17%	23%


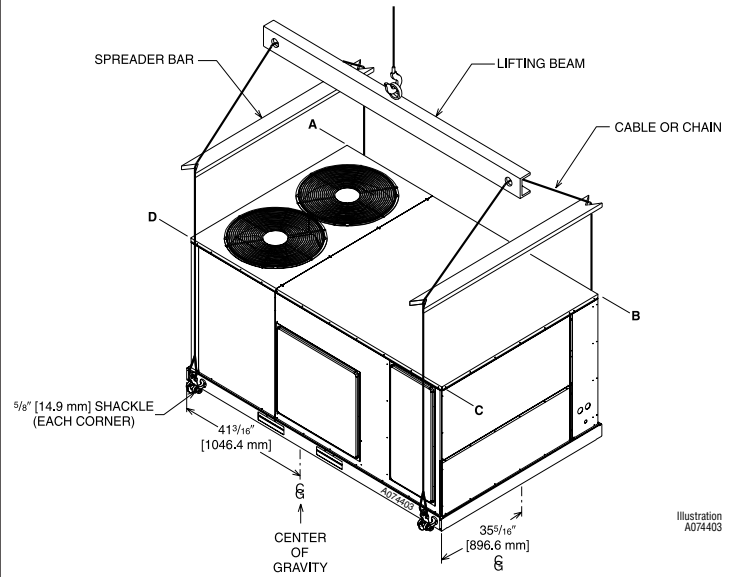



Illustration
A074403

A0744-03

**FIGURE 9
ROOFCURB INSTALLATION**

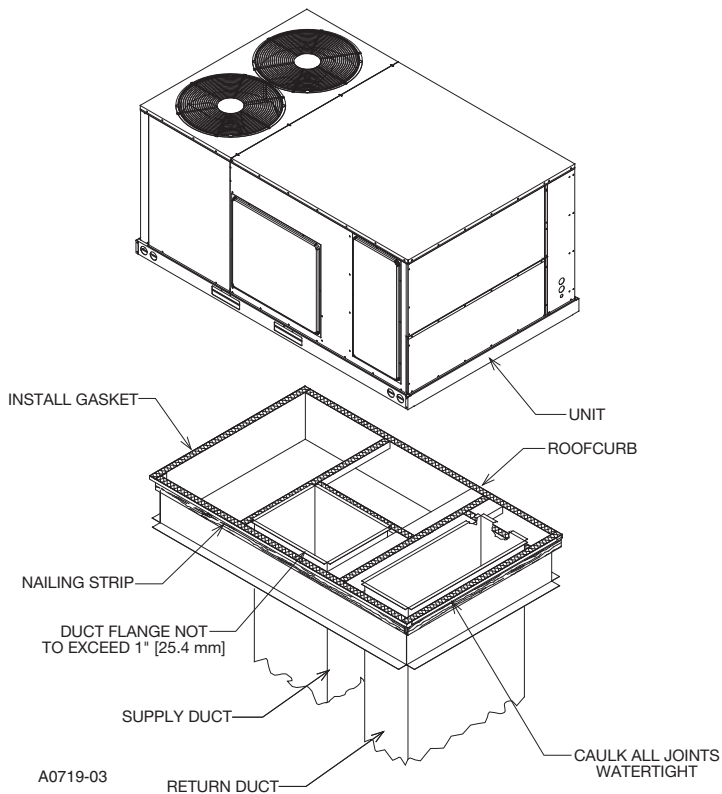

A0719-03

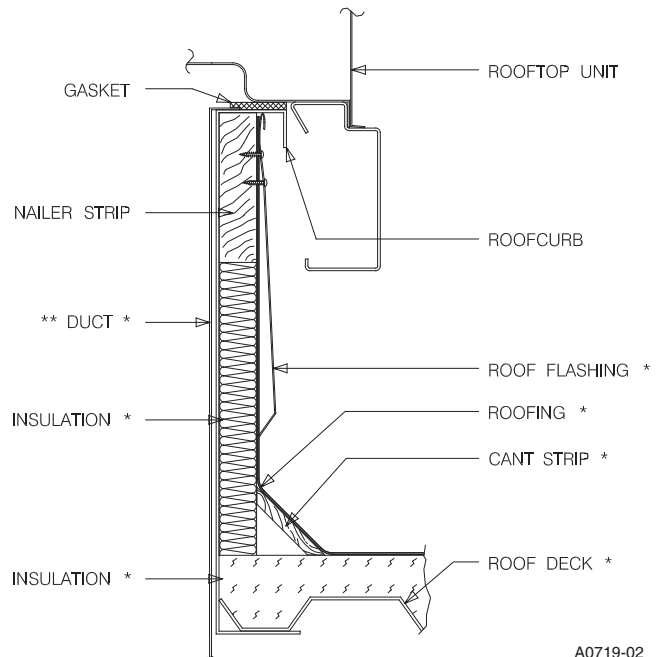


A0719-02

* BY CONTRACTOR

** FOR INSTALLATION OF DUCT AS SHOWN, USE RECOMMENDED DUCT SIZES FROM ROOFCURB INSTALLATION INSTRUCTIONS. FOR DUCT FLANGE ATTACHMENT TO UNIT, SEE UNIT INSTALLATION INSTRUCTIONS FOR RECOMMENDED DUCT SIZES.

FIGURE 10
FLAT ROOFTOP INSTALLATION, ATTIC OR DROP CEILING
DISTRIBUTION SYSTEM. MOUNTED ON ROOFCURB.
CURB MUST BE LEVEL

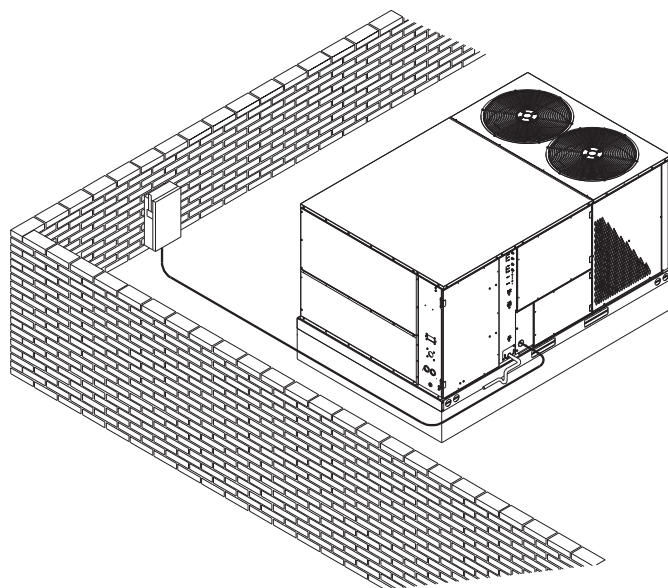

A1112-03

VII. DUCTWORK

Ductwork should be fabricated by the installing contractor in accordance with local codes and NFPA90A. Industry manuals may be used as a guide when sizing and designing the duct system - contact Air Conditioning Contractors of America, 1513 16th St. N.W., Washington, D.C. 20036.

▲ WARNING

DO NOT, UNDER ANY CIRCUMSTANCES, CONNECT RETURN DUCTWORK TO ANY OTHER HEAT PRODUCING DEVICE SUCH AS A FIREPLACE INSERT, STOVE, ETC. UNAUTHORIZED USE OF SUCH DEVICES MAY RESULT IN FIRE, CARBON MONOXIDE POISONING, EXPLOSION, PROPERTY DAMAGE, SEVERE PERSONAL INJURY OR DEATH.

The unit should be placed as close to the space to be air conditioned as possible allowing clearance dimensions as indicated. Ducts should be run as directly as possible to supply and return outlets. Use of non-flammable waterproof flexible connectors on both supply and return connections at the unit to reduce noise transmission is recommended.

It is preferable to install the unit on the roof of the structure if the registers or diffusers are located on the wall or in the ceiling. A slab installation could be considered when the registers are low on a wall or in the floor.

On ductwork exposed to outside air conditions of temperature and humidity, use a minimum of 2" [50.8 mm] of insulation and a vapor barrier. Distribution system in attic, furred space or crawl space should be insulated with at least 2" [50.8 mm] of insulation with vapor barrier. One-half to 1" [25.4 mm] thickness of insulation is usually sufficient for ductwork inside the air conditioned space.

Balancing dampers should be provided for each branch duct in the supply system. Ductwork should be properly supported from the structure.

When installing ductwork, consider the following items:

1. Noncombustible flexible connectors should be used between ductwork and unit to reduce noise and vibration transmission into the ductwork.
2. When auxiliary heaters are installed, use noncombustible flexible connectors and clearance to combustible material of 0" [0 mm] for the first 3 feet [.91 m] of discharge duct. Clearance to unit top and side is 0" [0 mm].

VIII. FILTERS


This unit is provided with 6 - 2" x 18" x 18" [51mm x 457 mm x 457 mm] disposable filters. When replacing filters, ensure they are inserted fully to the back to prevent bypass.

VIX. CONVERSION PROCEDURE

DOWNFLOW TO HORIZONTAL

1. Remove the screws and covers from the outside of the supply and return sections.
2. Install the covers over the bottom supply and return openings, painted side up inserting the leading flange under the bracket provided. Place the back flange to the top of the front bracket provided. See Figure 11.
3. Secure the return and supply cover to the front bracket with one (1) screw.

FIGURE 11
COVER GASKET DETAIL

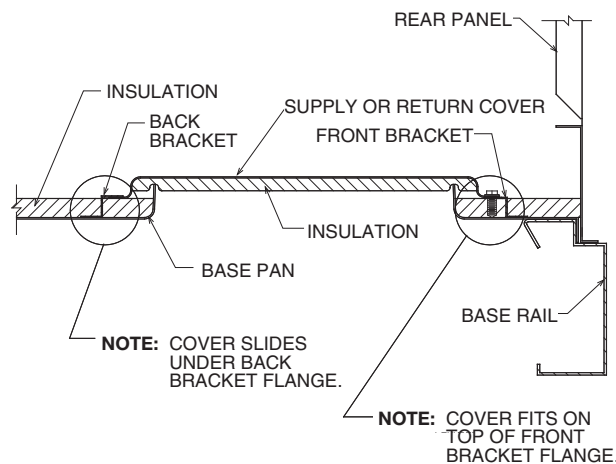


A0725-01

X. CONDENSATE DRAIN

IMPORTANT: Install a condensate trap to ensure proper condensate drainage. See Figure 12.

The condensate drain pan has a threaded female 1 inch NPT (11.5 TPI) connection. Consult local codes or ordinances for specific requirements of condensate drain piping and disposal.

- To use the removable drain pan feature of this unit, some of the condensate line joints should be assembled for easy removal and cleaning.
- Use a thin layer of Teflon tape or paste on drain pan connections and install only hand tight.
- Do not over tighten drain pan connections as damage to the drain pan may occur.
- Drain line **MUST NOT** block service access panels.
- Drain line must be no smaller than drain pan outlet and adequately sized to accommodate the condensate discharge from the unit.
- Drain line should slope away from unit a minimum of 1/8" per foot to ensure proper drainage.
- Drain line must be routed to an acceptable drain or outdoors in accordance with local codes.
- Do not connect condensate drain line to a closed sewer pipe.
- Drain line may need insulation or freeze protection in certain applications.

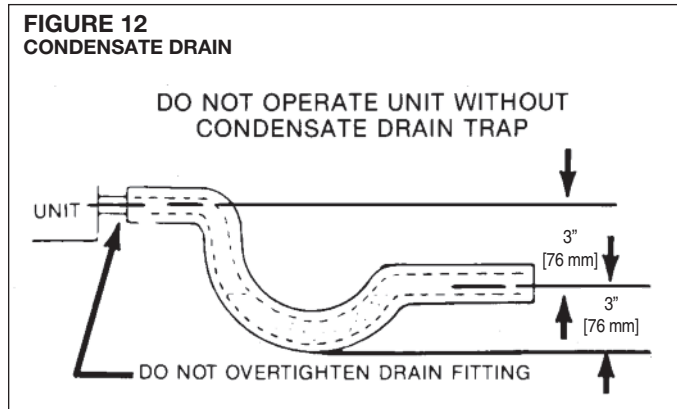

XI. ELECTRICAL WIRING


Field wiring must comply with the National Electrical Code (NEC in Canada) and local ordinances that may apply.

A. POWER WIRING

1. This unit incorporates single-point electrical connections for the unit and electric heat accessory.
2. It is important that proper electrical power is available to the unit. Voltage should not vary more than 10% from the values marked on the unit rating plate. Phase voltages must be balanced within 3%.
3. Install a branch circuit disconnect within sight of the unit. Use the unit rating plate or RLNL-B Electrical Data to determine the required size.
4. The branch circuit wire must be sized in accordance with the National Electrical Code (N.E.C. in Canada) and local ordinances that may apply using the minimum circuit ampacity found on the unit rating plate.
5. Field-installed power wiring must be run through grounded rain-tight conduit attached to the unit power entry panel and connected as follows:

UNITS WITHOUT ELECTRIC HEAT - Connect power wiring to the power terminal block located on the left side of the electric heat compartment. Connect the ground wire to the adjacent ground lug.

FIGURE 13
BRANCH CIRCUIT DISCONNECT LOCATION

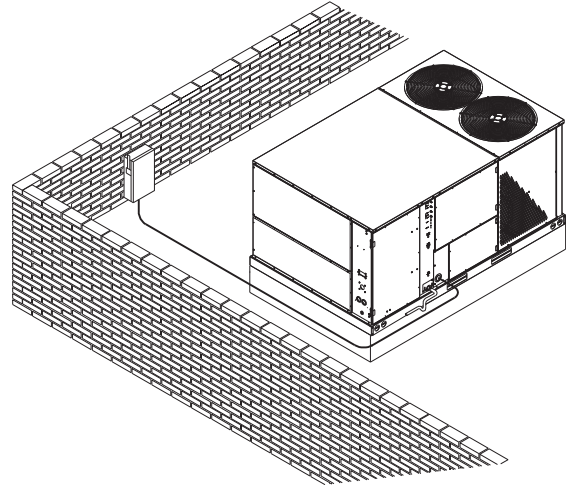

UNITS WITH FACTORY INSTALLED ELECTRIC HEAT -


Connect power wiring to the power terminal block located on the electric heater kit. Connect the ground wire to the adjacent ground lug. **DO NOT** connect aluminum wiring directly to the electric heater terminal block. Wiring to the unit contactors is factory-connected.

6. For field installation of an electric heater kit, follow the instructions below. Refer to the information supplied with the kit.
 - a. Removing screws as required, open heater access door and detach adjacent power entry panel.
 - b. Remove wires to unit contactor (1L1, 1L2, 1L3) from unit terminal block on the left side of the electric heat compartment. Remove and discard the terminal block and the adjacent ground lug.
 - c. Remove the heater kit block-off panel and install the heater kit in its place using 9 of the 12 screws previously removed.
 - d. Connect the unit contactor wires (1L1, 1L2, 1L3) to the compressor fuse block on the heater kit.
 - e. Re-install the power entry panel & run conduit and the proper size field wiring through the opening in the panel.
 - f. Connect field wiring to the power terminal block located on the electric heater kit. Connect ground wire to the adjacent ground lug.
 - g. Connect heater kit control plug to the receptacle on the control wiring harness.
 - h. Close heater access door and secure with screws previously removed.

B. CONTROL WIRING (Class II)

1. Low voltage wiring should not be run in conduit with power wiring.
2. Control wiring is routed through the 7/8" [22 mm] hole in the unit side panel. See Figure 14. Use a minimum #18 AWG thermostat wire. For wire lengths exceeding 50' [15.24 m] use #16 AWG thermostat wire. Connect the control wiring to the low voltage terminal block located on the unit integrated control. Route wires under the control voltage shield. See Figure 14.
3. It is necessary that only approved thermostats be used. Please contact your distributor for part number information. See thermostat specification catalog for recommended thermostat.

FIGURE 14

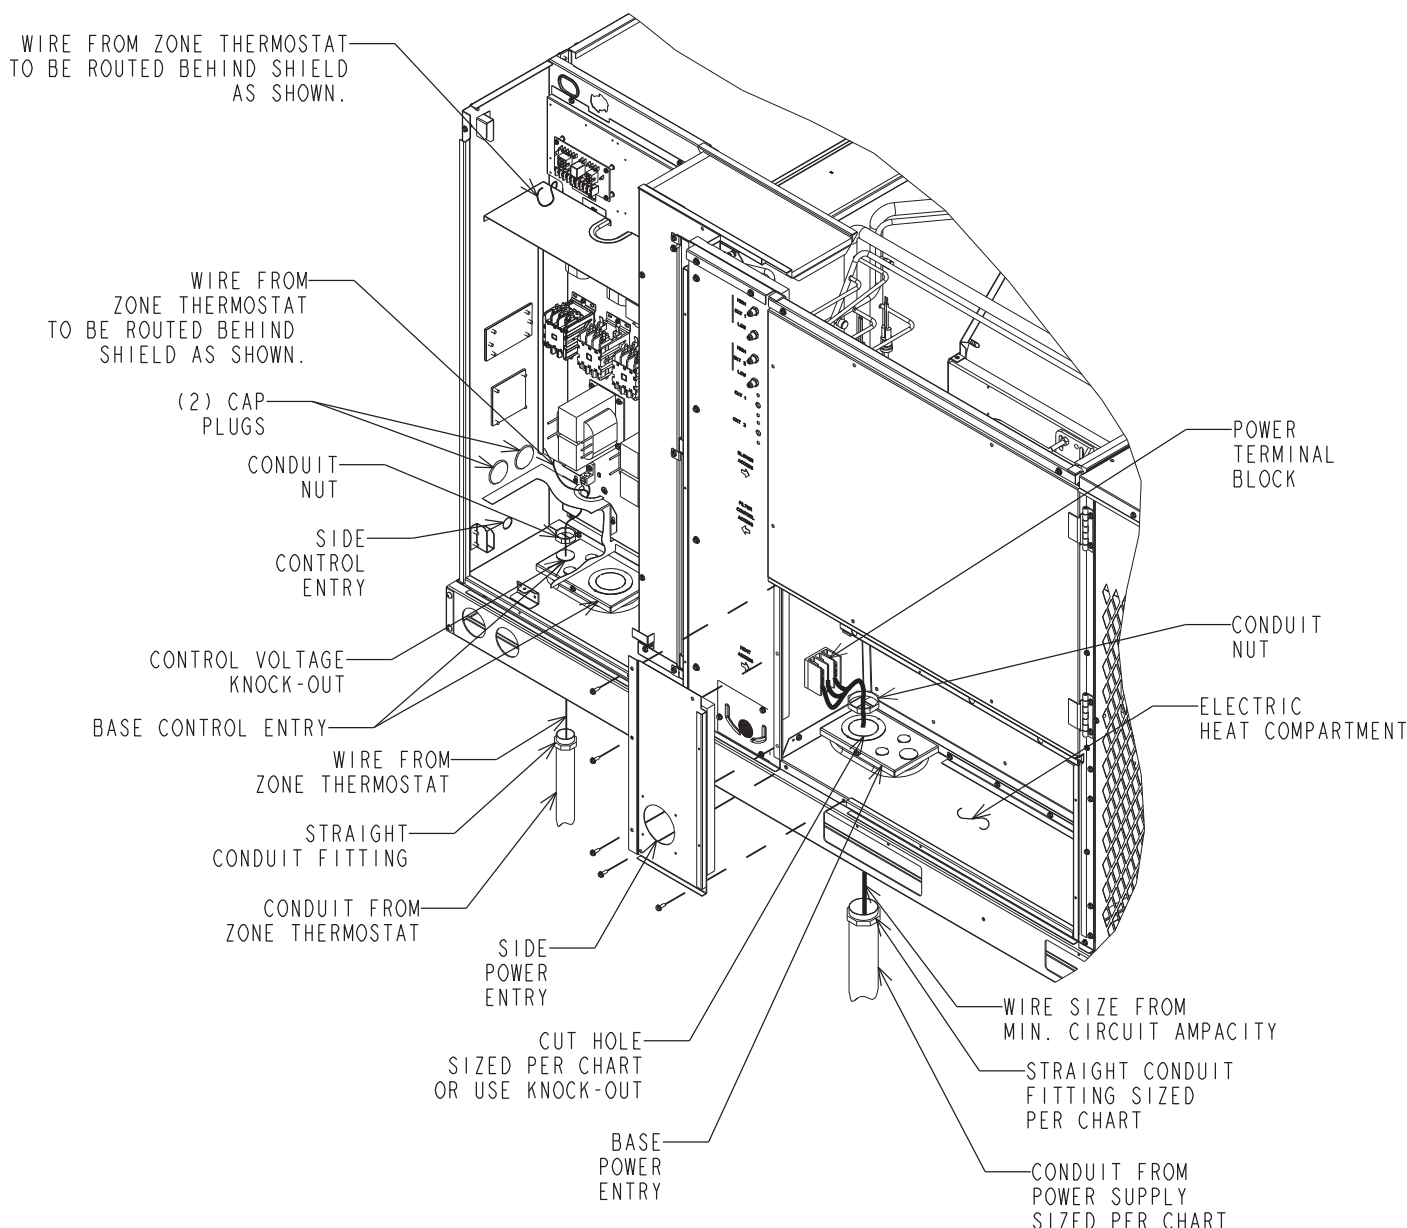

4. Figure 15 shows representative low voltage connection diagrams. Read your thermostat installation instructions for any special requirements for your specific thermostat.

C. INTERNAL WIRING

1. A diagram of the internal wiring of this unit is located on the inside of the control access panel and in this manual. If any of the original wiring must be replaced, the wire gauge and insulation must be the same as original wiring. Transformer is factory-wired for 230 volts on 208/230 volt models and must be changed for 208-volt applications. See unit wiring diagram for 208-volt wiring.

D. GROUNDING

▲ WARNING

THE UNIT MUST BE PERMANENTLY GROUNDED. A GROUNDING LUG IS PROVIDED IN THE ELECTRIC HEAT ACCESS AREA FOR A GROUND WIRE. FAILURE TO GROUND THIS UNIT CAN RESULT IN FIRE OR

ELECTRICAL SHOCK CAUSING PROPERTY DAMAGE, SEVERE PERSONAL INJURY OR DEATH.

E. THERMOSTAT

The thermostat should be mounted on an inside wall about five feet above the floor in a location where it will not be affected by unconditioned air, sun, or drafts from open doors or other sources. READ installation instructions in air conditioner thermostat package CAREFULLY because each has some different wiring requirements.

XII. INDOOR AIR FLOW DATA


Belt-drive blower models have motor sheaves set for proper CFM at a typical external static. See Tables C through G for blower performance.

XIII. CRANKCASE HEAT (OPTIONAL)

Crankcase heaters are standard on 6 ton and single stage 7½.

Crankcase heat is not required on other models, but may be desirable under certain conditions.

FIGURE 15
THERMOSTAT
CONNECTIONS
DIAGRAM

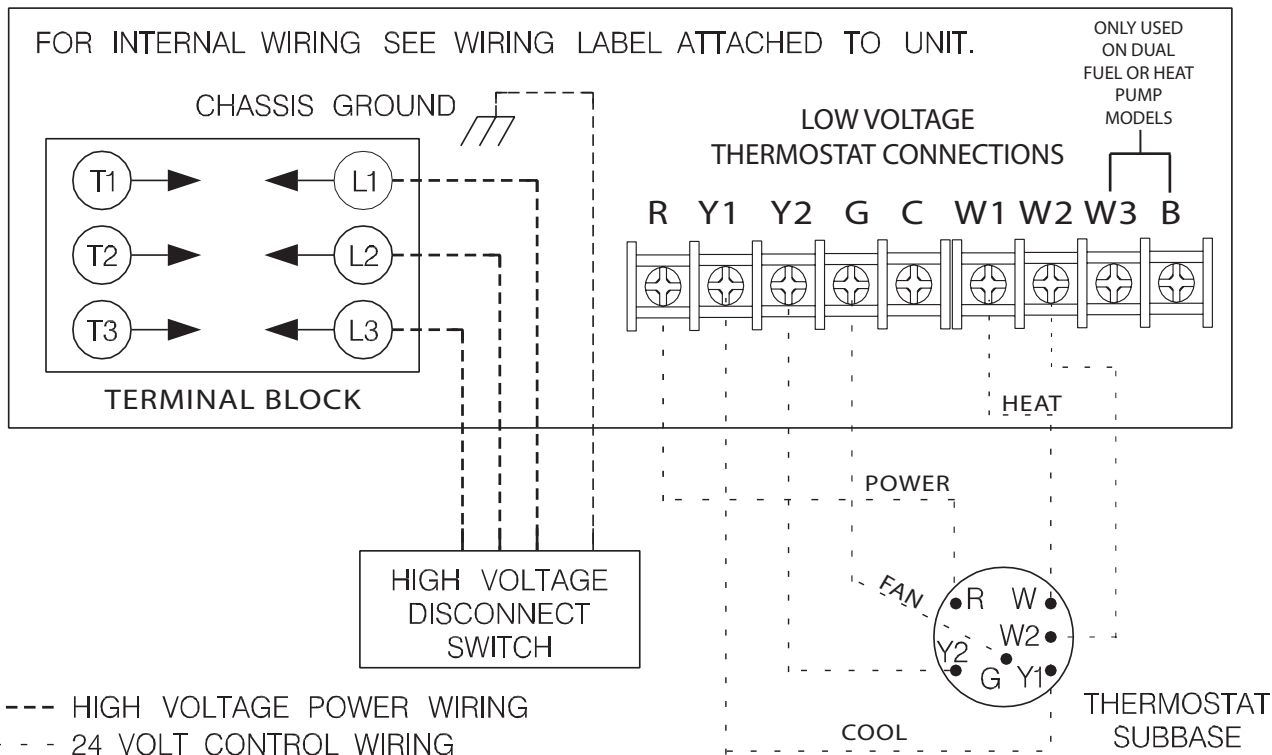

ST-A1125-12-00

XIV. PRE-START CHECK

1. Is unit properly located and slightly slanted toward indoor condensate drain?
2. Is ductwork insulated, weatherproofed, with proper spacing to combustible materials?
3. Is air free to travel to and from outdoor coil? (See Figure 4.)
4. Is the wiring correct, tight, and according to unit wiring diagram?
5. Is unit grounded?
6. Are field supplied air filters in place and clean?
7. Do the outdoor fan and indoor blower turn freely without rubbing, and are they tight on the motor shafts?

XV. STARTUP

1. Turn thermostat to "OFF," turn "on" power supply at disconnect switch.
2. Turn temperature setting as high as it will go.
3. Turn fan switch to "ON."
4. Indoor blower should run. Be sure it is running in the right direction.
5. Turn fan switch to "AUTO." Turn system switch to "COOL" and turn temperature setting below room temperature. Unit should run in cooling mode.
6. Is outdoor fan operating correctly in the right direction?
7. Is compressor running correctly.

Record the following after the unit has run some time.

A. Operating Mode _____

B. Discharge Pressures (High) _____ PSIG [kPa]

C. Vapor Pressure at Compressors (Low) _____ PSIG [kPa]

D. Vapor Line Temperature at Compressors _____ °F [C°].

E. Indoor Dry Bulb _____ °F [C°].

F. Indoor Wet Bulb _____ °F [C°].

G. Outdoor Dry Bulb _____ °F [C°].

H. Outdoor Wet Bulb _____ °F [C°].

I. Voltage at Contactor _____ Volts

J. Current at Contactors _____ Amps

K. Model Number _____

L. Serial Number _____

M. Location _____

N. Owner _____

O. Date _____

8. Turn thermostat system switch to "HEAT." Unit compressors should stop. Raise temperature setting to above room temperature. Unit should run in heating mode and auxiliary heaters, if installed, should come on.
9. Check the refrigerant charge using the instructions located on unit charging chart. Replace service port caps. Service port cores are for system access only and will leak if not tightly capped.
10. Adjust discharge air grilles and balance system.
11. Check ducts for condensation and air leaks.
12. Check unit for tubing and sheet metal rattles.
13. Instruct the owner on operation and maintenance.
14. Leave "INSTALLATION" and "USE AND CARE" instructions with owner

XVI. OPERATION

COOLING MODE

With thermostat in the cool mode, fan auto and the room temperature higher than the thermostat setting:

- A. Indoor blower contactor is energized through thermostat contact (G).
- B. Compressor contactors are energized through thermostat contacts (Y1) & (Y2) and high pressure controls.
- C. Economizer enthalpy control (if installed) controls operation of first-stage cooling and positions fresh air damper to maintain mixed air temperature. Second-stage cooling operates normally as required by second stage of thermostats.
- D. The system will continue in cooling operation as long as all safety controls are closed, until the thermostat is satisfied.

HEATING MODE

With the thermostat in heat mode, fan on auto, and the room temperature lower than the thermostat setting, the Indoor blower contactor is energized through thermostat contact (G).

WARNING

ONLY ELECTRIC HEATER KITS SUPPLIED BY THIS MANUFACTURER AS DESCRIBED IN THIS PUBLICATION HAVE BEEN DESIGNED, TESTED, AND EVALUATED FOR USE WITH THIS UNIT. USE OF ANY OTHER MANUFACTURED ELECTRIC HEATERS INSTALLED WITHIN THIS UNIT MAY CAUSE HAZARDOUS CONDITIONS RESULTING IN PROPERTY DAMAGE, FIRE, BODILY INJURY OR DEATH.

In the heating mode, the thermostat will energize one or more supplementary heaters.

XVII. MISCELLANEOUS

REPLACEMENT PARTS

Contact your local distributor for a complete parts list.

XVIII. AIRFLOW DATA TABLES

AIR-FLOW PERFORMANCE – 6 TON RLNL-B072/C072 MODELS

Model RKNL-B072/C072		External Static Pressure — Inches of Water [kPa]																															
Voltage 208/230, 460, 575 — 3 phase		0.1 [02]		0.2 [05]		0.3 [07]		0.4 [10]		0.5 [12]		0.6 [15]		0.7 [17]		0.8 [20]		0.9 [22]		1.0 [25]		1.1 [27]		1.2 [30]		1.3 [32]		1.4 [35]		1.5 [37]			
Air Flow	CFM [L/s]	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W		
1800 [849]	—	—	—	—	—	—	—	—	—	835	631	880	686	924	740	965	794	1005	847	1043	898	1079	949	1113	999	1146	1048	1177	1096	1206	1144		
1900 [897]	—	—	—	—	—	—	—	808	622	854	681	899	739	941	795	982	851	1021	906	1058	960	1093	1013	1127	1065	1159	1117	1189	1167	1217	1217		
2000 [944]	—	—	—	—	—	—	—	828	673	874	734	918	794	959	853	999	911	1037	968	1074	1025	1108	1080	1141	1135	1172	1189	1201	1242	1228	1293		
2100 [991]	—	—	—	—	—	—	803	663	850	727	894	790	937	853	978	914	1017	974	1055	1034	1090	1093	1124	1151	1156	1208	1186	1264	1214	1319	1241	1373	
2200 [1038]	—	—	—	—	—	—	826	718	871	784	915	850	957	914	997	978	1036	1041	1072	1103	1107	1164	1140	1224	1171	1283	1201	1342	1228	1399	1254	1456	
2300 [1085]	—	—	—	—	802	706	849	775	894	844	937	912	978	979	1017	1045	1055	1110	1091	1174	1125	1238	1157	1300	1187	1362	1216	1423	1242	1482	1267	1541	
2400 [1133]	—	—	—	—	826	764	872	836	916	907	959	977	999	1047	1038	1115	1075	1183	1110	1249	1143	1315	1174	1380	1204	1444	1231	1507	1257	1569	1282	1630	
2500 [1180]	805	751	852	826	897	900	940	973	981	1046	1021	1118	1059	1188	1095	1258	1129	1327	1162	1395	1192	1462	1221	1529	1248	1594	1273	1658	—	—	—	—	
2600 [1227]	831	813	877	890	922	967	964	1043	1043	1005	1118	1044	1191	1081	1265	1116	1337	1149	1408	1181	1478	1211	1548	1239	1616	1265	1684	—	—	—	—	—	
2700 [1274]	858	878	904	958	947	1037	989	1115	1029	1192	1067	1288	1103	1344	1137	1418	1170	1492	1201	1565	1230	1637	1257	1708	1282	1778	—	—	—	—	—	—	
2800 [1321]	886	947	931	1029	973	1110	1014	1190	1053	1270	1091	1349	1126	1426	1160	1503	1191	1579	1221	1654	1250	1728	1276	1802	—	—	—	—	—	—	—	—	

NOTE: L-Drive left of bold line, M-Drive right of bold line.

Drive Package	L										M									
Motor H.P. [W]	1.5 [118.6]										1.5 [118.6]									
Blower Sheave	AK66										AK66									
Motor sheave	1VP-44										1VP-50									
Turns Open	0	1	2	3	4	5	0	1	2	3	4	5								
RPM	1119	1072	1019	967	915	859	1267	1215	1163	1113	1064	1015								

- NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at ARI minimum E.S.P.
4. Drive data shown is for horizontal airflow with dry coil. add component resistance to duct resistance to determine total E.S.P.

COMPONENT AIR RESISTANCE, IWC
6 TONS [21.10 kW]

AIRFLOW CORRECTION FACTORS
6 TONS [21.10 kW]

Actual CFM [L/s]	1800 [849]	2000 [944]	2200 [1038]	2400 [1133]	2600 [1227]	2800 [1321]
Total MBH	0.97	0.98	0.99	1.00	1.01	1.02
Sensible MBH	0.91	0.94	0.97	1.00	1.02	1.05
Power KW	0.99	0.99	0.99	1.00	1.00	1.01

Component	Standard Indoor Airflow-CFM [L/s]					
	1800 [849]	2000 [944]	2200 [1038]	2400 [1133]	2600 [1227]	2800 [1321]
	Resistance-Inches Water [Kpa]					
Wet Coil	0.031 [0.008]	0.036 [0.009]	0.041 [0.01]	0.047 [0.012]	0.051 [0.013]	0.055 [0.014]
Concentric Diffuser RXRN-FA65 or FA75 & Transition RXMC-CE05	DNA	DNA	DNA	DNA	0.017 [0.042]	0.02 [0.050]
Concentric Diffuser RXRN-AA61 or AA71 & Transition RXMC-CE05	DNA	DNA	DNA	DNA	DNA	DNA
Economizer 100% R.A. Damper Open	0.02 [0.005]	0.03 [0.007]	0.04 [0.01]	0.05 [0.012]	0.06 [0.015]	0.07 [0.017]
Horizontal Economiser 100% R.A. Open	0.02 [0.005]	0.02 [0.005]	0.03 [0.007]	0.03 [0.007]	0.04 [0.01]	0.04 [0.01]
Horizontal Economiser 100% O.A. Damper Open	0.07 [0.017]	0.07 [0.017]	0.07 [0.017]	0.08 [0.02]	0.08 [0.02]	0.08 [0.02]

[] Designates Metric Conversions

AIR-FLOW PERFORMANCE – 7.5 TON RLNL-B085/C085 & B090/C090 MODELS

Air Flow CFM [L/s]	Capacity 7.5 Ton [26.4 kW]															
	External Static Pressure—Inches of Water [kPa]															
	0.1 [0.02]	0.2 [0.05]	0.3 [0.07]	0.4 [0.10]	0.5 [0.12]	0.6 [0.15]	0.7 [0.17]	0.8 [0.20]	0.9 [0.22]	1.0 [0.25]	1.1 [0.27]	1.2 [0.30]	1.3 [0.32]	1.4 [0.35]	1.5 [0.37]	1.6 [0.40]
RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM
2400 [1133]	—	—	—	540 580	582 612	729 645	812 711	890 740	952 770	1014 799	1076 828	1138 857	1200 887	1261 929	1538 958	1623 987
2500 [1180]	—	—	—	552 633	593 717	624 791	656 878	720 950	749 1012	778 1074	808 1136	837 1198	866 1260	895 1322	936 1602	965 1687
2600 [1227]	—	—	—	564 687	603 769	635 853	667 945	729 1010	758 1072	787 1134	816 1196	846 1258	875 1320	914 1581	943 1666	972 1751
2700 [1274]	—	—	—	539 670	577 744	614 828	648 923	680 1017	737 1070	766 1132	796 1194	825 1256	854 1318	883 1380	921 1645	950 1730
2800 [1321]	—	—	554 733	590 801	625 887	660 993	708 1069	746 1131	775 1192	804 1254	834 1316	863 1378	892 1440	928 1709	958 1794	987 1880
2900 [1369]	—	—	569 801	604 836	638 856	673 1069	725 1129	755 1191	784 1253	813 1315	842 1376	872 1438	906 1688	936 1773	965 1858	994 1944
3000 [1416]	546 741	854 869	617 931	650 1024	685 1144	734 1189	763 1251	792 1313	822 1375	851 1437	880 1498	913 1752	943 1837	972 1923	1002 2008	1031 2093
3100 [1463]	560 804	598 940	632 1010	664 1107	713 1187	743 1249	772 1311	801 1373	830 1435	860 1497	889 1559	921 1816	950 1901	979 1987	1009 2072	1038 2157
3200 [1510]	576 876	612 1011	646 1089	678 1189	722 1247	751 1309	781 1371	810 1433	839 1495	868 1557	898 1619	928 1880	957 1965	987 2051	1016 2136	1045 2222
3300 [1557]	592 954	628 1096	660 1168	692 1274	731 1307	760 1369	789 1431	818 1493	848 1555	877 1617	906 1859	935 1944	965 2029	994 2115	1023 2200	1053 2286
3400 [1605]	607 1030	643 1180	673 1247	710 1306	739 1368	769 1430	798 1491	827 1553	856 1615	886 1677	913 1923	943 2008	972 2094	1001 2179	1031 2264	1060 2350
3500 [1652]	622 1112	658 1271	689 1344	719 1386	748 1428	777 1490	807 1552	836 1613	865 1675	894 1737	920 1987	950 2072	979 2158	1009 2243	1038 2328	1067 2414
3600 [1699]	638 1202	672 1361	704 1440	728 1426	757 1488	786 1550	815 1612	844 1674	874 1735	903 1797	928 2051	957 2136	986 2222	1016 2307	1045 2393	1075 2478

NOTE: L-Drive left of 1st bold line, M-Drive in middle of bold lines, N-Drive right of 2nd bold line.

Drive Package	L				M				N			
Motor H.P. [W]	2.0 [1491.4]				2.0 [1491.4]				3.0 [2237.1]			
Blower Sheave	BK110				BK90				BK65			
Motor Sheave	1VP-44				1VP-44				1VP-44			
Turns Open	1	2	3	4	5	6	1	2	3	4	5	6
RPM	682	650	620	587	555	523	869	838	806	774	742	710

- NOTES: 1. Factory sheave settings are shown in bold print.
2. Re-adjustment of sheave required to achieve rated airflow at ARI minimum E.S.P.
3. Do not operate above blower RPM shown as motor overloading will occur.
4. Do not set motor sheave below one turn open.

AIRFLOW CORRECTION FACTORS
7.5 TON [26.4 kW]

ACTUAL—CFM [L/s]	2600 [1227]	2800 [1321]	3000 [1416]	3200 [1510]	3400 [1605]	3600 [1699]	3800 [1793]
TOTAL MBH	0.97	0.98	0.99	1.00	1.01	1.02	1.03
SENSIBLE MBH	0.91	0.94	0.97	1.00	1.02	1.05	1.08
POWER KW	0.99	0.99	0.99	1.00	1.00	1.01	1.02

- NOTES: 1. Multiply correction factor times gross performance data.
2. Resulting sensible capacity cannot exceed total capacity.

[] Designates Metric Conversions

COMPONENT AIR RESISTANCE, IWC
7.5 TON [26.4 kW]

Component	Standard Indoor Airflow—CFM [L/s]						
	2400 [1133]	2600 [1227]	2800 [1321]	3000 [1416]	3200 [1510]	3400 [1604]	3600 [1699]
	Resistance—Inches Water [kPa]						
Wet Coil	0.047 [0.012]	0.051 [0.013]	0.055 [0.014]	0.060 [0.015]	0.065 [0.016]	0.071 [0.018]	0.076 [0.019]
Concentric Diffuser RXRN-FA65 or FA75 & Transition RXMC-CD04	DNA	.017 [0.042]	.020 [0.050]	.025 [0.062]	.031 [0.077]	.037 [0.092]	DNA
Concentric Diffuser RXRN-AA61 or AA71 & Transition RXMC-CE05	DNA	DNA	DNA	DNA	DNA	DNA	.017 [0.042]
Economizer	0.05 [0.012]	0.06 [0.015]	0.07 [0.017]	0.08 [0.020]	0.09 [0.022]	0.10 [0.025]	0.11 [0.027]
100% R.A. Damper Open							
Horizontal Economizer	0.03 [0.007]	0.04 [0.009]	0.04 [0.010]	0.05 [0.011]	0.05 [0.012]	0.06 [0.014]	0.06 [0.015]
100% R.A. Damper Open							
Horizontal Economizer	0.08 [0.020]	0.08 [0.020]	0.08 [0.020]	0.10 [0.024]	0.11 [0.027]	0.12 [0.030]	0.13 [0.032]
100% O.A. Damper Open							

NOTE: Add component resistance to duct resistance to determine total external static pressure.
DNA = Data not Available.

AIR-FLOW PERFORMANCE – 8.5 TON RLNL B102/C102 MODELS

[illegible]

NOTE: L-Drive left of bold line, M-Drive right of bold line.

Drive Package	L						M					
Motor H.P. [W]	2.0 [1491.4]						3.0 [2237.1]					
Blower Sheave	BK90						BK95					
Motor Sheave	1VP-44						1VP-44					
Turns Open	1	2	3	4	5	6	1	2	3	4	5	6
RPM	860	824	791	757	723	690	1148	1098	1049	999	949	899

NOTES: 1. Factory sheave settings are shown in bold print.
2. Re-adjustment of sheave required to achieve rated airflow at ARI minimum E.S.P.
3. Do not operate above blower RPM shown as motor overloading will occur.
4. Do not set motor sheave below one turn open.

COMPONENT AIR RESISTANCE, IWC
8.5 TON [29.9 kW]

AIRFLOW CORRECTION FACTORS

	2600 [1227]	2800 [1321]	3000 [1416]	3200 [1510]	3400 [1605]	3600 [1699]	3800 [1793]	4000 [1888]	4200 [1982]
ACTUAL—CFM LL/S	0.96	0.97	0.98	0.99	1.00	1.01	1.02	1.03	1.04
TOTAL MBH	0.86	0.91	0.94	0.97	1.00	1.03	1.05	1.07	1.09
SENSIBLE MBH	0.88	0.91	0.94	0.97	1.00	1.03	1.05	1.07	1.09
POWER kW	0.99	0.99	0.99	1.00	1.00	1.01	1.01	1.02	1.03

NOTES: 1. Multiply correction factor times gross performance data.
2. Resulting sensible capacity cannot exceed total capacity.

Designates Metric Conversions

[illegible]

NOTE: Add component resistance to duct resistance to determine total external static pressure.
DNA = Data not Available.

AIR-FLOW PERFORMANCE – 10 TON RLNL B120/C120 MODELS

Air Flow CFM [L/s]	Capacity 10 Ton [35.2 kW]										External Static Pressure—Inches of Water [kPa]																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	
	0.1 [0.02]		0.2 [0.05]		0.3 [0.07]		0.4 [0.10]		0.5 [0.12]		0.6 [0.15]		0.7 [0.17]		0.8 [0.20]		0.9 [0.22]		1.0 [0.25]		1.1 [0.27]		1.2 [0.30]		1.3 [0.32]		1.4 [0.35]		1.5 [0.37]		1.6 [0.40]		1.7 [0.42]		1.8 [0.45]		1.9 [0.47]		2.0 [0.50]		2.1 [0.52]		2.2 [0.55]		2.3 [0.57]																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															
	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W

NOTE: L-Drive left of bold line, M-Drive right of bold line.

Drive Package	L						M					
Motor H.P. [W]	2.0 [1491.4]						3.0 [2237.1]					
Blower Sheave	BK90						BK65					
Motor Sheave	1VP-44						1VP-44					
Turns Open	1	2	3	4	5	6	1	2	3	4	5	6
RPM	845	810	775	739	704	669	1138	1089	1041	992	943	894

- NOTES: 1. Factory sheave settings are shown in bold print.
2. Re-adjustment of sheave required to achieve rated airflow at ARI minimum E.S.P.
3. Do not operate above blower RPM shown as motor overloading will occur.
4. Do not set motor sheave below one turn open.

AIRFLOW CORRECTION FACTORS 10 TON [35.2 kW]

ACTUAL—CFM [L/s]	3200 [1510]	3400 [1605]	3600 [1699]	3800 [1793]	4000 [1888]	4200 [1982]	4400 [2077]	4600 [2171]	4800 [2265]
TOTAL MBH	0.96	0.97	0.98	0.99	1.00	1.01	1.02	1.03	1.04
SENSIBLE MBH	0.91	0.93	0.95	0.97	1.00	1.02	1.05	1.07	1.09
POWER kW	0.98	0.98	0.99	0.99	1.00	1.00	1.01	1.01	1.01

- NOTES: 1. Multiply correction factor times gross performance data.
2. Resulting sensible capacity cannot exceed total capacity.

[] Designates Metric Conversions

COMPONENT AIR RESISTANCE, IWC 10 TON [35.2 kW]

Component	Standard Indoor Airflow—CFM [L/s]																Resistance—Inches Water [kPa]																																								
	3200 [1510]	3400 [1604]	3600 [1699]	3800 [1793]	4000 [1888]	4200 [1982]	4400 [2076]	4600 [2171]	4800 [2265]																																																
	Wet Coil	0.065 [0.016]	0.071 [0.018]	0.076 [0.019]	0.082 [0.020]	0.087 [0.022]	0.093 [0.023]	0.099 [0.025]	0.105 [0.026]	0.110 [0.027]	Concentric Diffuser RXRN-FA65 or FA75 & Transition RXMC-CD04	0.31 [0.077]	0.37 [0.092]	DNA	DNA	DNA	DNA	DNA	DNA	DNA	Concentric Diffuser RXRN-AA61 or AA71 & Transition RXMC-CE05	DNA	DNA	DNA	DNA	DNA	DNA	DNA	DNA	DNA	Concentric Diffuser RXRN-AA66 or AA76 & Transition RXMC-CF06	0.09 [0.022]	0.10 [0.025]	0.11 [0.027]	0.12 [0.030]	0.13 [0.032]	0.14 [0.035]	0.15 [0.037]	0.16 [0.040]	0.17 [0.042]	Horizontal Economizer	0.05 [0.012]	0.06 [0.014]	0.07 [0.017]	0.08 [0.020]	0.09 [0.022]	0.10 [0.024]	0.11 [0.025]	Horizontal Economizer	0.11 [0.027]	0.12 [0.030]	0.13 [0.032]	0.15 [0.036]	0.16 [0.040]	0.18 [0.044]	0.19 [0.047]	0.20 [0.50]

AIR-FLOW PERFORMANCE – 12.5 TON RLNL B150/C150 MODELS

Model RKNL-B150 & RKNL-C150		External Static Pressure — Inches of Water [kPa]																							
Air Flow CFM [L/s]		Voltage 208/230, 460, 575 — 3 phase																							
		0.1 [0.2]	0.2 [0.05]	0.3 [0.07]	0.4 [0.10]	0.5 [0.12]	0.6 [0.15]	0.7 [0.17]	0.8 [0.20]	0.9 [0.22]	1.0 [0.25]	1.1 [0.27]	1.2 [0.30]	1.3 [0.32]	1.4 [0.35]	1.5 [0.37]	1.6 [0.40]	1.7 [0.42]	1.8 [0.45]	1.9 [0.47]	2.0 [0.50]				
		RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W
3800 [1793]	—	—	—	—	—	—	834	1660	861	1743	888	1826	914	1909	939	1992	965	2075	990	2158	1014	1038	2324	1049	2430
3900 [1840]	—	—	—	—	—	—	820	1647	847	1734	874	1821	900	1908	926	1995	951	2062	976	2169	1001	2256	1025	2343	1049
4000 [1888]	—	—	—	—	—	—	833	1726	860	1817	887	1908	913	1999	938	2090	963	2181	988	2272	1013	2363	1037	2454	1060
4100 [1935]	—	—	—	—	—	—	820	1717	847	1812	873	1907	900	2002	925	2097	951	2192	976	2287	1000	2382	1024	2477	1048
4200 [1982]	—	—	—	—	—	—	834	1808	860	1907	887	2006	913	2106	938	2205	963	2304	988	2473	1012	2502	1036	2601	1060
4300 [2029]	—	—	—	—	—	—	821	1805	848	1908	874	2011	900	2114	926	2217	951	2320	976	2423	1001	2527	1025	2630	1048
4400 [2076]	—	—	—	—	—	—	835	1909	862	2016	888	2123	914	2230	939	2337	964	2445	989	2552	1013	2659	1037	2766	1061
4500 [2123]	—	—	—	—	—	—	823	1910	850	2021	876	2133	902	2244	928	2355	953	2466	978	2577	1002	2688	1026	2800	1050
4600 [2171]	812	1912	838	2027	865	2142	891	2258	917	2373	942	2488	967	2603	991	2718	1015	2834	1039	2949	1063	3064	1077	2941	1098
4700 [2218]	827	2034	854	2153	880	2272	906	2391	931	2510	956	2630	981	2749	1005	2868	1029	2987	1066	3273	1079	3119	1100	3243	1121
4800 [2265]	842	2163	869	2287	895	2410	920	2533	946	2656	970	2780	995	2903	1019	3026	1043	3149	1066	3327	1079	3219	1100	3243	1121
4900 [2312]	858	2302	884	2429	910	2556	935	2684	960	2811	985	2938	1009	3065	1033	3193	1056	3320	1070	3153	1091	3278	1112	3403	1132
5000 [2359]	874	2449	900	2580	926	2711	951	2843	975	2974	1000	3105	1024	3236	1047	3368	1070	3499	1082	3316	1103	3444	1124	3571	1144
5100 [2407]	890	2604	916	2739	941	2875	966	3010	990	3145	1015	3281	1038	3416	1062	3551	1074	3357	1095	3486	1115	3616	1136	3746	1156
5200 [2454]	906	2768	932	2907	957	3046	982	3186	1006	3325	1030	3465	1053	3604	1076	3743	1087	3532	1107	3664	1128	3796	1148	3928	1168
5300 [2501]	923	2940	948	3083	973	3227	997	3370	1021	3514	1045	3657	1068	3800	1079	3579	1100	3713	1120	3848	1140	3982	1160	4117	1180
5400 [2548]	939	3121	964	3268	989	3416	1013	3563	1037	3710	1060	3858	1072	3829	1092	3766	1113	3902	1133	4039	1153	4176	1173	4312	1193
5500 [2595]	956	3310	981	3461	1005	3613	1029	3764	1053	3916	1076	4067	1085	3820	1106	3959	1126	4098	1146	4237	1166	4376	1186	4515	1205
5600 [2643]	973	3508	998	3663	1022	3819	1045	3974	1068	4130	1079	3877	1099	4018	1120	4159	1140	4301	1160	4442	1179	4583	1199	4724	1218
5700 [2690]	990	3714	1014	3873	1038	4033	1062	4192	1072	3936	1093	4080	1113	4223	1134	4367	1153	4510	1173	4654	1193	4797	1212	4941	1241
5800 [2737]	1007	3928	1031	4092	1055	4255	1078	4419	1087	4144	1107	4290	1128	4435	1148	4581	1167	4727	1187	4873	1206	5018	—	—	—

NOTE: L-Drive left of bold line, M-Drive right of bold line.

Drive Package	L (B-51)		M (B-58)	
Motor H.P. [W]	3.0 [2237.1]		5.0 [3728.5]	
Blower Sheave	BK72H		BK85H	
Motor sheave	1VP-44		1VP-65	
Turns Open	1	2	3	4
RPM	1058	1022	978	932

NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at ARI minimum E.S.P.
4. Drive data shown is for horizontal airflow with dry coil. add component resistance to duct resistance to determine total E.S.P.

AIRFLOW CORRECTION FACTORS
12.5 TON [44 kW]

ACTUAL—CFM [L/s]	3800 [1793]	4000 [1888]	4200 [2077]	4400 [2265]	4600 [2454]	4800 [2643]	5000 [2831]	5200 [3020]	5400 [3208]	5600 [3396]	5800 [3584]
TOTAL MBH	0.95	0.96	0.97	0.98	0.99	1.00	1.01	1.02	1.03	1.04	1.05
SENSIBLE MBH	0.85	0.88	0.91	0.94	0.97	1.00	1.03	1.05	1.07	1.09	1.11
POWER kW	0.98	0.98	0.99	0.99	1.00	1.00	1.00	1.01	1.02	1.02	1.03

NOTES: 1. Multiply correction factor times gross performance data.
2. Resulting sensible capacity cannot exceed total capacity.

[] Designates Metric Conversions

COMPONENT AIR RESISTANCE, IWC 12.5 TON [44 kW]

Component	Standard Indoor Airflow—CFM [L/s]																							
	3800	4000	4200	4400	4600	4800	5000	5200	5400	5600	5800	Resistance—Inches Water [kPa]												
	[1793]	[1888]	[1982]	[2076]	[2171]	[2265]	[2359]	[2454]	[2548]	[2643]	[2737]													
Wet Coil	0.082 [0.020]	0.087 [0.022]	0.093 [0.023]	0.099 [0.025]	0.105 [0.026]	0.110 [0.027]	0.115 [0.029]	0.120 [0.030]	0.125 [0.031]	0.131 [0.033]	0.136 [0.034]													
Concentric Diffuser RXRN-AA61 or AA71 & Transition RXMC-CE05	0.18 [0.045]	0.21 [0.052]	0.24 [0.060]	0.27 [0.067]	DNA	DNA	DNA	DNA	DNA	DNA	DNA													
Concentric Diffuser RXRN-AA66 or AA76 & Transition RXMC-CF06	DNA	DNA	DNA	DNA	0.31 [0.077]	0.32 [0.080]	0.34 [0.085]	0.36 [0.090]	0.39 [0.097]	DNA	DNA													
Economizer	0.12 [0.030]	0.13 [0.032]	0.14 [0.035]	0.15 [0.037]	0.16 [0.040]	0.17 [0.042]	0.18 [0.045]	0.19 [0.047]	0.20 [0.050]	0.21 [0.052]	0.22 [0.055]													
100% R.A. Damper Open	0.07 [0.017]	0.08 [0.020]	0.09 [0.021]	0.09 [0.022]	0.10 [0.024]	0.10 [0.025]	0.11 [0.026]	0.11 [0.027]	0.12 [0.028]	0.12 [0.029]	0.13 [0.030]													
Horizontal Economizer	0.15 [0.036]	0.16 [0.040]	0.18 [0.044]	0.19 [0.047]	0.20 [0.050]	0.21 [0.052]	0.21 [0.052]	0.21 [0.052]	0.22 [0.055]	0.23 [0.057]	0.24 [0.060]													

NOTE: Add component resistance to duct resistance to determine total external static pressure.
DNA = Data not Available.

XIX. HEATER KIT CHARACTERISTICS

TABLE A

AUXILIARY HEATER KITS CHARACTERISTICS AND APPLICATION (RLNL MODELS)

208/240V – 3 PHASE

UNIT MODEL NUMBER RLNL-	HEATER KIT MODEL NO. RXJJ-	HEATER kW @ 208/240 V/ 3 PHASE	HEATER KIT FLA	UNIT MIN. CKT. AMPACITY	MAX. FUSE OR CKT. BKR. SIZE (CKT. BKR. MUST BE HACR TYPE FOR USA)
B072CL/ C072CL	NONE	—	—	37/37	50/50
	CC10C	7.2/9.6	20.0/23.1	37/37	50/50
	CC15C	10.8/14.4	30.0/34.6	45/51	50/60
	CC20C	14.4/19.2	40.0/46.2	57/65	60/70
	CC30C	21.6/28.8	60.0/69.3	82/94	90/100
B072CM/ C072CM	NONE	—	—	37/37	50/50
	CC10C	7.2/9.6	20.0/23.1	37/37	50/50
	CC15C	10.8/14.4	30.0/34.6	45/51	50/60
	CC20C	14.4/19.2	40.0/46.2	57/65	60/70
	CC30C	21.6/28.8	60.0/69.3	82/94	90/100
B085CL/ C085CL	NONE	—	—	42/42	60/60
	CC10C	7.2/9.6	20.0/23.1	42/42	60/60
	CC15C	10.8/14.4	30.0/34.6	48/54	60/60
	CC20C	14.4/19.2	40.0/46.2	60/68	60/70
	CC30C	21.6/28.8	60.0/69.3	85/97	90/100
	CC40C	28.8/38.4	80.1/92.4	111/126	125/150
B085CM/ C085CM	NONE	—	—	42/42	60/60
	CC10C	7.2/9.6	20.0/23.1	42/42	60/60
	CC15C	10.8/14.4	30.0/34.6	48/54	60/60
	CC20C	14.4/19.2	40.0/46.2	60/68	60/70
	CC30C	21.6/28.8	60.0/69.3	85/97	90/100
	CC40C	28.8/38.4	80.1/92.4	111/126	125/150
B085CN/ C085CN	NONE	—	—	47/47	70/70
	CC10C	7.2/9.6	20.0/23.1	47/47	70/70
	CC15C	10.8/14.4	30.0/34.6	54/60	70/70
	CC20C	14.4/19.2	40.0/46.2	67/74	70/80
	CC30C	21.6/28.8	60.0/69.3	92/103	100/110
	CC40C	28.8/38.4	80.1/92.4	117/132	125/150

HEATER KIT CHARACTERISTICS

TABLE B

AUXILIARY HEATER KITS CHARACTERISTICS AND APPLICATION (RLNL MODELS)

208/240V – 3 PHASE

UNIT MODEL NUMBER RLNL-	HEATER KIT MODEL NO. RXJJ-	HEATER KW @ 208/240 V	HEATER KIT FLA	UNIT MIN. CKT. AMPACITY	MAX. FUSE OR CKT. BKR. SIZE (CKT. BKR. MUST BE HACR TYPE FOR USA)
B090CL/ C090CL	NONE	—	—	43/43	50/50
	CC10C	7.2/9.6	20.0/23.1	43/43	50/50
	CC15C	10.8/14.4	30.0/34.6	48/54	50/60
	CC20C	14.4/19.2	40.0/46.2	60/68	60/70
	CC30C	21.6/28.8	60.0/69.3	85/97	90/100
	CC40C	28.8/38.4	80.1/92.4	111/126	125/150
B090CM/ C090CM	NONE	—	—	43/43	50/50
	CC10C	7.2/9.6	20.0/23.1	43/43	50/50
	CC15C	10.8/14.4	30.0/34.6	48/54	50/60
	CC20C	14.4/19.2	40.0/46.2	60/68	60/70
	CC30C	21.6/28.8	60.0/69.3	85/97	90/100
	CC40C	28.8/38.4	80.1/92.4	111/126	125/150
B090CN/ C090CN	NONE	—	—	48/48	60/60
	CC10C	7.2/9.6	20.0/23.1	48/48	60/60
	CC15C	10.8/14.4	30.0/34.6	54/60	60/60
	CC20C	14.4/19.2	40.0/46.2	67/74	70/80
	CC30C	21.6/28.8	60.0/69.3	92/103	100/110
	CC40C	28.8/38.4	80.1/92.4	117/132	125/150
B102CL/ C102CL	NONE	—	—	49/49	60/60
	CC10C	7.2/9.6	20.0/23.1	49/49	60/60
	CC15C	10.8/14.4	30.0/34.6	49/54	60/60
	CC20C	14.4/19.2	40.0/46.2	60/68	60/70
	CC30C	21.6/28.8	60.0/69.3	85/97	90/100
	CC40C	28.8/38.4	80.1/92.4	111/126	125/150
B102CM/ C102CM	NONE	—	—	54/54	60/60
	CC10C	7.2/9.6	20.0/23.1	54/54	60/60
	CC15C	10.8/14.4	30.0/34.6	54/60	60/60
	CC20C	14.4/19.2	40.0/46.2	67/74	70/80
	CC30C	21.6/28.8	60.0/69.3	92/103	100/110
	CC40C	28.8/38.4	80.1/92.4	117/132	125/150

HEATER KIT CHARACTERISTICS (continued)

TABLE C

AUXILIARY HEATER KITS CHARACTERISTICS AND APPLICATION (RLNL MODELS)

208/240V – 3 PHASE

UNIT MODEL NUMBER RLNL-	HEATER KIT MODEL NO. RXJJ-	HEATER kW @ 208/240 V	HEATER KIT FLA	UNIT MIN. CKT. AMPACITY	MAX. FUSE OR CKT. BKR. SIZE (CKT. BKR. MUST BE HACR TYPE FOR USA)
B120CL/ C120CL	NONE	—	—	49/49	60/60
	CC10C	7.2/9.6	20.0/23.1	49/49	60/60
	CC15C	10.8/14.4	30.0/34.6	49/54	60/60
	CC20C	14.4/19.2	40.0/46.2	60/68	60/70
	CC30C	21.6/28.8	60.0/69.3	85/97	90/100
	CC40C	28.8/38.4	80.1/92.4	111/126	125/150
	CC50C	36.1/48.0	100.1/115.5	136/155	150/175
B120CM/ C120CM	NONE	—	—	54/54	60/60
	CC10C	7.2/9.6	20.0/23.1	54/54	60/60
	CC15C	10.8/14.4	30.0/34.6	54/60	60/60
	CC20C	14.4/19.2	40.0/46.2	67/74	70/80
	CC30C	21.6/28.8	60.0/69.3	92/103	100/110
	CC40C	28.8/38.4	80.1/92.4	117/132	125/150
	CC50C	36.1/48.0	100.1/115.5	142/161	150/175
B150CL/ C150CL	NONE	—	—	67/67	80/80
	CC10C	7.2/9.6	20.0/23.1	67/67	80/80
	CC15C	10.8/14.4	30.0/34.6	67/67	80/80
	CC20C	14.4/19.2	40.0/46.2	69/77	80/80
	CC30C	21.6/28.8	60.0/69.3	94/106	100/110
	CC40C	28.8/38.4	80.1/92.4	119/135	125/150
	CC50C	36.1/48.0	100.1/115.5	144/164	150/175
B150CM/ C150CM	NONE	—	—	71/71	90/90
	CC10C	7.2/9.6	20.0/23.1	71/71	90/90
	CC15C	10.8/14.4	30.0/34.6	71/71	90/90
	CC20C	14.4/19.2	40.0/46.2	74/82	90/90
	CC30C	21.6/28.8	60.0/69.3	99/111	100/125
	CC40C	28.8/38.4	80.1/92.4	124/139	125/150
	CC50C	36.1/48.0	100.1/115.5	149/168	150/175

HEATER KIT CHARACTERISTICS (continued)

TABLE D

AUXILIARY HEATER KITS CHARACTERISTICS AND APPLICATION (RLNL MODELS)

480V – 3 PHASE

UNIT MODEL NUMBER RLNL-	HEATER KIT MODEL NO. RXJJ-	HEATER kW @ 480 V	HEATER KIT FLA	UNIT MIN. CKT. AMPACITY	MAX. FUSE OR CKT. BKR. SIZE (CKT. BKR. MUST BE HACR TYPE FOR USA)
B072DL/ C072DL	NONE	—	—	18	25
	CC10D	9.6	11.5	18	25
	CC15D	14.4	17.3	26	30
	CC20D	19.2	23.1	33	35
	CC30D	28.8	34.6	47	50
B072DM/ C072DM	NONE	—	—	18	25
	CC10D	9.6	11.5	18	25
	CC15D	14.4	17.3	26	30
	CC20D	19.2	23.1	33	35
	CC30D	28.8	34.6	47	50
B085DL/ C085DL	NONE	—	—	21	30
	CC10D	9.6	11.5	21	30
	CC15D	14.4	17.3	27	30
	CC20D	19.2	23.1	34	35
	CC30D	28.8	34.6	49	50
	CC40D	38.4	46.2	63	70
B085DM/ C085DM	NONE	—	—	21	30
	CC10D	9.6	11.5	21	30
	CC15D	14.4	17.3	27	30
	CC20D	19.2	23.1	34	35
	CC30D	28.8	34.6	49	50
	CC40D	38.4	46.2	63	70
B085DN/ C085DN	NONE	—	—	24	35
	CC10D	9.6	11.5	24	35
	CC15D	14.4	17.3	34	35
	CC20D	19.2	23.1	45	45
	CC30D	28.8	34.6	57	60
	CC40D	38.4	46.2	68	70

HEATER KIT CHARACTERISTICS (continued)

TABLE E

AUXILIARY HEATER KITS CHARACTERISTICS AND APPLICATION (RLNL MODELS)

480V – 3 PHASE

UNIT MODEL NUMBER RLNL-	HEATER KIT MODEL NO. RXJJ-	HEATER kW @ 480 V	HEATER KIT FLA	UNIT MIN. CKT. AMPACITY	MAX. FUSE OR CKT. BKR. SIZE (CKT. BKR. MUST BE HACR TYPE FOR USA)
B090DL/ C090DL	NONE	—	—	21	25
	CC10D	9.6	11.5	21	25
	CC15D	14.4	17.3	27	30
	CC20D	19.2	23.1	34	35
	CC30D	28.8	34.6	49	50
	CC40D	38.4	46.2	63	70
B090DM/ C090DM	NONE	—	—	21	25
	CC10D	9.6	11.5	21	25
	CC15D	14.4	17.3	27	30
	CC20D	19.2	23.1	34	35
	CC30D	28.8	34.6	49	50
	CC40D	38.4	46.2	63	70
B090DN/ C090DN	NONE	—	—	24	30
	CC10D	9.6	11.5	24	30
	CC15D	14.4	17.3	31	35
	CC20D	19.2	23.1	38	40
	CC30D	28.8	34.6	52	60
	CC40D	38.4	46.2	67	70
B102DL/ C102DL	NONE	—	—	23	25
	CC10D	9.6	11.5	23	25
	CC15D	14.4	17.3	27	30
	CC20D	19.2	23.1	34	35
	CC30D	28.8	34.6	49	50
	CC40D	38.4	46.2	63	70
B102DM/ C102DM	NONE	—	—	26	30
	CC10C	9.6	11.5	26	30
	CC15D	14.4	17.3	31	35
	CC20D	19.2	23.1	38	40
	CC30D	28.8	34.6	52	60
	CC40D	38.4	46.2	67	70

HEATER KIT CHARACTERISTICS (continued)

TABLE F

AUXILIARY HEATER KITS CHARACTERISTICS AND APPLICATION (RLNL MODELS)

480V – 3 PHASE

UNIT MODEL NUMBER RLNL-	HEATER KIT MODEL NO. RXJJ-	HEATER kW @ 480 V	HEATER KIT FLA	UNIT MIN. CKT. AMPACITY	MAX. FUSE OR CKT. BKR. SIZE (CKT. BKR. MUST BE HACR TYPE FOR USA)
B120DL/ C120DL	NONE	—	—	25	30
	CC10D	9.6	11.5	25	30
	CC15D	14.4	17.3	27	30
	CC20D	19.2	23.1	34	35
	CC30D	28.8	34.6	49	50
	CC40D	38.4	46.2	63	70
	CC50D	48.0	57.7	78	80
B120DM/ C120DM	NONE	—	—	28	35
	CC10D	9.6	11.5	28	35
	CC15D	14.4	17.3	31	35
	CC20D	19.2	23.1	38	40
	CC30D	28.8	34.6	52	60
	CC40D	38.4	46.2	67	70
	CC50D	48.0	57.7	81	90
B150DL/ C150DL	NONE	—	—	33	40
	CC10D	9.6	11.5	33	40
	CC15D	14.4	17.3	33	40
	CC20D	19.2	23.1	38	40
	CC30D	28.8	34.6	52	60
	CC40D	38.4	46.2	67	70
	CC50D	48.0	57.7	81	90
B150DM/ C150DM	NONE	—	—	36	45
	CC10D	9.6	11.5	36	45
	CC15D	14.4	17.3	36	45
	CC20D	19.2	23.1	42	45
	CC30D	28.8	34.6	56	60
	CC40D	38.4	46.2	71	80
	CC50D	48.0	57.7	85	90

HEATER KIT CHARACTERISTICS (continued)

TABLE G

AUXILIARY HEATER KITS CHARACTERISTICS AND APPLICATION (RLNL MODELS) 600V – 3 PHASE

UNIT MODEL NUMBER RLNL-	HEATER KIT MODEL NO. RXJJ-	HEATER kW @ 600 V	HEATER KIT FLA	UNIT MIN. CKT. AMPACITY	MAX. FUSE OR CKT. BKR. SIZE (CKT. BKR. MUST BE HACR TYPE FOR USA)
B072YL/ C072YL	NONE	—	—	14	20
	CC10Y	9.6	9.2	14	20
	CC15Y	14.4	13.9	20	20
	CC20Y	19.2	18.5	26	30
	CC30Y	28.8	27.7	37	40
B072YM/ C072YM	NONE	—	—	14	20
	CC10Y	9.6	9.2	14	20
	CC15Y	14.4	13.9	20	20
	CC20Y	19.2	18.5	26	30
	CC30Y	28.8	27.7	37	40
B085YL/ C085YL	NONE	—	—	16	20
	CC10Y	9.6	9.2	17	20
	CC15Y	14.4	13.9	23	25
	CC20Y	19.2	18.5	29	30
	CC30Y	28.8	27.7	40	40
	CC40Y	38.4	37.0	52	60
B085YM/ C085YM	NONE	—	—	16	20
	CC10Y	9.6	9.2	17	20
	CC15Y	14.4	13.9	23	25
	CC20Y	19.2	18.5	29	30
	CC30Y	28.8	27.7	40	40
	CC40Y	38.4	37.0	52	60
B085YN/ C085YN	NONE	—	—	20	25
	CC10Y	9.6	9.2	22	25
	CC15Y	14.4	13.9	28	30
	CC20Y	19.2	18.5	34	35
	CC30Y	28.8	27.7	45	45
	CC40Y	38.4	37.0	57	60

HEATER KIT CHARACTERISTICS (continued)

TABLE H

AUXILIARY HEATER KITS CHARACTERISTICS AND APPLICATION (RLNL MODELS)

600V – 3 PHASE

UNIT MODEL NUMBER RLNL-	HEATER KIT MODEL NO. RXJJ-	HEATER kW @ 600 V	HEATER KIT FLA	UNIT MIN. CKT. AMPACITY	MAX. FUSE OR CKT. BKR. SIZE (CKT. BKR. MUST BE HACR TYPE FOR USA)
B090YL/ C090YL	NONE	—	—	16	20
	CC10Y	9.6	9.2	17	20
	CC15Y	14.4	13.9	23	25
	CC20Y	19.2	18.5	29	30
	CC30Y	28.8	27.7	40	40
	CC40Y	38.4	37.0	52	60
B090YM/ C090YM	NONE	—	—	16	20
	CC10Y	9.6	9.2	17	20
	CC15Y	14.4	13.9	23	25
	CC20Y	19.2	18.5	29	30
	CC30Y	28.8	27.7	40	40
	CC40Y	38.4	37.0	52	60
B090YN/ C090YN	NONE	—	—	21	25
	CC10Y	9.6	9.2	22	25
	CC15Y	14.4	13.9	28	30
	CC20Y	19.2	18.5	34	35
	CC30Y	28.8	27.7	45	45
	CC40Y	38.4	37.0	57	60
B102YL/ C102YL	NONE	—	—	19	20
	CC10Y	9.6	9.2	19	20
	CC15Y	14.4	13.9	23	25
	CC20Y	19.2	18.5	29	30
	CC30Y	28.8	27.7	40	40
	CC40Y	38.4	37.0	52	60
B102YM/ C102YM	NONE	—	—	24	30
	CC10Y	9.6	9.2	24	25
	CC15Y	14.4	13.9	28	30
	CC20Y	19.2	18.5	34	35
	CC30Y	28.8	27.7	45	45
	CC40Y	38.4	37.0	57	60

HEATER KIT CHARACTERISTICS (continued)

TABLE I

AUXILIARY HEATER KITS CHARACTERISTICS AND APPLICATION (RLNL MODELS)

600V – 3 PHASE

UNIT MODEL NUMBER RLNL-	HEATER KIT MODEL NO. RXJJ-	HEATER kW @ 600 V	HEATER KIT FLA	UNIT MIN. CKT. AMPACITY	MAX. FUSE OR CKT. BKR. SIZE (CKT. BKR. MUST BE HACR TYPE FOR USA)
B120YL/ C120YL	NONE	—	—	19	20
	CC10Y	9.6	9.2	19	20
	CC15Y	14.4	13.9	23	25
	CC20Y	19.2	18.5	29	30
	CC30Y	28.8	27.7	40	40
	CC40Y	38.4	37.0	52	60
	CC50Y	48.0	46.2	63	70
B120YM/ C120YM	NONE	—	—	24	30
	CC10Y	9.6	9.2	24	30
	CC15Y	14.4	13.9	28	30
	CC20Y	19.2	18.5	34	35
	CC30Y	28.8	27.7	45	45
	CC40Y	38.4	37.0	57	60
	CC50Y	48.0	46.2	68	70
B150YL/ C150YL	NONE	—	—	28	35
	CC10Y	9.6	9.2	28	35
	CC15Y	14.4	13.9	28	35
	CC20Y	19.2	18.5	34	35
	CC30Y	28.8	27.7	45	45
	CC40Y	38.4	37.0	57	60
	CC50Y	48.0	46.2	68	70
B150YM/ C150YM	NONE	—	—	28	35
	CC10Y	9.6	9.2	28	35
	CC15Y	14.4	13.9	28	35
	CC20Y	19.2	18.5	34	35
	CC30Y	28.8	27.7	45	45
	CC40Y	38.4	37.0	57	60
	CC50Y	48.0	46.2	68	70


XX. TROUBLE SHOOTING CHART



WARNING

DISCONNECT ALL POWER TO UNIT BEFORE SERVICING. CONTACTOR MAY BREAK ONLY ONE SIDE. FAILURE TO SHUT OFF POWER CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

SYMPTOM	POSSIBLE CAUSE	REMEDY
Unit will not run	- Power off or loose electrical connection - Thermostat out of calibration-set too high - Defective contactor - Blown fuses - Transformer defective - High pressure control open (if provided) - Interconnecting low voltage wiring damaged	- Check for correct voltage at compressor contactor in control box - Reset - Check for 24 volts at contactor coil - replace if contacts are open - Replace fuses - Check wiring-replace transformer - Reset-also see high head pressure remedy- - Replace thermostat wiring
Condenser fan runs, compressor doesn't	- Run capacitor defective (single phase only) - Loose connection - Compressor stuck, grounded or open motor winding open internal overload. - Low voltage condition	- Replace - Check for correct voltage at compressor - check & tighten all connections - Wait at least 2 hours for overload to reset. If still open, replace the compressor. At compressor terminals, voltage must be within 10% of rating plate volts when unit is operating.
Insufficient cooling	- Improperly sized unit - Improper airflow - Incorrect refrigerant charge - Air, non-condensibles or moisture in system - Incorrect voltage	- Recalculate load - Check - should be approximately 400 CFM [188.78 L/s] per ton. - Charge per procedure attached to unit service panel. - Recover refrigerant, evacuate & recharge, add filter drier - At compressor terminals, voltage must be within 10% of rating plate volts when unit is operating.
Compressor short cycles	- Incorrect voltage - Defective overload protector - Refrigerant undercharge	- At compressor terminals, voltage must be $\pm 10\%$ of nameplate marking when unit is operating. - Replace - check for correct voltage - Add refrigerant
Registers sweat	Low evaporator airflow	Increase speed of blower or reduce restriction - replace air filter
High head-low vapor pressures	- Restriction in liquid line, expansion device or filter drier - Flow check piston size too small - Incorrect capillary tubes - TXV does not open	- Remove or replace defective component - Change to correct size piston - Change coil assembly - Replace TXV
High head-high or normal vapor pressure - Cooling mode	- Dirty condenser coil - Refrigerant overcharge - Condenser fan not running - Air or non-condensibles in system	- Clean coil - Correct system charge - Repair or replace - Recover refrigerant, evacuate & recharge
High head-high or normal vapor pressure - Heating mode	- Low air flow - condenser coil - Refrigerant overcharge - Air or non-condensibles in system - Dirty condenser coil	- Check filters - correct to speed - Correct system charge - Recover refrigerant, evacuate & recharge - Check filter - clean coil
Low head-high vapor pressures	Defective Compressor valves	Replace compressor
Low vapor - cool compressor - iced evaporator coil	- Low evaporator airflow - Operating below 65°F outdoors - Moisture in system - TXV limiting refrigerant flow	- Increase speed of blower or reduce restriction - replace air filter - Add Low Ambient Kit - Recover refrigerant - evacuate & recharge - add filter drier - Replace TXV
High vapor pressure	- Excessive load - Defective compressor	- Recheck load calculation - Replace
Fluctuating head & vapor pressures	- TXV hunting - Air or non-condensibles in system	- Check TXV bulb clamp - check air distribution on coil - replace TXV - Recover refrigerant, evacuate & recharge
Gurgle or pulsing noise at expansion device or liquid line	Air or non-condensibles in system	Recover refrigerant, evacuate & recharge

XXI. WIRING DIAGRAMS

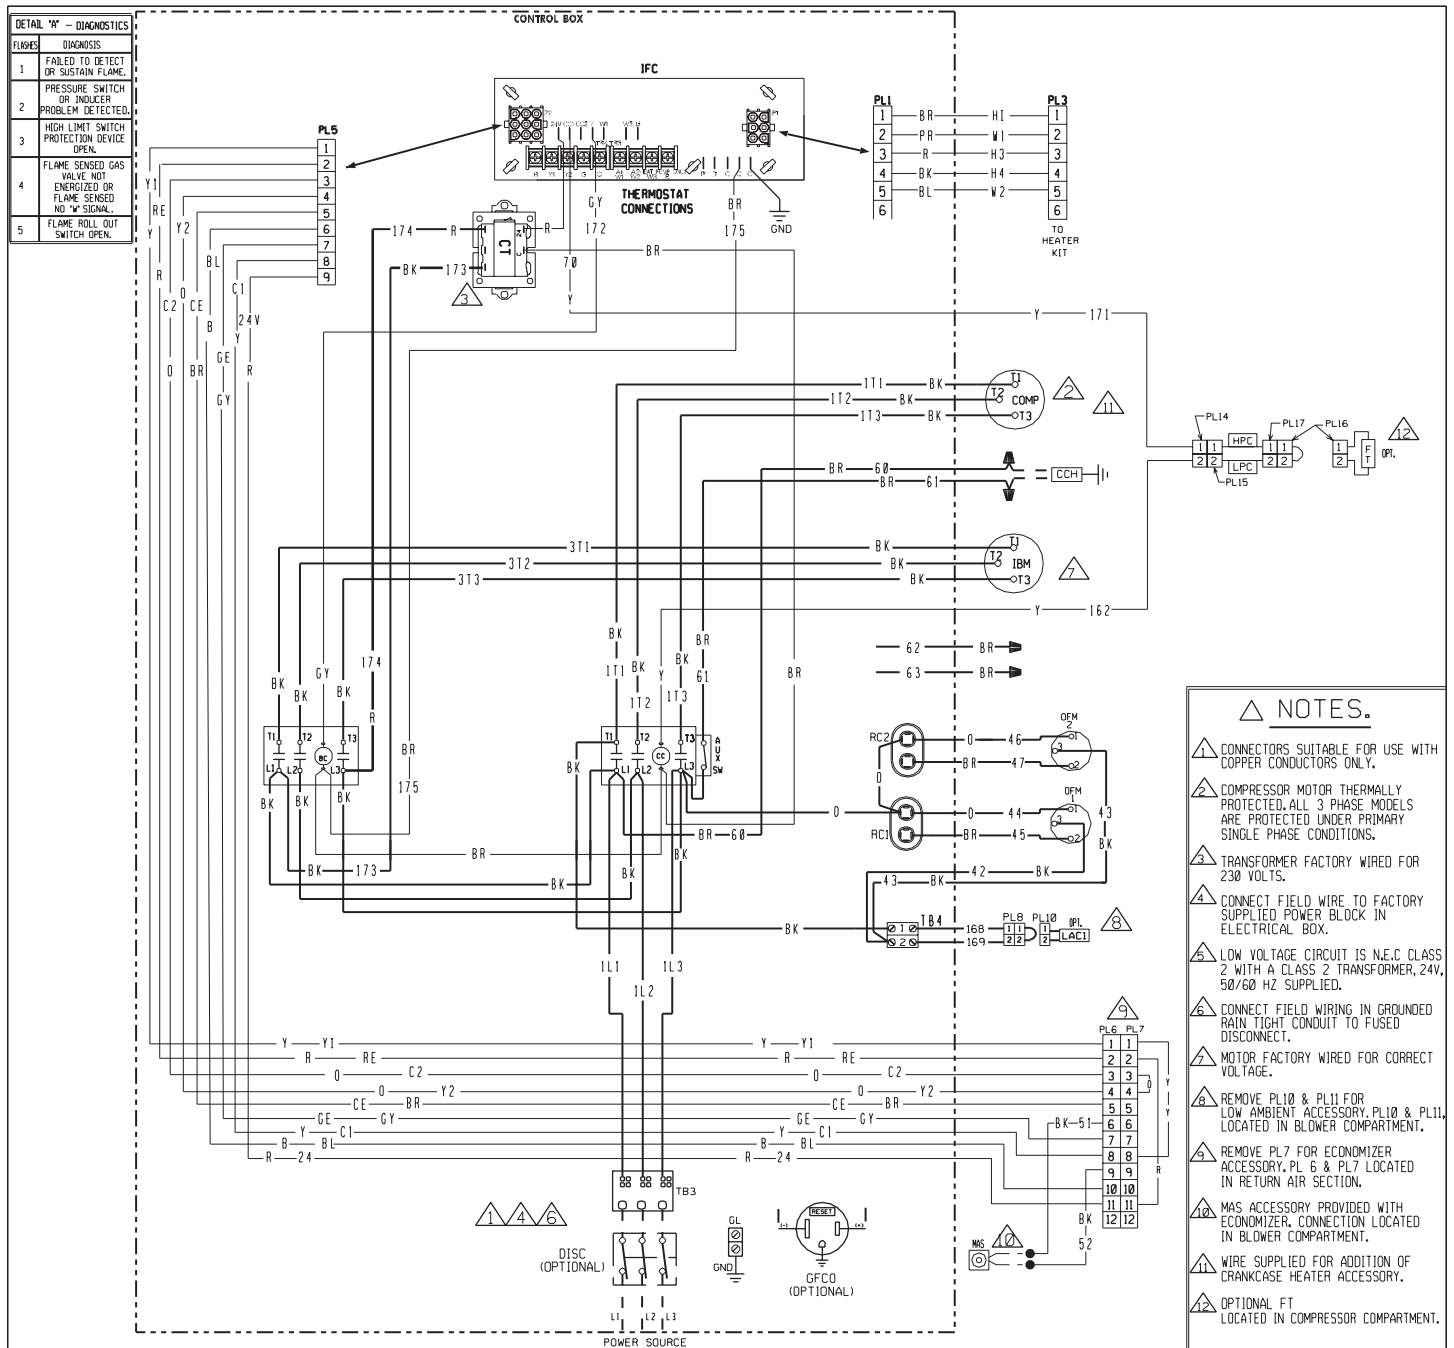

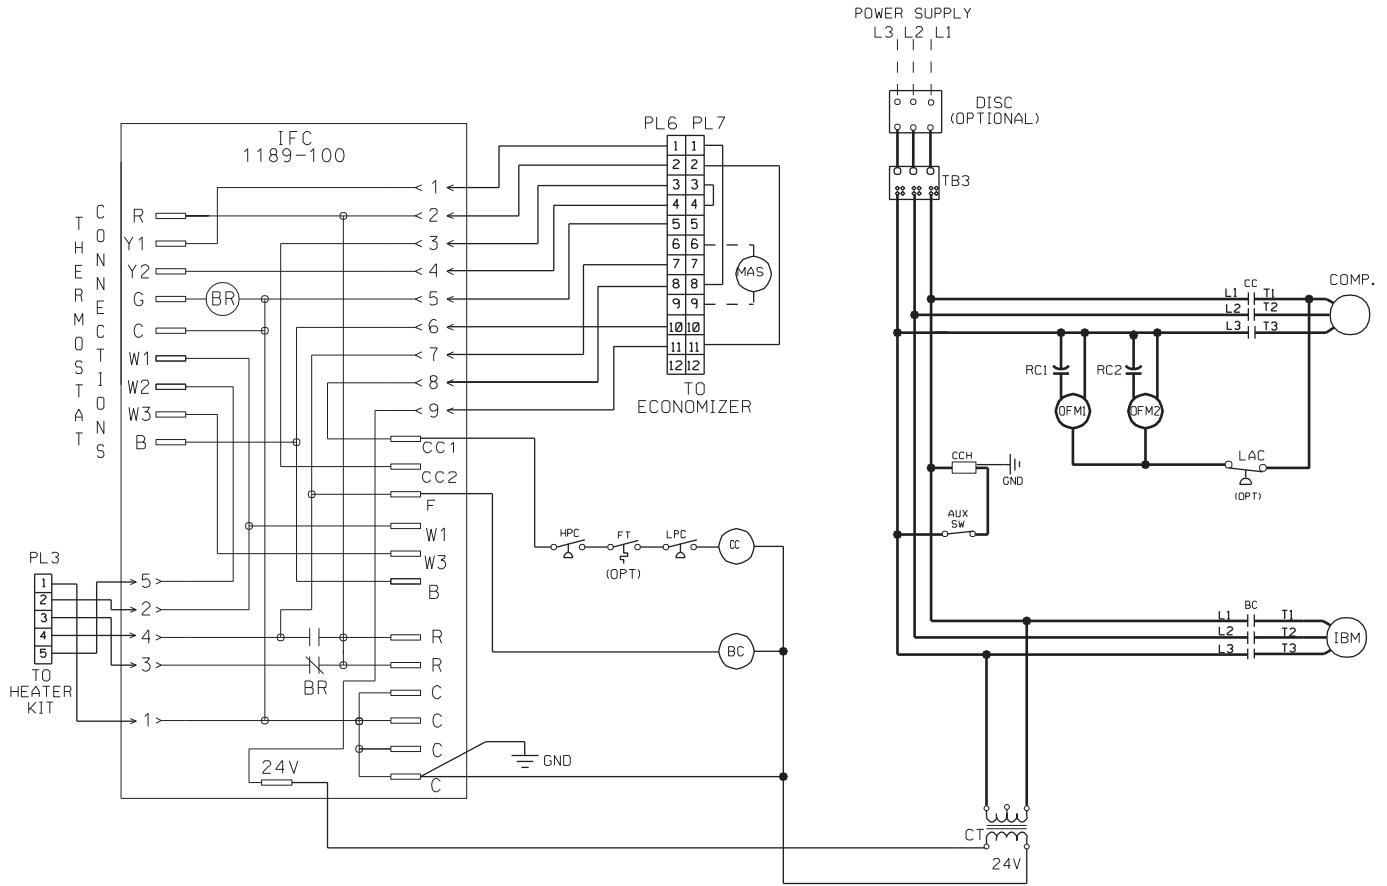

COMPONENT CODE

AUX SW	AUXILIARY SWITCH	MAS	MIXED AIR SENSOR
BC	BLOWER MOTOR CONTACTOR	OFM	OUTDOOR FAN MOTOR
BR	BLOWER RELAY	OPT	OPTIONAL
CC	COMPRESSOR CONTACTOR	PL	PLUG
CCH	CRANKCASE HEATER	RC	RUN CAPACITOR
COMP	COMPRESSOR	TB	TERMINAL BLOCK
CT	CONTROL TRANSFORMER		
FT	FREEZE STAT		
GL	GROUND LUG		
GND	GROUND		
HPC	HIGH PRESSURE CONTROL		
IBM	INDOOR BLOWER MOTOR		
IFC	INTEGRATED FURNACE CONTROL		
LAC	LOW AMBIENT CONTROL		
LPC	LOW PRESSURE CONTROL		

WIRING INFORMATION

LINE VOLTAGE
 -FACTORY STANDARD
 -FACTORY OPTION
 -FIELD INSTALLED

LOW VOLTAGE
 -FACTORY STANDARD
 -FACTORY OPTION
 -FIELD INSTALLED

REPLACEMENT WIRE
 -MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105° C MIN.)

WARNING
 -CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., AND LOCAL CODES AS APPLICABLE.


WIRE COLOR CODE


BK	BLACK	O	ORANGE
BR	BROWN	PR	PURPLE
BL	BLUE	R	RED
G	GREEN	W	WHITE
GY	GRAY	Y	YELLOW


WIRING SCHEMATIC

RLNL-B072/085
 PACKAGED A/C
 208-230, 3PH, 60HZ./460, 3PH, 60HZ.
 575V, 3PH, 60HZ.


DR. BY	APP. BY	DATE	DWG. NO.	REV
MGR		5-22-08	90-102893-02	00

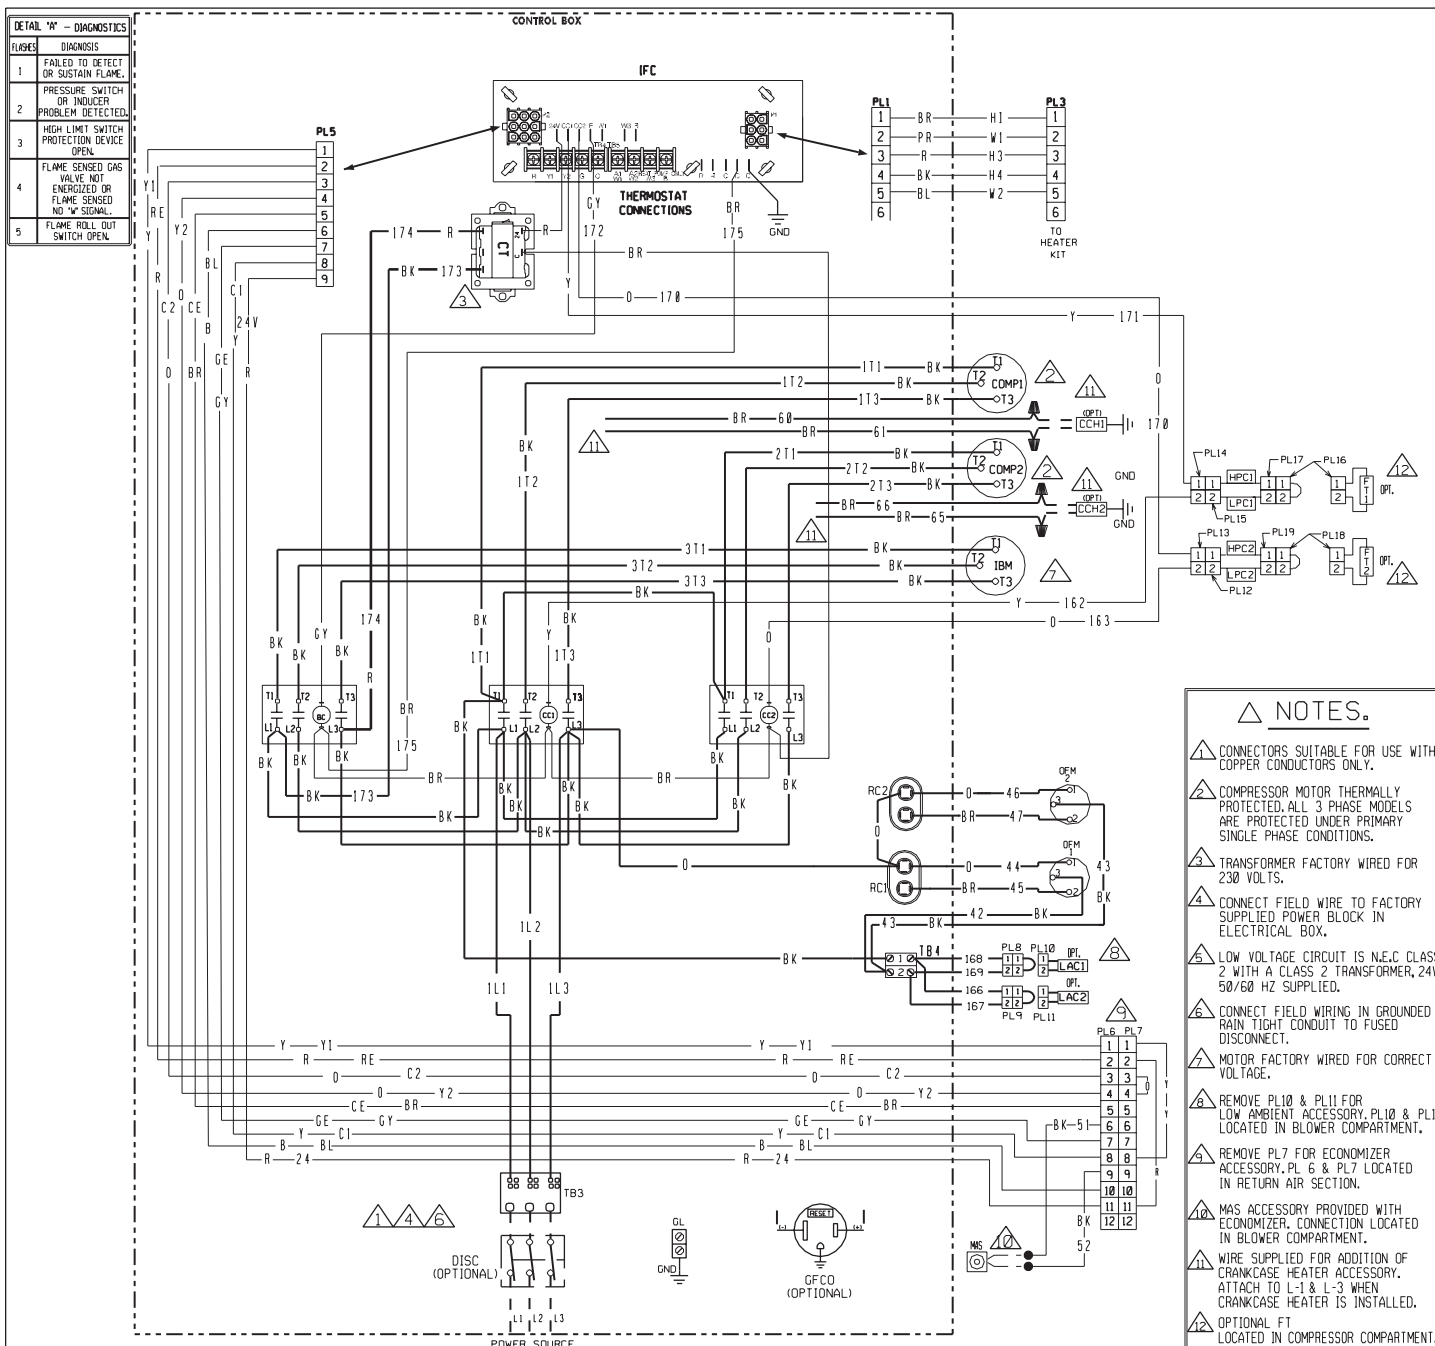

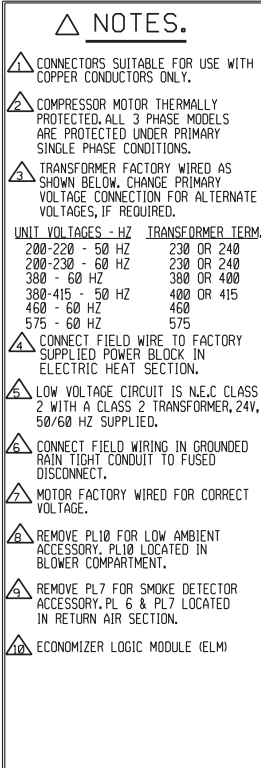49

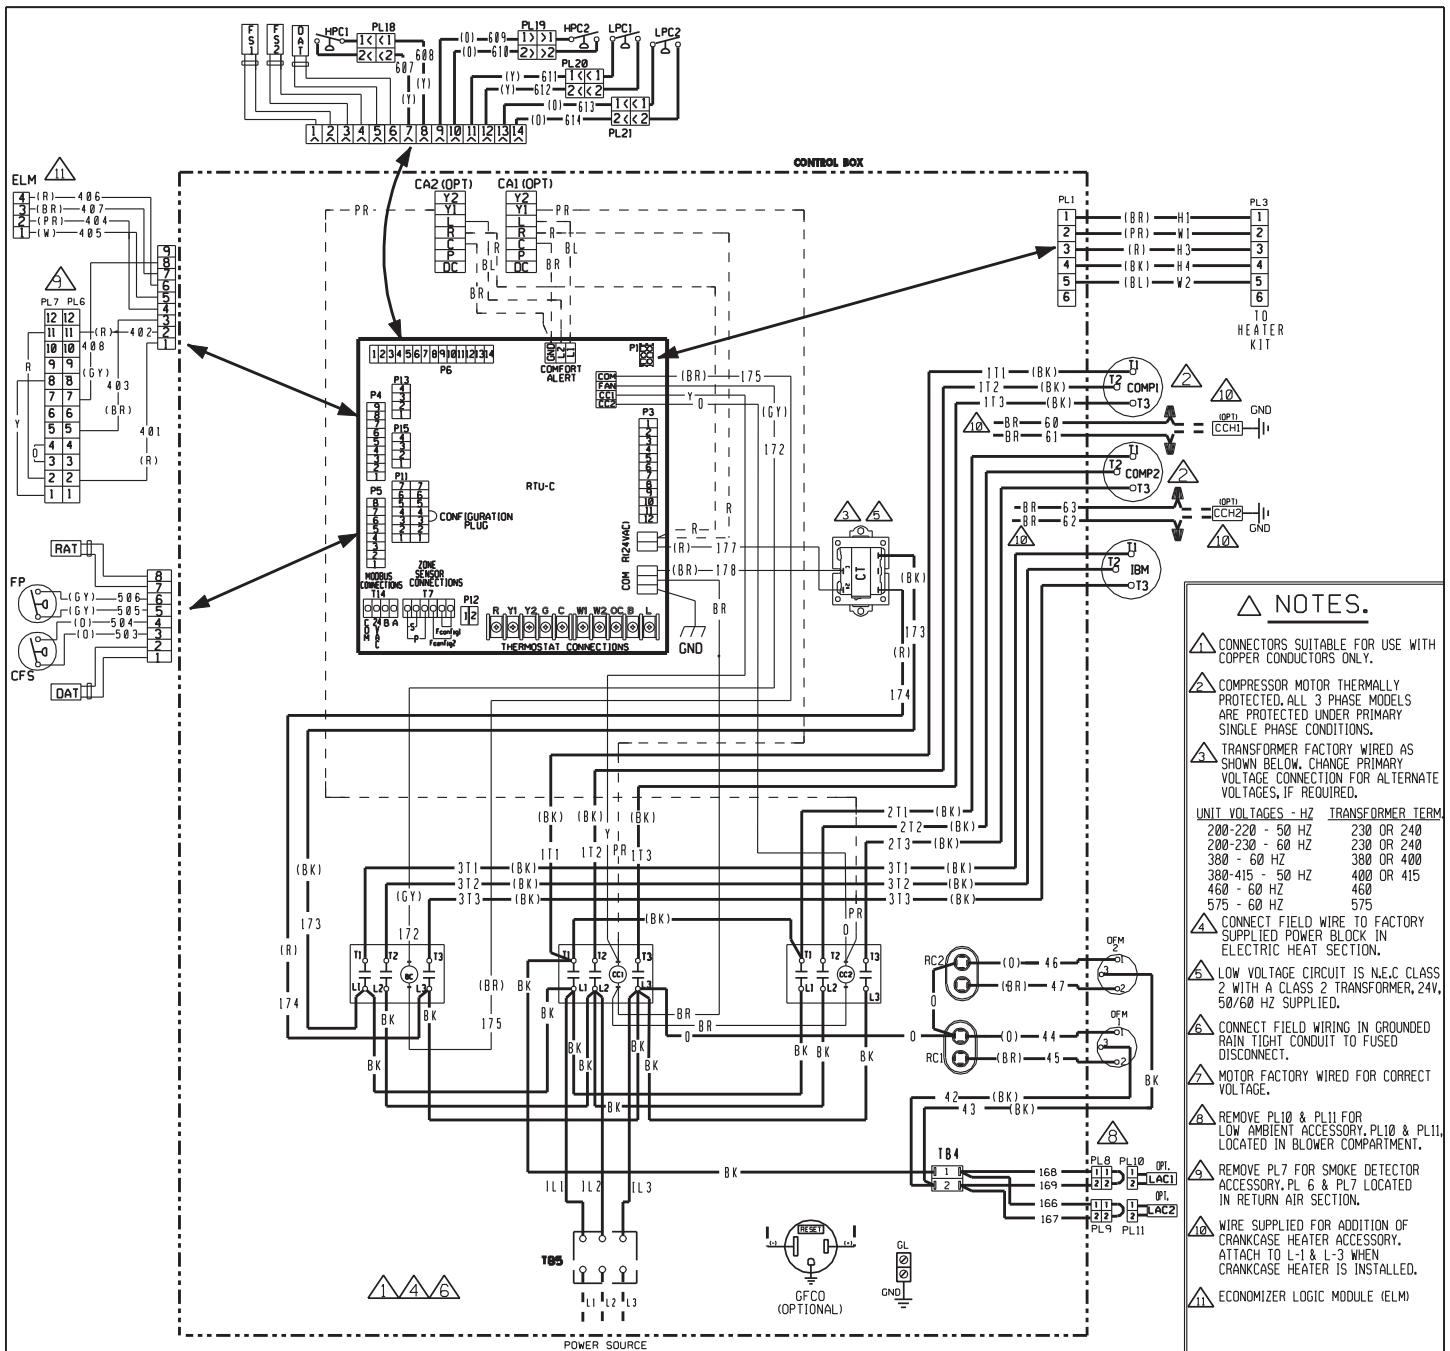

DWG. NO. 90-103089-03	COMPONENT CODE				WIRING INFORMATION				WIRE COLOR CODE			
	BC	BLOWER CONTACTOR	LAC	LOW AMBIENT COOLING CONTROL	LINE VOLTAGE			BK	BLACK	O	ORANGE	
	CA	COMFORT ALERT MODULE	LPC	LOW PRESSURE CONTROL	-FACTORY STANDARD	_____		BR	BROWN	PR	PURPLE	
	CC	COMPRESSOR CONTACTOR	OAT	OUTSIDE AIR SENSOR	-FACTORY OPTION	-. - . - . - .		BL	BLUE	R	RED	
	CH	CRANKCASE HEATER	OFM	OUTDOOR FAN MOTOR	-FIELD INSTALLED	-. - . - . - .		G	GREEN	W	WHITE	
	CFS	CLOGGED FILTER SWITCH	PL	PLUG	LOW VOLTAGE			GY	GRAY	Y	YELLOW	
	COMP	COMPRESSOR	RAT	RETURN AIR SENSOR	-FACTORY STANDARD	_____						
	CT	CONTROL TRANSFORMER	RC	RUN CAPACITOR	-FACTORY OPTION	-. - . - . - .						
	DAT	DISCHARGE AIR SENSOR	RTU-C	ROOFTOP UNIT CONTROL	-FIELD INSTALLED	-. - . - . - .						
	DISC	DISCONNECT SWITCH	TB	TERMINAL BLOCK	REPLACEMENT WIRE							
FP	FAN PROVING		WIRE NUT	-MUST BE THE SAME SIZE AND TYPE OF								
FS	FREEZE SENSOR			INSULATION AS ORIGINAL (105° C MIN.)								
GFCD	GROUND FAULT CONVENIENCE OUTLET			WARNING								
GL	GROUND LUG			-CABINET MUST BE PERMANENTLY								
GND	GROUND			GROUNDING AND CONFORM TO I.E.C., N.E.C.,								
HPC	HIGH PRESSURE CONTROL			C.E.C., AND LOCAL CODES AS APPLICABLE.								
IBM	INDOOR BLOWER MOTOR BELT DRIVE											
REV 02					WIRING DIAGRAM				DR. BY			
					RLNL-C090/102/120/150				MGR			
					208-230/460/575V 3 PH, 60 HZ.				APP. BY			
					PACKAGED A/C W/RTU-C				DATE			
									4-15-09			
									DWG. NO.			
									90-103089-03			
									REV			
									02			

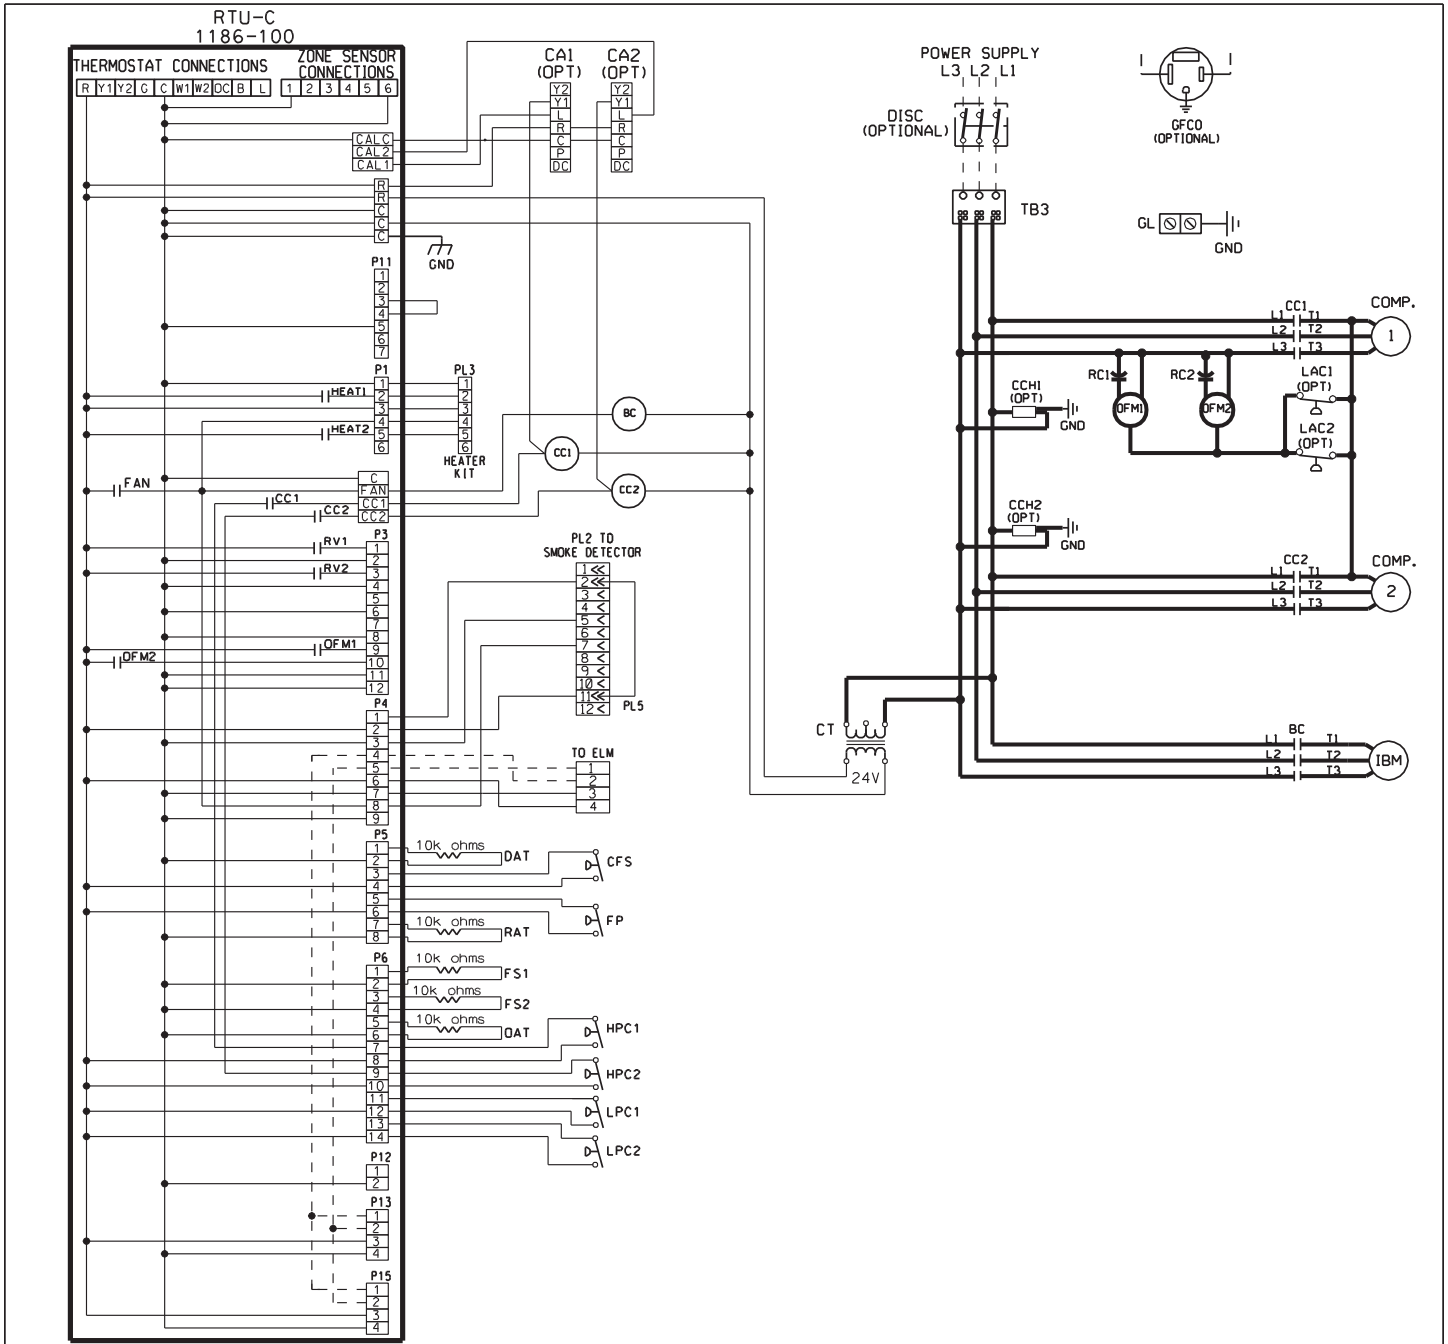

COMPONENT CODE		WIRING INFORMATION		WIRE COLOR CODE	
BC	BLOWER CONTACTOR	IFC	INTEGRATED FURNACE CONTROL	BK	BLACK
CA	COMFORT ALERT MODULE	LAC	LOW AMBIENT COOLING CONTROL	BR	BROWN
CC	COMPRESSOR CONTACTOR	LC	LIMIT CONTROL	BL	BLUE
CCH	CRANKCASE HEATER	LPC	LOW PRESSURE CONTROL	G	GREEN
CFS	CLOGGED FILTER SWITCH	MAS	MIX AIR SENSOR	GY	GRAY
COMP	COMPRESSOR	OAT	OUTSIDE AIR SENSOR	O	ORANGE
CT	CONTROL TRANSFORMER	OFM	OUTDOOR FAN MOTOR	PR	PURPLE
DISC	DISCONNECT SWITCH	PL	PLUG	R	RED
FP	FAN PROVING	RAT	RETURN AIR SENSOR	W	WHITE
FS	FREEZE SENSOR	RC	RUN CAPACITOR	Y	YELLOW
GFCO	GROUND FAULT CONVENIENCE OUTLET	SCC	SPACE COMFORT CONTROL		
GL	GROUND LUG	SE	SPARK ELECTRODE		
GND	GROUND	TB	TERMINAL BLOCK		
HPC	HIGH PRESSURE CONTROL		WIRE NUT		
IBM	INDOOR BLOWER MOTOR BELT DRIVE				

WIRING INFORMATION		WIRE COLOR CODE	
LINE VOLTAGE			
-FACTORY STANDARD			
-FACTORY OPTION			
-FIELD INSTALLED			
LOW VOLTAGE			
-FACTORY STANDARD			
-FACTORY OPTION			
-FIELD INSTALLED			
REPLACEMENT WIRE			
-MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)			
WARNING			
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., AND LOCAL CODES AS APPLICABLE.			

WIRING SCHEMATIC	
RLNL-C090/102/120/150	
208-230/460/575V 3 PH, 60 HZ.	
PACKAGED A/C	

DR. BY	APP. BY	DATE	DWG. NO.	REV
MGR		7-16-09	90-103246-03	00


XXII. CHARGING CHARTS

RLNL SYSTEM CHARGE CHARTS

FIGURE 16

SYSTEM CHARGE CHART - REFRIGERANT 410A 6 TON, CIRCUIT 1

- CAUTION:** 1. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!
- INSTRUCTIONS:** 1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.
2. MEASURE OUTDOOR AMBIENT TO UNIT.
3. PLACE (X) ON CHART WHERE SUCTION AND LIQUID INTERSECT.
4. IF (X) IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.
5. IF (X) IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

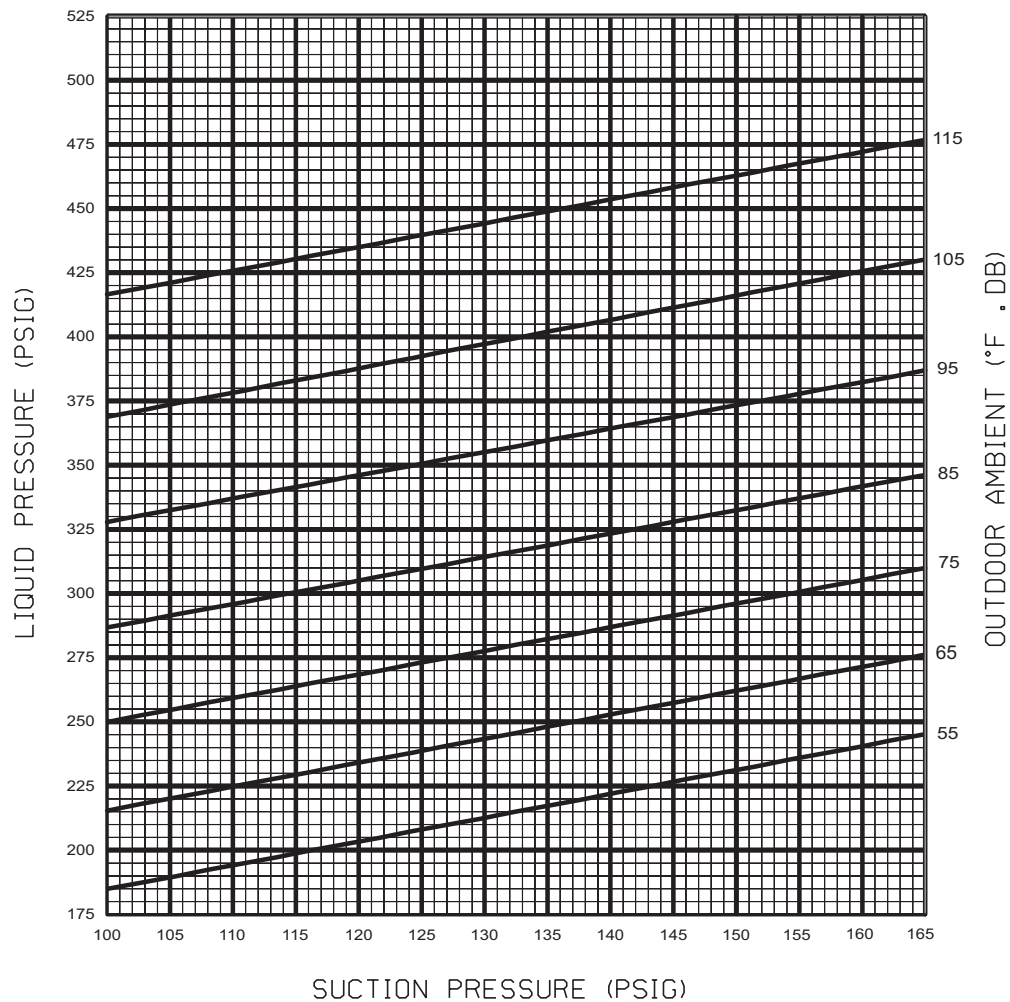

RLNL SYSTEM CHARGE CHARTS

FIGURE 17


SYSTEM CHARGE CHART - REFRIGERANT 410A 7 TON, CIRCUIT 1

CAUTION:

1. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!

INSTRUCTIONS:

1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.
2. MEASURE OUTDOOR AMBIENT TO UNIT.
3. PLACE (X) ON CHART WHERE SUCTION AND LIQUID INTERSECT.
4. IF (X) IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.
5. IF (X) IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

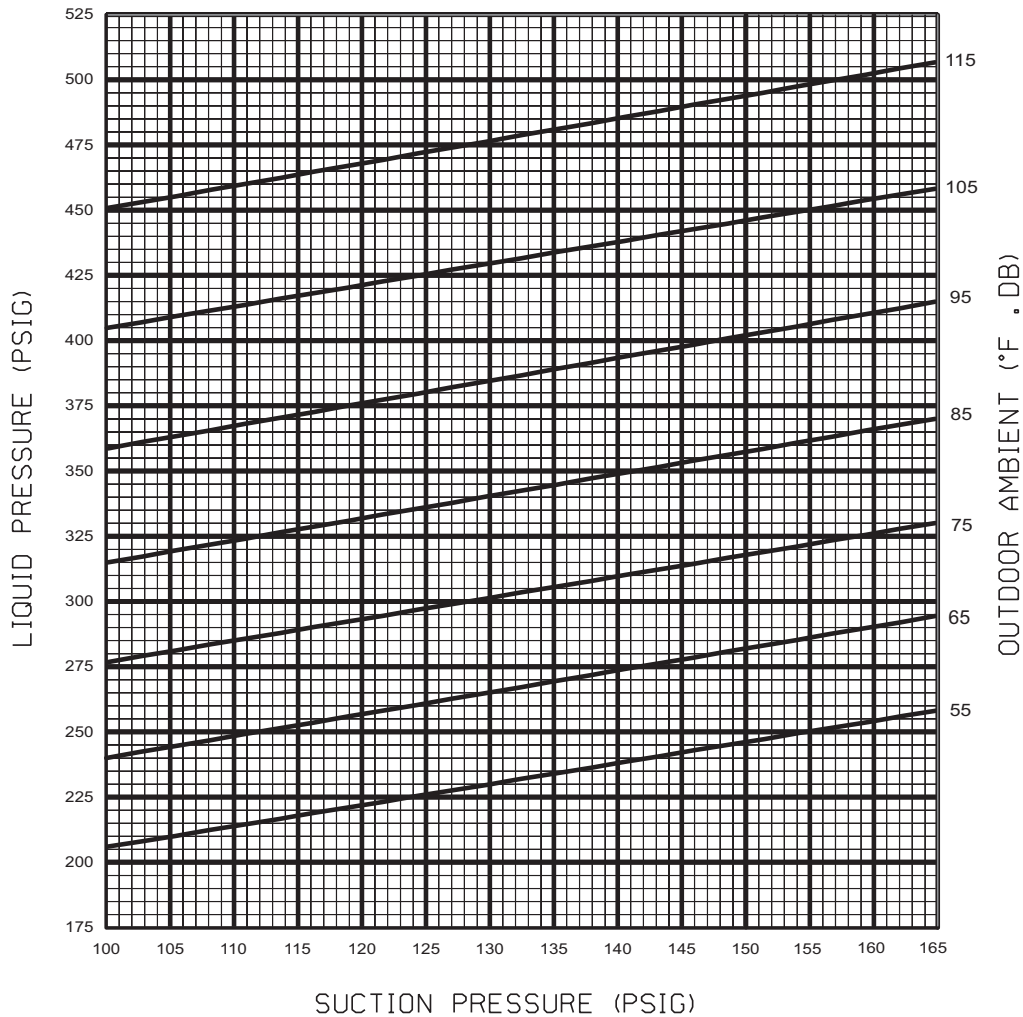

92-102259-07-01

RLNL SYSTEM CHARGE CHARTS

FIGURE 18

SYSTEM CHARGE CHART - REFRIGERANT 410A 7-1/2 TON, CIRCUITS 1 & 2

CAUTION:

1. BOTH COMPRESSORS MUST BE OPERATING BEFORE CHECKING REFRIGERANT CHARGE.

INSTRUCTIONS:

2. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!



1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.

2. MEASURE OUTDOOR AMBIENT TO UNIT.

3. PLACE (X) ON CHART WHERE SUCTION AND LIQUID INTERSECT.

4. IF (X) IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.

5. IF (X) IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

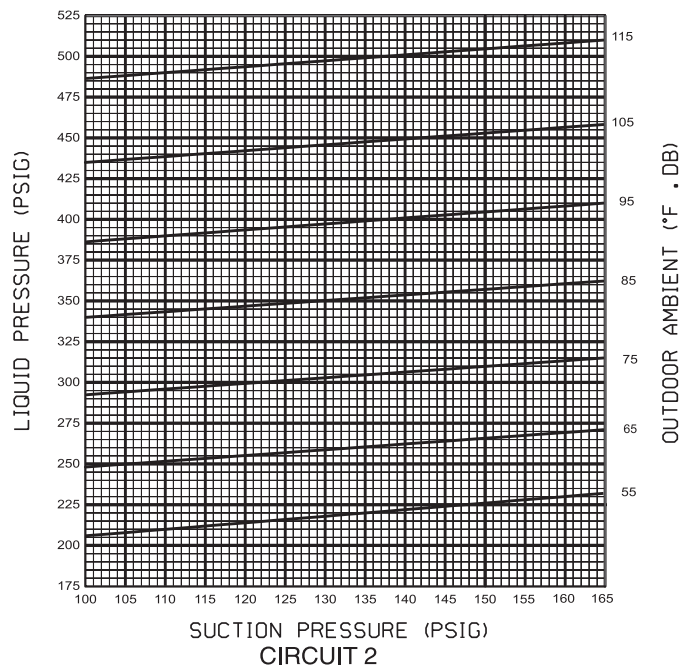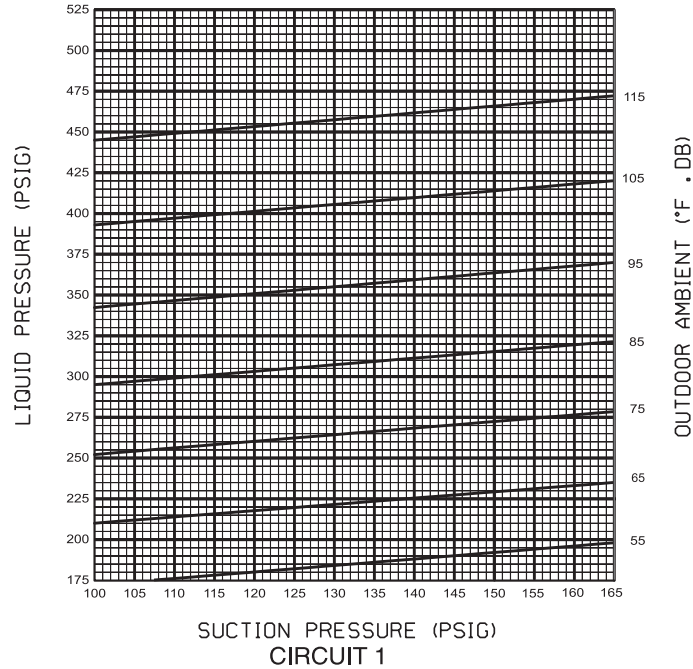

92-102259-08-01

RLNL SYSTEM CHARGE CHARTS

FIGURE 19



SYSTEM CHARGE CHART - REFRIGERANT 410A 8-1/2 TON, CIRCUITS 1 & 2

CAUTION:

1. BOTH COMPRESSORS MUST BE OPERATING BEFORE CHECKING REFRIGERANT CHARGE.
2. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!

INSTRUCTIONS:

1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.
2. MEASURE OUTDOOR AMBIENT TO UNIT.
3. PLACE (X) ON CHART WHERE SUCTION AND LIQUID INTERSECT.
4. IF (X) IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.
5. IF (X) IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

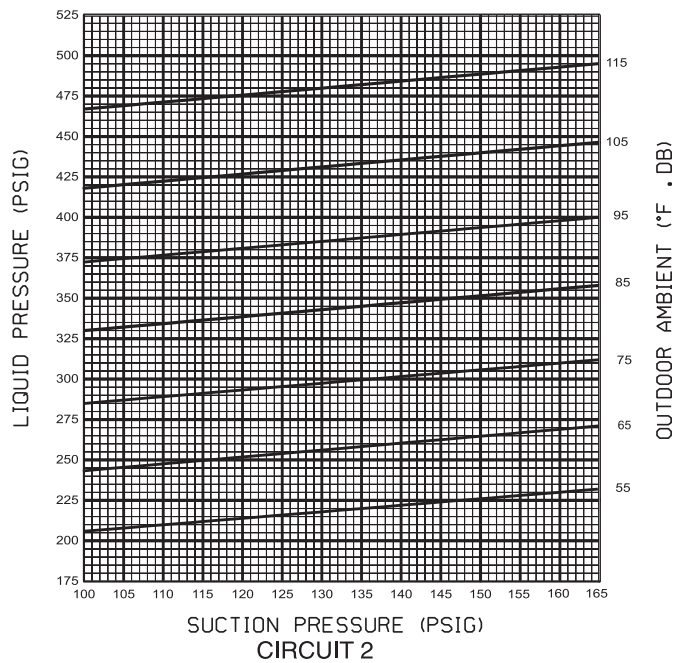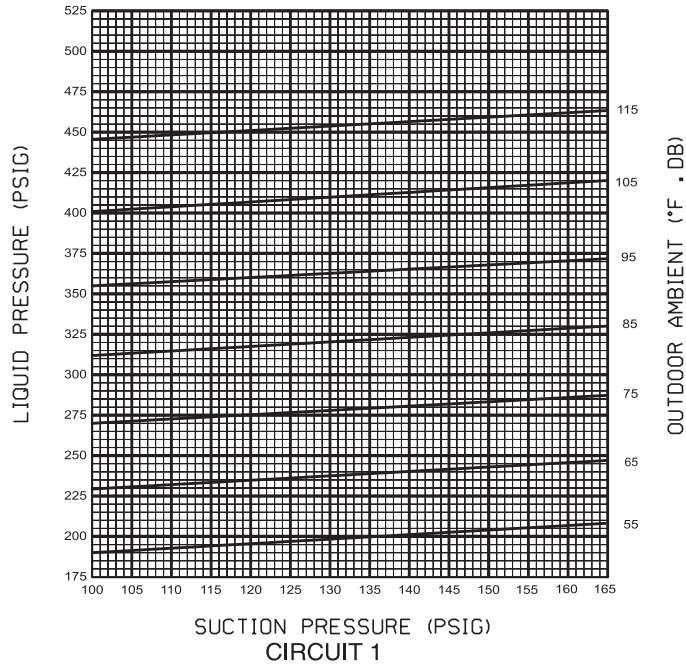

92-102259-09-01

RLNL SYSTEM CHARGE CHARTS

FIGURE 20



SYSTEM CHARGE CHART - REFRIGERANT 410A 10 TON, CIRCUITS 1 & 2

CAUTION:

1. BOTH COMPRESSORS MUST BE OPERATING BEFORE CHECKING REFRIGERANT CHARGE.
2. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!

INSTRUCTIONS:

1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.
2. MEASURE OUTDOOR AMBIENT TO UNIT.
3. PLACE (X) ON CHART WHERE SUCTION AND LIQUID INTERSECT.
4. IF (X) IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.
5. IF (X) IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

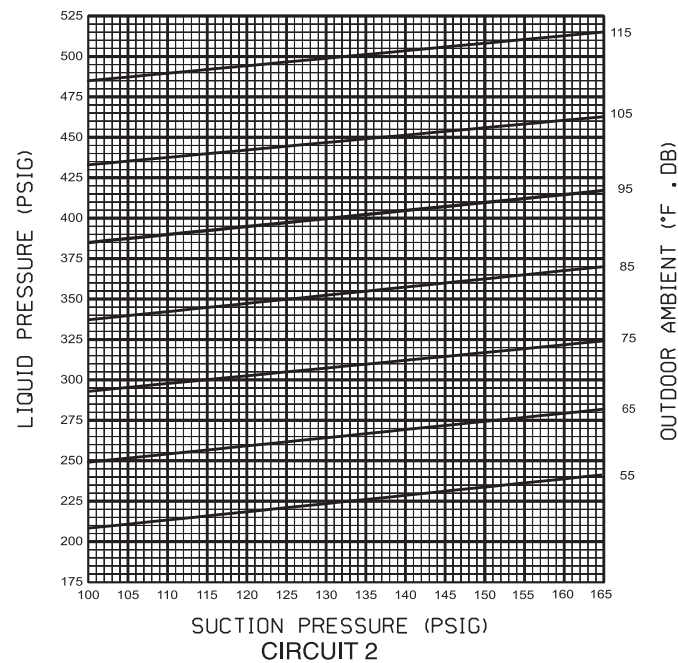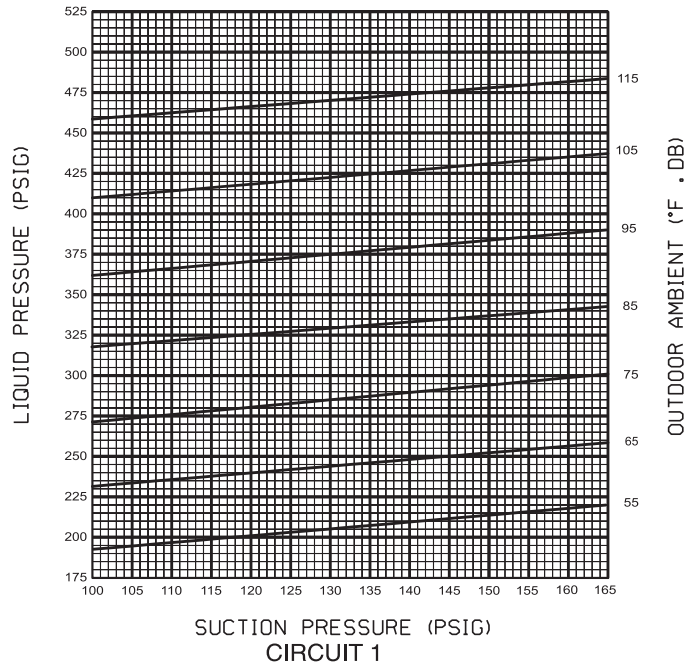

92-102259-10-01

RLNL SYSTEM CHARGE CHARTS

FIGURE 21



SYSTEM CHARGE CHART - REFRIGERANT 410A 12-1/2 TON, CIRCUITS 1 & 2

CAUTION:

1. BOTH COMPRESSORS MUST BE OPERATING BEFORE CHECKING REFRIGERANT CHARGE.
2. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!

INSTRUCTIONS:

1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.
2. MEASURE OUTDOOR AMBIENT TO UNIT.
3. PLACE (X) ON CHART WHERE SUCTION AND LIQUID INTERSECT.
4. IF (X) IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.
5. IF (X) IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

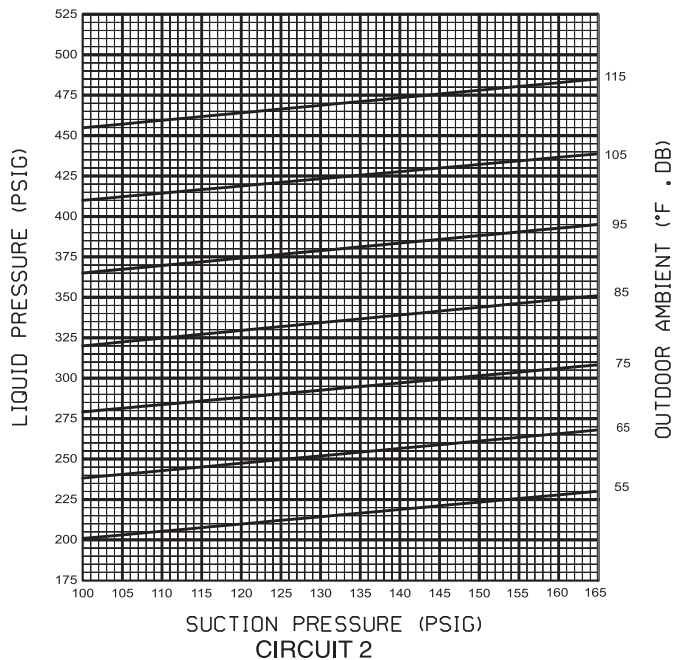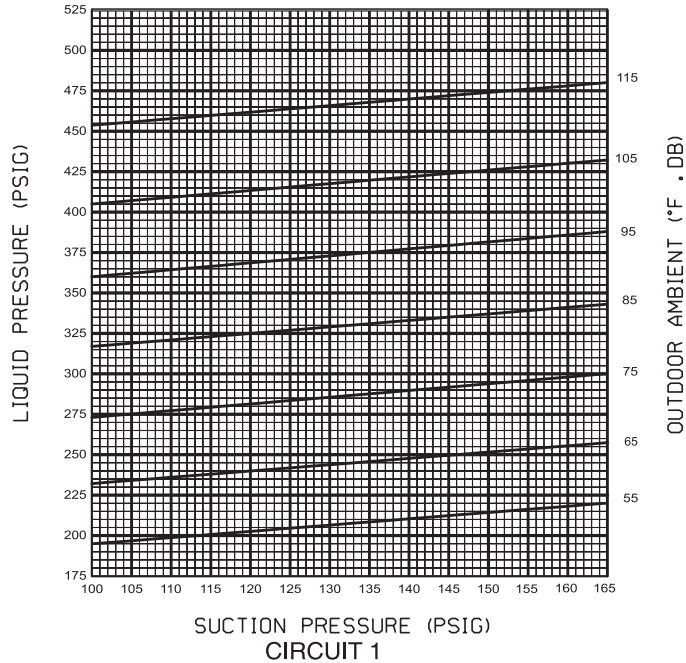

92-102259-11-01

